

Instructiuni rapide

versiune PDF

Coduri centrale

1. Cod master 1111
2. Cod instalator 9999



Armare si dezarmare locala

3. Armare away: se apasa butonul de la telecomanda, sau de la tastatura wireless. Daca armarea rapida nu este setata, inainte de apasarea butonului trebuie introdus codul de utilizator
4. Armare Home: se apasa butonul de la telecomanda, sau de la tastatura wireless. Daca armarea rapida nu este setata, inainte de apasarea butonului trebuie introdus codul de utilizator
5. Dezarmare: se apasa butonul de la telecomanda, sau se introduce codul de utilizator si se apasa acelasi buton daca se foloseste tastatura wireless

Configurare aplicatie mobila

Necesita o telecomanda/tastatura wireless inrolata!

Metoda 1 (telecomanda)	Metoda 2 (tastatura wireless)
<ol style="list-style-type: none">1.Se descarcara aplicatia mobila Pimalink 3.02.Se apasa butoanele de armare si dezarmare in acelasi timp pentru activare asociere si se asteapta 10 secunde3.Se introduce numele sistemului4.Se introduce codul de 9 cifre de pe cutia centralei si pe apasa butonul Pair5.Daca asocierea a avut succes urmatorul pas este setarea „Time Zone”6.Se alege centrala si se introduce codul de acces	<ol style="list-style-type: none">1.Se descarcara aplicatia mobila Pimalink 3.02.Se introduce codul master urmat de tastele * - > 8 -> # pentru a activa asocierea si se asteapta 10 secunde3.Se introduce numele sistemului4.Se introduce codul de 9 cifre de pe cutia centralei si pe apasa butonul Pair5.Daca asocierea a avut succes urmatorul pas este setarea „Time Zone”6.Se alege centrala si se introduce codul de acces

Configurare aplicatie mobila



Programare prin Force Manager

1. Se descarca si se instaleaza softul ForceManager (QR Code sau www.bnt.ro/software)
2. Se creaza un cont nou iar la tipul centralei se selecteaza Vision STD



3. In meniul Setari se introduce codul de instalator si un cod de up/download, urmat de Apply

4. Dupa ce se deschide contul creat se selecteaza butonul Pair si se introduce codul de 9 cifre regasit in partea stanga a centralei. Centrala poate fi imperecheata doar dupa ce este in modul asociere. (vezi configurare aplicatie mobila)

5. Modul de programare se va selecta prin Cloud, iar codul de download este codul instalator 9999. La orice scriere de informatii in centrala codurile o sa fie modificate cu cele introduse la punctul 3. Codul up/down permite accesul la centrala fara permisiunea utilizatorilor.

The screenshot shows the BNT software interface with the 'Cloud' tab selected in the top navigation bar. A 'Cloud' dialog box is open, displaying fields for 'application.pimalink.com' and 'Up/Download code'. Below the dialog, a user profile icon and the date '19.02.21' are shown. To the right, a detailed user profile is listed with fields for Last name, Type, City, Country, Phone 2, Alarm system's pf, Email address 2, User text 2, and Installation date (19.02.21). The left sidebar contains navigation links for Zones, Outputs, Timers, Faults, General, and Communications.

6. Inainte de a introduce codul 9999, din aplicatia mobila trebuie aprobat accesul la centrala. In partea dreapta sus se acceseaza optiunea „Allow access now”, apoi Disconnect.



In acest moment se pot citii si scrie toate informatiile in centrala. In partea dreapta sus se poate observa utilizatorul activ.

The screenshot shows the BNT software interface with the 'Read' button highlighted in the top toolbar. A 'Read' dialog box is open, showing progress at 57% download time (00:00:15 elapsed). The main window displays a table of configuration parameters under the 'Primary Path' tab. The table includes columns for Parameter, Value, Parameter, and Value. Several rows are listed, such as CMS1-PSTN Primary, CMS1-Cellular Voice Primary, CMS2-PSTN Primary, CMS2-Cellular Voice Primary, CMS1-Ethernet Primary, CMS1-Cellular Data Primary, CMS2-Ethernet Primary, CMS2-Cellular Data Primary, CMS1-Ethernet Not Encrypted, CMS1-Cellular Data Not Encrypted, CMS2-Ethernet Not Encrypted, CMS2-Cellular Data Not Encrypted, and CMS2-Cellular Data Not Encrypted. The left sidebar contains navigation links for Account info., Users, Zones, Outputs, Timers, Faults, General, and Communications.

Programare FM



Manual detaliat de instalare

