

SSSS.GG.QXYZCCC K
SSSS = Subscriber ID
Q = Event qualifier
E = 1 Alarm/Open;R = 3 Rest/Close
XYZ = Event code (3 Hex digits)
GG = Group number /partition
CCC = Zone/User (3Hex digits)
MEDICAL ALARMS – 100
100 Medical Alarm
101 Pendant Transmitter
102 Fail to Report In
FIRE ALARMS - 110
110 Fire Alarm
111 Smoke
112 Combustion
113 Waterflow
114 Heat
115 Pull Station
116 Duct
117 Flame
118 Near Alarm
PANIC ALARMS - 120
120 Panic Alarm
121 Duress
122 Silent
123 Audible
BURGLAR ALARMS - 130
130 Burglary
131 Perimeter
132 Interior
133 24-Hour
134 Entry/Exit
135 Day/Night
136 Outdoor
137 Tamper
138 Near Alarm
139 Police code
GENERAL ALARMS - 140
140 General Alarm
141 Polling Loop Open
142 Polling Loop Short
143 Expansion Module Failure
144 Sensor Tamper
145 Expansion Module Tamper

146 System Tamper
24-HOUR NON-BURGLARY - 150 & 160
150 24-Hour Non-Burglary
151 Gas Detected
152 Refrigeration
153 Loss of Heat
154 Water Leakage
155 Foil Break
156 Day Trouble
157 Low Bottled Gas Level
158 High Temp
159 Low Temp
161 Loss of Air Flow
DOORS - 180
180 Door Forced
181 Door Open Too Long
FIRE SUPERVISORY - 200 & 210
200 Fire Supervisory
201 Low Water Pressure
202 Low CO2
203 Gate Valve Sensor
204 Low Water Level
205 Pump Activated
206 Pump Failure
SYSTEM TROUBLES - 300 & 310
300 System Trouble
301 AC Loss
302 Low System Battery
303 RAM Checksum Bad
304 ROM Checksum Bad
305 System Reset
306 Panel Program Changed
307 Self-Test Failure
308 System Shutdown
309 Battery Test Failure
310 Ground Fault
311 Fuse Trouble
312 Reader Fuse Trouble
319 Aux Panel Trouble
SOUNDER/RELAY TROUBLES - 320
320 Sounder Relay
321 Bell 1
322 Bell 2
323 Alarm Relay
324 Trouble Relay

325 Reversing Relay
SYSTEM PERIPHERAL TROUBLES - 330 & 340
330 System Peripheral
331 Polling Loop Open
332 Polling Loop Short
333 Expansion Module Failure
334 Repeater Failure
335 Local Printer Paper Out
336 Local Printer Failure
337 Missing Device
COMMUNICATION TROUBLES - 350 & 360
350 Communication
351 Telco 1 Fault
352 Telco 2 Fault
353 Long Range Radio
354 Fail to Communicate
355 Loss of Radio Supervision
356 Loss of Central Polling
PROTECTION LOOP TROUBLES - 370
370 Protection Loop
371 Protection Loop Open
372 Protection Loop short
373 Fire Trouble
SENSOR TROUBLES - 380
380 Sensor Trouble
381 Loss of Super. -RF
382 Loss of Super. - RPM
383 Sensor Tamper
384 RF Xmtr. Low Battery
385 Zone Fault
386 Reader Tamper
387 Wireless Tamper
OPEN/CLOSE - 400
400 Open/Close
401 User O/C
402 Group O/C
403 Automatic O/C
404 Late To O/C
405 Deferred
406 Cancel
407 Remote Arm/Disarm
408 Quick Arm

409 Keyswitch O/C
REMOTE ACCESS - 410
411 Callback Request Made
412 Success - Download Access
413 Unsuccessful Access
414 System Shutdown
415 Dialer Shutdown
ACCESS CONTROL – 420
421 Access Denied
422 Access Report By User
423 Superkey used
441 Stay Arming
442 Away Arming
451 Early Opening/Closing
452 Late Opening/Closing
453 Late to Open
454 Late to Close
455 Auto-Arm Failure
459 Recent Arming
470 Partial Arming
471 Special Arming
472 Instant Arming
473 Force Arming
SYSTEM DISABLES - 500 & 510
SOUNDER RELAY DISABLES - 520
520 Sounder/Relay Disabled
521 Bell 1 Disabled
522 Bell 2 Disabled
523 Alarm Relay Disabled
524 Trouble Relay Disabled
525 Reversing Relay Disabled
SYSTEM PERIPHERAL DISABLES - 530 & 540
531 Keypad Tamper
532 Keypad Supervisor
533 Input Exp. Tamper
534 Input Exp. Supervisor
535 Output Exp. Tamper
536 Output Exp. Supervisor
537 Access Control Tamper
538 Access Control Supervisor
COMMUNICATION DISABLES - 550 & 560
551 Dialer Disabled
552 Radio Xmtr. Disabled

BYPASSES - 570
570 Zone Bypass
571 Fire Bypass
572 24-Hour Zone Bypass
573 Burg.lary Bypass
574 Group Bypass
575 User Access Bypass
576 Auto Bypass Zone
TEST/MISC. - 600
601 Manual Trigger Test
602 Periodic Test Report
603 Periodic RF Xmission
604 Fire Test
605 Status Report To Follow
606 Listen-in To Follow
607 Walk Test Mode
621 Event Log Reset
622 Event Log 50% Full
623 Event Log 90% Full
624 Event Log Overflow
625 Date/Time Reset
626 Date/Time Inaccurate
627 Program Mode Entry
628 Program Mode Exit
631 Exception Schedule Change
632 Midnight
633 Software Access
634 Software Change Program
635 No Movement
650 Inactivity
651 Negligence
Seka . - 700
701 Output Nr. X Activated
702 Master Log In
703 User Log In
704 Open After Alarm
705 Code Progrmng. Menu (*5)
706 Master Menu (*6)
707 Alarm Reset
901 PG or FNC (Paradox)
902 Zone With Delay Branched
911 Btm .1 Pressed
912 Btm .2 Pressed
913 Btm .3 Pressed
999 reserved, not used