
ELECTROMAGNETIC LOCK INSTALLATION INSTRUCTION

EL-350

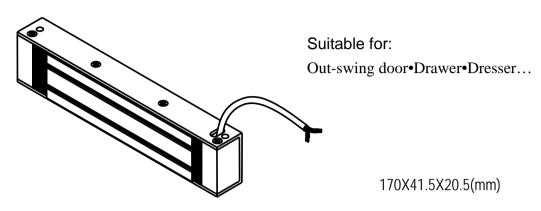



Electromagnetic Lock Specification:

| | EL-350 Series | Notation |
|-----------------------|---|-------------|
| Power supply | DC 12V | |
| Operation current | 380mA/12VDC | |
| Door sensor | NC(Only for EL-350ST model) | Reed switch |
| Application | Out-swing door and In-swing door | |
| Holding forces | 350lbs(180Kg) | |
| Operation temperature | 35° C ± 5°C (Iinside air temperature 30°C) | |
| Warranty | The warranty is 1 years for normal using | |
| Weight | 1kg | |


Installation instruction:

When installing magnetic lock user should be sure of type of door used .Magnetic lock is specifically for the use of out-swing door.

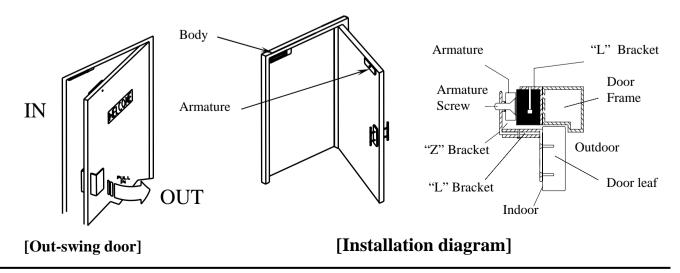

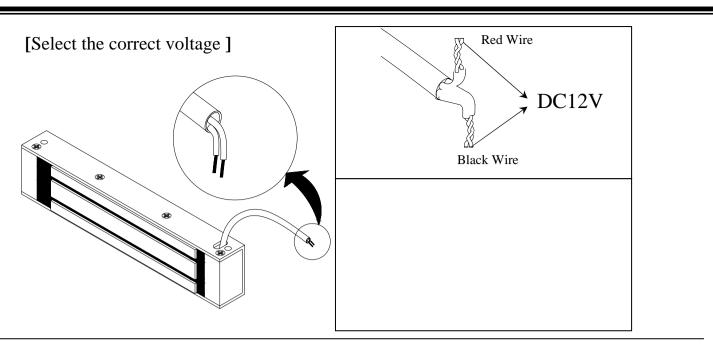

[For drawer installation diagram]

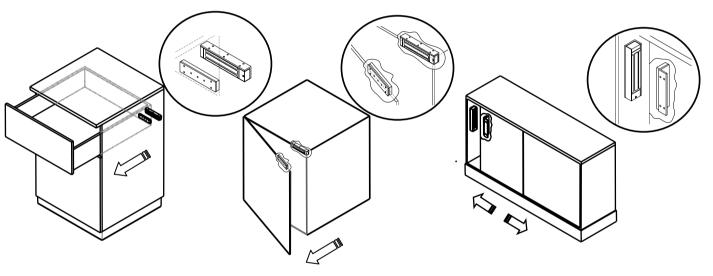

*Option "L bracket " to be used for fitting

