


# S800

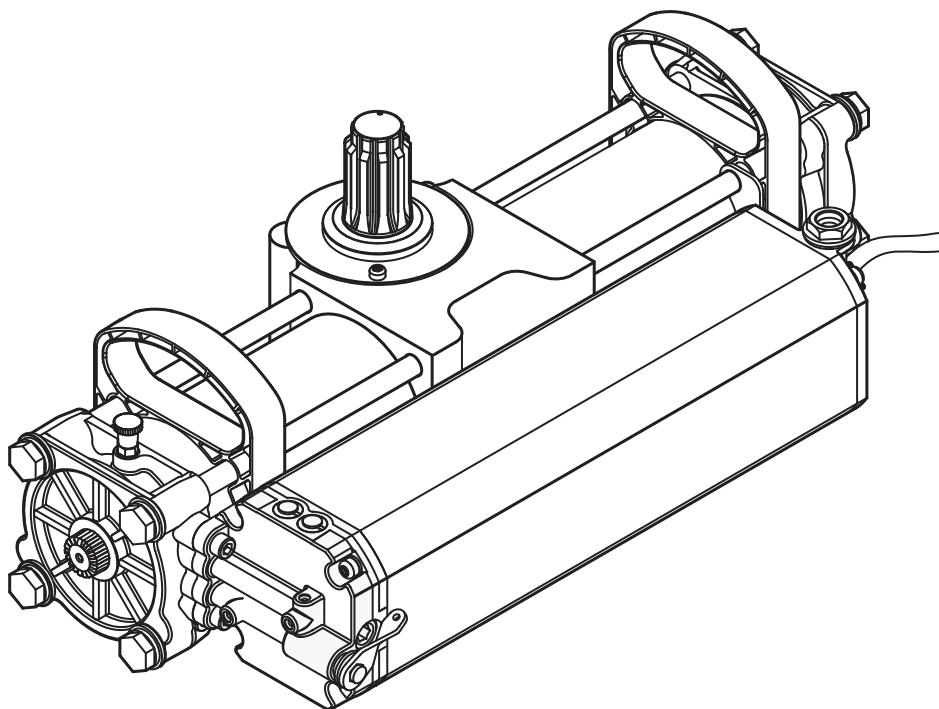

**FAAC**

© Copyright FAAC S.p.A. dal 2016. Tutti i diritti riservati.

Nessuna parte di questo manuale può essere riprodotta, archiviata, distribuita a terzi né altrimenti copiata, in qualsiasi formato e con qualsiasi mezzo, sia esso elettronico, meccanico o tramite fotocopia, senza il preventivo consenso scritto di FAAC S.p.A.

Tutti i nomi e i marchi citati sono di proprietà dei rispettivi fabbricanti.

I clienti possono effettuare copie per esclusivo utilizzo proprio.

Questo manuale è stato pubblicato nel 2016.

© Copyright FAAC S.p.A. from 2016. All rights reserved.

No part of this manual may be reproduced, archived, distributed to third parties nor copied in any other way, in any format and with any means, be it electronic, mechanical or by photocopying, without prior written authorisation by FAAC S.p.A.

All names and trademarks mentioned are the property of their respective manufacturers.

Customers may make copies exclusively for their own use.

This manual was published in 2016.

© Copyright FAAC S.p.A. depuis 2016. Tous droits réservés.

Aucune partie de ce manuel ne peut être reproduite, archivée ou distribuée à des tiers ni copiée, sous tout format et avec tout moyen, qu'il soit électronique, mécanique ou par photocopie, sans le consentement écrit préalable de FAAC S.p.A.

Tous les noms et les marques cités sont la propriété de leurs fabricants respectifs.

Les clients peuvent faire des copies pour leur usage exclusif.

Ce manuel a été publié en 2016.

© Copyright FAAC S.p.A. ab dem 2016. Alle Rechte vorbehalten.

Kein Teil dieses Handbuchs darf reproduziert, gespeichert, an Dritte weitergegeben oder sonst auf eine beliebige Art in einem beliebigen Format und mit beliebigen Mitteln kopiert werden, weder mit elektronischen, noch mechanischen oder durch Fotokopieren, ohne die Genehmigung von FAAC S.p.A.

Alle erwähnten Namen und Marken sind Eigentum der jeweiligen Hersteller.

Die Kunden dürfen nur für den Eigengebrauch Kopien anfertigen.

Dieses Handbuch wurde 2016 veröffentlicht.

© Copyright FAAC S.p.A. del 2016. Todos los derechos están reservados.

No puede reproducirse, archivar, distribuirse a terceros ni copiarse de ningún modo, ninguna parte de este manual, con medios mecánicos o mediante fotocopia, sin el permiso previo por escrito de FAAC S.p.A.

Todos los nombres y las marcas citadas son de propiedad de los respectivos fabricantes.

Los clientes pueden realizar copias para su uso exclusivo.

Este manual se ha publicado en 2016.

© Copyright FAAC S.p.A. van 2016. Alle rechten voorbehouden.

Niets uit deze handleiding mag gereproduceerd, gearchiveerd, aan derden openbaar gemaakt of op andere wijze gekopieerd worden, in om het even welke vorm en met geen enkel middel, noch elektronisch, mechanisch of via fotokopiëren, zonder schriftelijke toestemming vooraf van FAAC S.p.A.

Alle vermelde namen en merken zijn eigendom van de respectievelijke fabrikanten.

De klanten mogen kopieën maken die enkel voor eigen gebruik bestemd zijn.

Dez handleiding werd in 2016 gepubliceerd.

**CONTENTS**

EC Declaration of conformity ..... 1  
 Declaration of incorporation of partly completed machinery1

**1. INTRODUCTION TO THE INSTRUCTION MANUAL ..... 2**  
 1.1 Meaning of the symbols ..... 2

**2. SAFETY RECOMMENDATIONS ..... 3**  
 2.1 Installer safety ..... 3  
 2.2 Transport and storage ..... 4  
 2.3 Unpacking and handling ..... 4  
 2.4 Product waste disposal ..... 4

**3. S800 ..... 5**  
 3.1 Intended use ..... 5  
 3.2 Limits of use ..... 5  
 3.3 Unauthorised use ..... 5  
 3.4 Use in an emergency ..... 5  
 3.5 Product identification ..... 5  
 3.6 Technical specifications ..... 6  
 3.7 Identification of components ..... 7  
 Installation accessories (supplied separately) ..... 7

**4. INSTALLATION REQUIREMENTS ..... 8**  
 4.1 Mechanical requirements ..... 8  
 4.2 Electric system ..... 9  
 4.3 Typical system ..... 9

**5. INSTALLATION ..... 10**  
 5.1 Required tools ..... 10  
 5.2 Remove the leaf and lower hinge ..... 10  
 5.3 Put in the foundation box ..... 10  
 5.4 Set up the guide bracket ..... 11  
 5.5 Installing the leaf ..... 11  
 5.6 Installing the actuator ..... 12  
 5.7 Adjusting the positive stops ..... 13

**6. START-UP ..... 14**  
 6.1 Force adjustment (By-Pass) ..... 14  
 Closure of the box ..... 14  
 6.2 Final operations ..... 14

**7. MAINTENANCE ..... 15**  
 7.1 Routine maintenance ..... 15  
 7.2 Operating problems ..... 15  
 Bleeding ..... 15  
 Topping-up the oil level ..... 15

**8. INSTRUCTIONS FOR USE ..... 17**  
 8.1 Safety Recommendations ..... 17  
 8.2 Use in an emergency ..... 17  
 8.3 Manual operation ..... 17  
 Release manoeuvre ..... 17  
 Restoring automatic operation ..... 17

**ANNEX**

**1** The limits of use of S800 in relation to the wind ..... 18  
**2** Limits of use of the positive stops ..... 18  
**3** Foundation for leaf of MAX weight and width ..... 19

**TABLES**

**1** Symbols: notes and warnings on the instructions ..... 2  
**2** Symbols: safety recommendations (EN ISO 7010) ..... 2  
**3** Symbols: Personal Protective Equipment ..... 3  
**4** Symbols: signs on the packaging ..... 4  
**5** Technical data ..... 6  
**6** Symbols: work equipment (type and size) ..... 10  
**7** Guide to solving malfunctions ..... 15  
**8** Routine maintenance ..... 16

**EC DECLARATION OF CONFORMITY**

The Manufacturer  
**Company name:** FAAC S.p.A. Soc. Unipersonale  
**Address:** Via Calari, 10 - 40069 Zola Predosa BOLOGNA - ITALY  
 hereby declares that the following products:  
**Description:** Underground actuator for swing gates  
**Model:** S800 100° CBAC 230V; S800 180° CBAC 230V;  
 S800 100° SBW 230V; S800 180° SBW 230V;  
 S800 100° CBAC 115V  
 comply with the following applicable EU legislations:  
 EMC Directive 2004/108/EC  
 Directive ROHS 2 2011/65/EU  
 Furthermore, the following harmonised standards have been applied:  
 EN 61000-6-2:2005  
 EN 61000-6-3:2007  
 Bologna, 01-01-2016 CEO

**DECLARATION OF INCORPORATION OF PARTLY COMPLETED MACHINERY**

(2006/42/EC ANN.II P.1, LETT. B)  
 Manufacturer and person authorised to prepare the relevant technical documentation  
**Company name:** FAAC S.p.A. Soc. Unipersonale  
**Address:** Via Calari, 10 - 40069 Zola Predosa BOLOGNA - ITALY  
 hereby declares that for the partly completed machinery:  
**Description:** Underground actuator for swing gates  
**Model:** S800 100° CBAC 230V; S800 180° CBAC 230V;  
 S800 100° SBW 230V; S800 180° SBW 230V;  
 S800 100° CBAC 115V  
 the following essential requirements of the Machinery Directive 2006/42/EC (including all applicable amendments) have been applied and met:  
 EHSR 1.1.2, 1.1.4, 1.1.5, 1.1.6, 1.1.7, 1.2.3.4, 1.3.1, 1.3.2, 1.3.3, 1.3.7, 1.3.8.1, 1.3.8.2, 1.3.10, 1.3.11.1, 1.3.11.2, 1.4.1, 1.4.5, 1.4.6, 1.4.8, 1.4.9, 1.4.15, 1.5.3, 1.5.4, 1.5.15, 1.6.1, 1.6.1.1  
 and that the relevant technical documentation has been compiled in compliance with part B of Annex VII.  
 Furthermore, the following harmonised standards have been applied:  
 EN 12453:2000  
 EN12100:2010  
 EN13849-1:2008  
 EN13849-2:2008  
 It is also declared that the partly completed machinery identified above may not be commissioned until the final machine - into which it will be incorporated - has been declared compliant with the provisions of the above mentioned Machine Directive 2006/42/EC.  
 Bologna, 01-01-2016 CEO

**ENGLISH**  
 Translation of the original instructions

# 1. INTRODUCTION TO THE INSTRUCTION MANUAL

This manual provides the correct procedures and requirements for installation and keeping of S800 in safe conditions.

The results of the risk assessment conducted by FAAC S.p.A. on the entire life cycle of the product has been considered when drafting the manual in order to implement effective risk reduction.

The following stages of the life cycle of the product have been considered:

- delivery/handling of the supply
- assembly and installation
- setting up and commissioning
- operation
- maintenance/resolving any faults
- disposal at the end of the product's life

Risks arising from installation and using the product have been considered:

- risks for the installer/maintenance technician (technical personnel)
- risks for the automation user
- risks for product integrity (damage)






In Europe, the automation of a door/gate falls under the Machinery Directive 2006/42/EC and the relevant harmonised standards. Whoever automates a door/gate (new or existing) is referred to as the Manufacturer of the Machine. By law, it is therefore required, among other things, to carry out a risk analysis of the machine (automatic door/gate, as a whole) and take protective measures to fulfil the essential safety requirements specified in Attachment I of the Machinery Directive.

This manual also contains general information and guidelines in a purely illustrative and not exhaustive manner, so as to facilitate the activities carried out by the Manufacturer of the Machine, in all respects, in relation to the risk analysis and drafting instructions for use and maintenance of the machine. It is specifically understood that FAAC S.p.A. does not accept any liability with regard to the reliability and/or completeness of the above instructions. Therefore, the manufacturer of the machine must carry out all the activities required by the Machinery Directive and the relevant harmonised standards, according to the actual condition of the locations and structures where the product S800 will be installed, prior to commissioning the machine. These activities include the analysis of all the risks associated with the machine and subsequent implementation of all safety measures intended to fulfil the essential safety requirements.

This manual contains references to European standards. The automation of a door/gate must fully comply with laws, standards and regulations applicable in the country where installation will take place.

 Unless otherwise specified, the measurements provided in the instructions are in mm.

## 1.1 MEANING OF THE SYMBOLS

-  **1** Symbols: notes and warnings on the instructions
-  ATTENTION ELECTROCUTION HAZARD - The operation or step described must be performed in compliance with the provided instructions and safety regulations.
-  WARNING: RISK OF PERSONAL INJURY OR DAMAGE TO THE PARTS - The operation or step described must be performed in compliance with the provided instructions and safety regulations.
-  WARNING - Details and specifications to be followed in order to ensure correct operation of the system.
-  RECYCLING and DISPOSAL - The constructive components and materials, batteries and electronic components must not be disposed of with household waste but delivered to authorised disposal and recycling facilities.

 For manual lifting, arrange for 1 person every 20 kg being lifted.





 PAGE E.g.:  6 see Page 6.


 FIGURE E.g.:  1-3 see Figure 1 -Detail 3.

 TABLE E.g.:  1 see Table 1.


 CHAPTER/PARAGRAPH E.g.: §1.1 see Paragraph 1.1.

 ANNEX E.g.:  1 refer to Annex 1.


 **2** Symbols: safety recommendations (EN ISO 7010)


 GENERIC HAZARD  
Risk of personal injury or damage to parts.

 ELECTROCUTION HAZARD  
Risk of electrocution due to the presence of live parts.


 RISK OF CRUSHING, MUSCOLO-SKELETAL DISORDERS  
Risk of musculoskeletal crushing - Risk of personal injury in case of lifting heavy loads manually.


 CRUSHING HAZARD  
Risk of crushing hands/feet due to the presence of heavy parts.

 CUTTING/AMPUTATION/PIERCING HAZARD  
Risk of cutting due to the presence of sharp parts or the use of pointed tools (drill).

 SHEARING HAZARD  
Risk of shearing due to moving parts.

 RISK OF IMPACT/CRUSHING  
Risk of impact or crushing due to moving parts.

 FALLING OBJECTS HAZARD  
Risk of impact due to falling objects.

 TRIPPING HAZARD  
Risk of tripping due to the presence of thresholds higher than 5 mm.

 SPENT BATTERIES HAZARD  
Risk for the environment and health arising from spent batteries due to possible leakage of the liquid content.

 COLLISION WITH FORKLIFT TRUCKS HAZARD  
Risk of collision/impact with forklift trucks.

### 3 Symbols: Personal Protective Equipment

Personal protective equipment must be worn for protection from any risks (e.g. crushing, cutting, shearing...):



Obligation to wear head protection helmet.



Obligation to wear safety footwear.



Obligation to wear mask/goggles to protect the eyes from the risk of fragments due to the use of drill or welder.



Obligation to wear work gloves.



Obligation to wear ear protectors.



Obligation to wear work clothes without any parts that may get caught in moving parts..

## 2. SAFETY RECOMMENDATIONS

This product is placed onto the market as “partly completed machinery”, therefore it cannot be commissioned until the machine in which it will be incorporated has been identified and declared to conform to the Machinery Directive 2006/42/EC by the actual Manufacturer.



Incorrect installation and/or incorrect use of the product might cause serious harm to people. Read and comply with all the instructions before starting any activity on the product. Keep these instructions for future reference.

Perform installation and other activities adhering to the sequences provided in the instructions manual.

Always comply with all the requirements contained in the instructions and warning tables at the beginning of the paragraphs. Always comply with the safety recommendations.

Only the installer and/or maintenance technician is authorised to work on the automation components. Do not modify the original components in any way.

Close off the work site (even temporarily) and prevent access/transit. EC countries must comply with the legislation that transposes the European Construction Site Directive 92/57/EC.

The installer is responsible for the installation/testing of the automation and for completing the Register of the system.

The installer must prove or declare to possess technical and professional proficiency to perform installation, testing and maintenance activities according to the requirements in these instructions.

### 2.1 INSTALLER SAFETY

Installation activities require special work conditions to reduce to the minimum the risks of accidents and serious damage. Furthermore, the suitable precautions must be taken to prevent risks of injury to persons or damage.



The installer must be in good physical and mental condition, aware of and responsible for the hazards that may be generated when using the product.

The work area must be kept tidy and must not be left unattended.

Do not wear clothes or accessories (scarves, bracelets, etc.) that may get caught in moving parts.

Always wear the personal protective equipment recommended for the type of activity to be carried out.

The required level of workplace lighting must be equal to at least 200 lux.

Operate CE marked machinery and equipment in compliance with the manufacturer's instructions. Use work instruments in good conditions.

Use the transport and lifting equipment recommended in the instructions manual.

Use safety-compliant portable ladders of adequate size, fitted with anti-slip devices at the top and bottom, equipped with retainer hooks.

## 2.2 TRANSPORT AND STORAGE

 4 Symbols: signs on the packaging.



Read the instructions.



Handle with care. Presence of fragile parts.



Upward direction. Do NOT turn over.



Store away from water and humidity.



PROHIBITION to stack the pallets.



Maximum number of stackable packages.




CE marking.

### PALLETISED SUPPLY

#### RISKS



#### PERSONAL PROTECTIVE EQUIPMENT

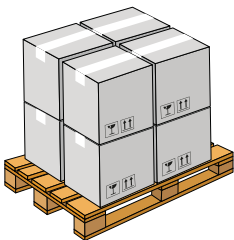

Follow the instructions on the package while handling it.


Use the forklift truck or pallet truck in observance of the safety rules to avoid risks of collision/impact.

### SINGLE PACKAGE

#### RISKS



#### PERSONAL PROTECTIVE EQUIPMENT

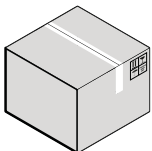

Follow the instructions on the package while handling it.

### STORAGE

Store the product in its original packaging, in closed and dry premises, protected from the sun and free from dust and aggressive substances. Protect from mechanical stress. If stored for more than 3 months, regularly check the condition of the components and the packaging.

- Storage temperature: 5°C to 30°C.
- Percentage of humidity: 30% to 70%.

## 2.3 UNPACKING AND HANDLING

#### RISKS



#### PERSONAL PROTECTIVE EQUIPMENT



1. Open the package.
2. Remove all the components.



Lift the actuator by the handles.



Make sure all of the components in the supply are present and intact  1.

3. Dispose of the packaging material.



The packaging materials (plastic, polystyrene, etc.) must not be left within the reach of children as they are potential sources of danger.




Discard the packaging after use in the appropriate containers in compliance with waste disposal regulations.

## 2.4 PRODUCT WASTE DISPOSAL

After dismantling the product, dispose of it in compliance with Standards in force.



The constructive components and materials, batteries and electronic components must not be disposed of with household waste but delivered to authorised disposal and recycling facilities. The oil must be collected in a sealed container and handed over to an authorised disposal and recycling facility. Do not mix with other substances such as anti-freeze or transmission fluids. Keep the used oil away from heat sources and out of reach of children.

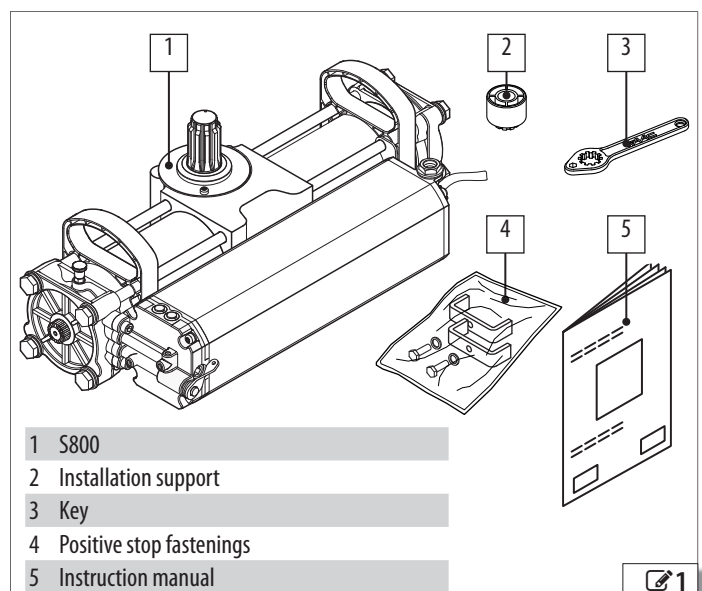

- 1 S800
- 2 Installation support
- 3 Key
- 4 Positive stop fastenings
- 5 Instruction manual





### 3. S800

#### 3.1 INTENDED USE

Underground actuators of the FAAC S800 series are designed to activate horizontally moving swing gates for residential/condominium use.

One underground actuator must be installed for each leaf.

The systems set up with S800 must only be intended for vehicle transit.

Comply with the Manual operating instructions (§ User instructions) for the manual operation of the gate.



Any other use, not specifically described, is prohibited and might affect the integrity of the product and/or be a source of danger.

#### 3.2 LIMITS OF USE

The leaf must comply with the dimensional and weight limits specified in the technical data.

Comply with the frequency of use limits indicated in the technical data.

Environmental phenomena, even occasional, such as ice, snow and strong wind may hinder correct operation of the automation and affect component integrity and may become a potential source of danger (see § Use in an emergency).

The limits of use in relation to the wind are described in detail in Limits of use of S800 in relation to the wind.

In the presence of a pedestrian door integrated in the leaf of the gate, motorised movement must be prevented when the pedestrian door is not closed.

S800 is not designed as a protective system against intrusion.

S800 must be connected to an electronic board FAAC for 230 V / 115 V (related to the model version) 24V motor control of swing gates, fitted with a slow-down control at the limit switch.

The automation set-up requires necessary safety devices to be installed, which are identified by the installer after having carried out a proper risk assessment of the installation site.

#### 3.3 UNAUTHORISED USE

- Any use other than the intended use is prohibited.
- It is prohibited to install the automation outside of the limits set forth in the Technical data and the Installation requirements.
- It is prohibited to install the automation along escape routes.
- It is prohibited to install the automation in areas that are at risk of explosion and/or fire: the presence of flammable gases or fumes poses a severe danger for safety (the product is not certified pursuant to directive 94/9/EC ATEX).
- It is prohibited to power the system with energy sources other than those set forth.
- It is prohibited to integrate unrelated commercial systems and/or equipment, or employ them for uses that are not allowed by the respective manufacturers.
- It is prohibited to use and/or install accessories that are not specifically approved by FAAC.
- It is prohibited to use the automation before having commissioned the system.
- It is prohibited to use the automation with faults/tampering which could jeopardise safety.
- It is prohibited to use the automation with movable and/or fixed guards that have been tampered with or removed.
- Do not expose the actuator to direct jets of water of any type and amount.
- Do not expose the actuator to aggressive chemical or environmental agents, nor to flammable gases or fumes.

- Do not use the automation when its range of action is not clear of people, animals or objects.
- Do not pass and/or stop within the automation's range of action while it is moving.
- Do not obstruct the movement of the automation.
- Do not climb onto, hold onto or be pulled by the leaf.
- Do not allow children to come close or play near the automation's range of action.
- Do not allow the control devices to be used by persons who are not specifically authorised and trained.
- Do not allow the control devices to be used by children or persons with reduced mental-physical abilities, unless under the supervision of an adult responsible for their safety.



When moving it manually, slowly guide the leaf for its entire stroke, do not push the leaf so it moves freely.

#### 3.4 USE IN AN EMERGENCY

In any malfunction, emergency or fault, disconnect the power supply of the automation. If the conditions allow the leaf to be safely moved manually, use the MANUAL OPERATION; otherwise, keep the automation out of service until it is restored/repaired.

In case of a fault, the automation must be restored/repaired must only be carried out by the INSTALLER/MAINTENANCE TECHNICIAN.

#### 3.5 PRODUCT IDENTIFICATION

The product is identified by the plate (see 2).

Sales code

Product name


IDENTIFICATION NUMBER

Month/Year of manufacture + Progressive number in production month.

Example: 0115 0001  
made in January 2015 S/N 1

**3.6 TECHNICAL SPECIFICATIONS**


The hydraulic actuator S800 is available in different versions for **100°** or **180°** leaf opening options and for the **CBAC** or **SBW** type of motor block.

- **CBAC** (With Opening and Closing Block): when the motor is not running, resistance to movement is high. The hydraulic RELEASE device is required for manual operation. Electric locks are not required for the opening/closing positions to be maintained.
- **SBW** (Without Windy Block) suitable for windy areas: when the motor is not running, resistance to movement is low (the limits of use in relation to the wind are described in detail in  1). The Hydraulic Release device is recommended for manual operation. Electric locks are required to hold the opening/closing positions.

**Control system**

- S800 must be connected to a FAAC electronic board for the control of 230 V or 115 V motors (based on model version) 24 V a BUS connection and slowdown control at the limit switch.

**Standard equipment** (on all versions)

- By-pass screws to adjust the maximum crushing force during opening and closing.
- Service release lever: for manual operation during installation/maintenance.
- Integrated mechanical opening and closing stops (positive stop): used to define the leaf stop points. No external mechanical stops are required when using the positive stops. Using positive stops will also reduce the maximum stroke (maximum reduction: 30° for opening and 30° for closing). The limits of use of the positive stops in relation to the length and weight of the leaf are described in detail in  2.

**FAAC Components required for installation:**

- foundation box
- grooved joint kit

**Optional FAAC accessories:**

- hydraulic release device with coded key accessible from inside as well as outside the gate (required on CBAC versions)
- lock with customised key for hydraulic release

 5 Technical data

Model Version	S800 100° CBAC 230V	S800 180° CBAC 230V	S800 100° SBW 230V	S800 180° SBW 230V	S800 100° CBAC 115V
Mains power supply voltage	230 V~ 50 Hz	230 V~ 50 Hz	230 V~ 50 Hz	230 V~ 50 Hz	115 V~ 60 Hz
Electrical motor	Asynchronous single-phase	Asynchronous single-phase	Asynchronous single-phase	Asynchronous single-phase	Asynchronous single-phase
Thrust capacitor	8 µF	8 µF	8 µF	8 µF	25 µF
Thermal protection	120 °C	120 °C	120 °C	120 °C	120 °C
Max power	280 W	280 W	280 W	280 W	280 W
Max torque	550 Nm	550 Nm	550 Nm	550 Nm	550 Nm
Max. leaf width	2 m	2 m	4 m	4 m	2 m
Max. leaf weight	800 kg	800 kg	800 kg	800 kg	800 kg
Max angular speed	7.8 °/s	7.8 °/s	7.8 °/s	7.8 °/s	7.8 °/s
Max leaf opening angle	113 °	187 °	113 °	187 °	113 °
Operating ambient temperature	-20 °C +55 °C	-20 °C +55 °C	-20 °C +55 °C	-20 °C +55 °C	-20 °C +55 °C
Type of use	Residential-Condominium	Residential-Condominium	Residential-Condominium	Residential-Condominium	Residential-Condominium
Continuous operating time (ROT)	133' at 23 °C	133' at 23 °C	133' at 23 °C	133' at 23 °C	133' at 23 °C
Protection rating	IP67	IP67	IP67	IP67	IP67
Type of oil	FAAC HP OIL	FAAC HP OIL	FAAC HP OIL	FAAC HP OIL	FAAC HP OIL
Dimensions (W x D x H)	380 x 220 x 160 mm	450 x 220 x 160 mm	380 x 220 x 160 mm	450 x 220 x 160 mm	380 x 220 x 160 mm
(Foundation box)	(507 x 283 x 200 mm)	(507 x 283 x 200 mm)	(507 x 283 x 200 mm)	(507 x 283 x 200 mm)	(507 x 283 x 200 mm)
Weight	16 kg	16.5 kg	16 kg	16.5 kg	16 kg
(Foundation box)	(18.3 kg)	(18.3 kg)	(18.3 kg)	(18.3 kg)	(18.3 kg)



3.7 IDENTIFICATION OF COMPONENTS

INSTALLATION ACCESSORIES (SUPPLIED SEPARATELY)

**Hydraulic actuator S800**

1	Pinion
2	Lifting handles
3	Bleed screws
4	Limit switch mechanical stop adjustment screws (positive stop)
5	Oil filler cap
6	By-pass screws (force adjustment)
7	Service release lever
8	Positive stop fastenings
9	Installation support
10	Key

3

**Foundation box**

**Grooved joint kit**

**Hydraulic release (optional)**

11	Cover
12	Removable plate (not used when the hydraulic release is installed)
13	Foundation box
14	Cover fastening screws

15	Screws with grower to fasten the actuator	15	Screws with grower to fasten the actuator
16	Grooved joint	17	Bush
17	Bush	18	Guide bracket with grooved joint

4

- Foundation box**
- 11 Cover
  - 12 Removable plate (not used when the hydraulic release is installed)
  - 13 Foundation box
  - 14 Cover fastening screws
- Grooved joint kit**
- 15 Screws with grower to fasten the actuator
  - 16 Grooved joint
  - 17 Bush
- Grooved joint kit with guide bracket**
- 15 Screws with grower to fasten the actuator
  - 17 Bush
  - 18 Guide bracket with grooved joint
- Optional accessories**
- 19 Hydraulic release (required on CBAC versions)

ENGLISH  
Translation of the original instructions


## 4. INSTALLATION REQUIREMENTS

### 4.1 MECHANICAL REQUIREMENTS

The mechanical construction elements must comply with the provisions of Standards EN 12604 and EN 12605.

Before installing the automation, suitability of the mechanical requirements must be verified and any required procedures must be implemented for this purpose.


The necessary mechanical requirements are:

-  Solid ground to support the weight of the actuator and the leaf.
- Flat and horizontal flooring in the leaf movement area.
- Set-up of an adequate rainwater draining system from the foundation box.
- Perfectly vertical leaf in all positions along the stroke with smooth and even movement, without friction.
- A solid, stable structure (columns, hinges, leaves) and without the risk of detachment or sagging considering the weight of the leaf, the forces developed by the actuator and the action of the wind. Perform the structural calculation if necessary.
- Adequate fall protection devices for the leaf.
- No signs of corrosion or cracks in the structure.
- Hinges in good condition, lubricated, with no play or friction.
- External mechanical opening and closing stops to limit the leaf stroke. The stops must be adequately sized and firmly secured to withstand the impact of the leaf. The external mechanical stops are not required when using positive stops. The limits of use of the positive stops in relation to the length and weight of the leaf are described in detail in [Limits of use of the positive stops](#).
- The thresholds and elements extending out from the floor must be adequately shaped or marked to eliminate the risk of tripping or slipping.
- Safety clearance between the wall (or other fixed element) and the most prominent part of the open leaf, adequate to protect against the risk of crushing/trapping people. Alternatively, check that the opening force is within the limits allowed by the current regulation.
- Safety clearances between the fixed and mobile parts, adequate to protect against the risk of crushing hands. Alternatively, apply protections that prevent inserting one's fingers.
- Safety clearance between the floor and the bottom edge of the leaf along its entire stroke, suitable to protect against the risk of dragging a person's feet. Alternatively, apply protections that prevent inserting one's foot.
- No sharp edges and protruding parts, to avoid the risk of cutting and hooking. Alternatively, eliminate or adequately protect the sharp edges and protruding parts.
- Installing S800 only requires the presence of the upper hinge of the leaf since the lower rotation fulcrum is provided by the foundation box. If an existing gate is automated, it must be dismantled and the lower hinge removed before installing the actuator.
- Refer to the EN 349 standard for the definition of the minimum spaces, to prevent crushing body parts.
- Refer to standard EN ISO 13857 for the definition of the safety distances to prevent the danger zones from being reached.


The dimensions and positioning of the foundation box are indicated in [5](#).

#### POSITIONING THE ACTUATOR

##### Actuator installed perpendicular to the closed leaf

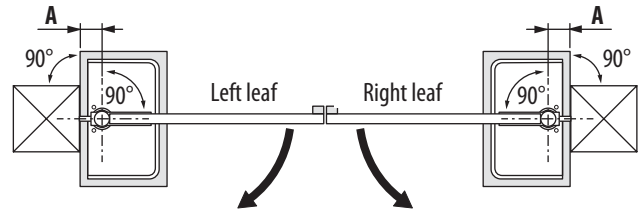


##### Actuator installed parallel to the closed leaf

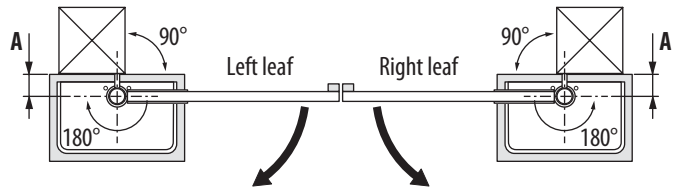

A distance **A** equal to or greater than 60 mm is required between the vertical axis of the upper hinge and the pillar.

#### OVERALL DIMENSIONS

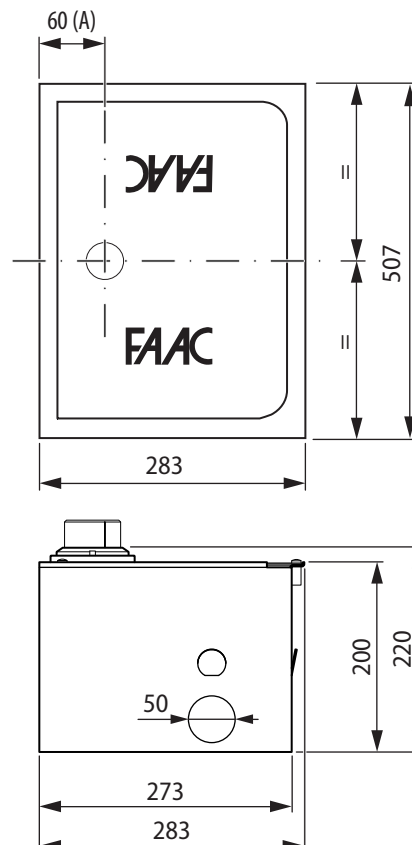

## 4.2 ELECTRIC SYSTEM



Before performing any operation, disconnect the mains power supply. If the disconnecting switch is not visible, apply a "WARNING - Maintenance in progress" sign.



The electrical system must comply with the regulations in force in the country of installation.

Use CE marked components and materials that comply with the Low Voltage Directive 2006/95 and the EMC Directive 2004/108.

The mains power supply of the automation must be fitted with a 6 A omnipolar circuit breaker with a contact opening distance equal to or greater than 3 mm, for disconnection purposes in accordance with current regulations.

The mains power supply of the automation must be equipped with a differential switch with a threshold of 0.03 A.

The metal masses of the structure must be earthed.

Check that the earthing system is set up in compliance with the regulations in force in the country of installation.

The electrical cables of the automation system must be sized and have an insulation rating in accordance with regulations in force, placed in adequate rigid or flexible pipes that are exposed or concealed.

Use separate pipes for power cables and for connection cables of 12-24 V control devices/accessories.

Consult the concealed cable plan to ensure there are no electrical cables near excavations and drilling areas so as to avoid the risk of electrocution.

Ensure there are no pipes near the excavations and drilling areas.

The electronic board must be housed in an enclosure which guarantees minimum IP 44 protection.

The board enclosure must be placed in a non-hazardous area, which is accessible even with open leaf, at least 30 cm from the ground.

The board enclosure must be fitted with a lock or other device that prevents access to unauthorised persons. The cable outputs must be directed downwards. The pipe fittings to the enclosure must prevent humidity, insects and small animals from entering.

Protect the extension joints of the motor cable, by using junction boxes with a protection rating of IP 67 or higher.

The total length of the BUS cables must not exceed 100 m.

It is recommended to install a flashing light in a visible position to indicate gate movement.


The control accessories must be positioned in areas that are not hazardous to the user and are also accessible with open leaf. It is recommended to place the control accessories within the automation's visual range. This is mandatory with "dead man" control.

If an emergency stop button is installed, it must comply with EN13850. Comply with the following heights from the ground:

- control accessories = minimum 150 cm
- emergency buttons = max 120 cm

## 4.3 TYPICAL SYSTEM

6 indicates the installation layout of a typical system.

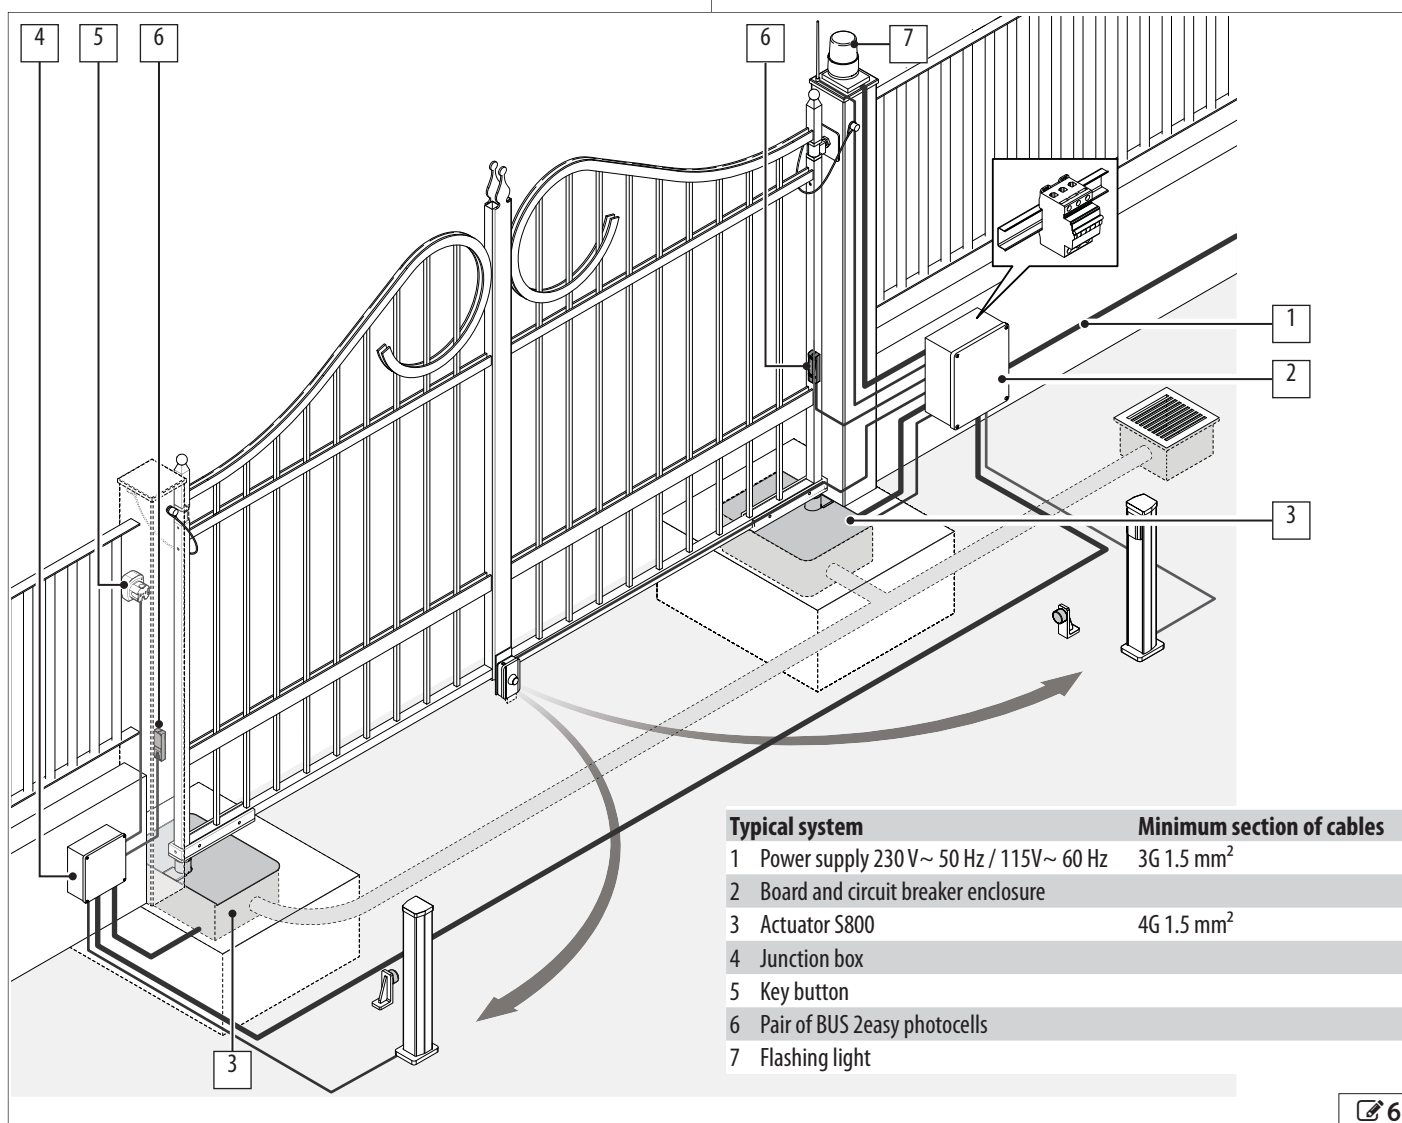

## 5. INSTALLATION



Installation must be carried out in compliance with Standards EN 12453 and EN 12445.

 
Close off the work site and prevent access/transit.

### 5.1 REQUIRED TOOLS

6 Symbols: work equipment (type and size)



HEX WRENCH of the specified size (7, 8, 12)



CROSS-HEAD SCREWDRIVER of the specified size (6, 8...)



LEVEL



WELDER

 
TOOL with TORQUE ADJUSTMENT

This indicates that a tool with torque adjustment is required where necessary, for safety reasons.

TIGHTENING TORQUE VALUE

The pictures specify the tool and the tightening torque in Nm.

E.g.: HEX WRENCH 6 set at 2.5 Nm



100 Nm


### 5.2 REMOVE THE LEAF AND LOWER HINGE

 If you automate an existing gate, the leaf must be dismantled and the lower hinge removed before installing the actuator.

RISKS



PERSONAL PROTECTIVE EQUIPMENT



Anchor the leaf to the lifting device with a rope or a suitable chain. After removing the leaf, place it on the ground or anchor it with a rope or chain to prevent it from tipping over.

### 5.3 PUT IN THE FOUNDATION BOX

RISKS




PERSONAL PROTECTIVE EQUIPMENT



The layout 21 of 3 provides approximate features of the foundation for the leaf having maximum weight and length specified in the Technical data. It is the responsibility of the installer to assess the dimensions and materials of the foundation according to the features of the ground, the gate and the installation environment. Perform the structural calculation if necessary.

1. Perform excavations and set up separate pipes for the electrical cables and drains ( 7).
2. Place the box with the hole aligned with the vertical axis of the upper hinge ( 7).
3. Connect the pipes for the electrical cables and the drain.
4. Use a spirit level to ensure the box is horizontal.
5. Cement the box and wait for it to harden.

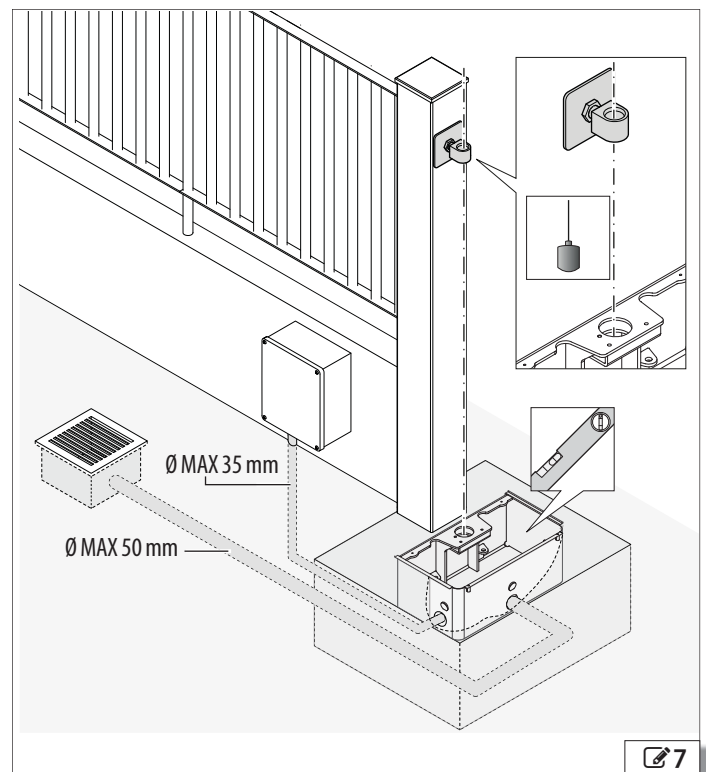

## 5.4 SET UP THE GUIDE BRACKET

### RISKS



### PERSONAL PROTECTIVE EQUIPMENT



**!** The guide bracket is an important component for installation safety, to guarantee the stability and control of the leaf during movement.

The guide bracket in the FAAC catalogue is designed for applications with leaves up to the maximum weight and length indicated in the Technical data.

When FAAC guide brackets are not used, the installer is responsible for designing the bracket suitable for the applied loads, defining the construction materials, thicknesses, sizes and surface anti-corrosion treatments. Play between the leaf and bracket must be MAX 2 mm.

The welds made must be certified.

1. Set up the guide bracket (🔗 8-1).
2. Position the grooved joint (🔗 8-2).

**i** The notch on the joint must be centred with the centreline of the bracket and directed as shown in the figure.

When the bracket is placed on the box the joint must be centred on the vertical rotation axis of the leaf (🔗 8-3).

3. Weld the entire circumference of the joint on the guide bracket (🔗 8-4).

## 5.5 INSTALLING THE LEAF

### RISKS



### PERSONAL PROTECTIVE EQUIPMENT




1. Assemble the bush (🔗 9-1) in the foundation box, inserted in the reference pin (🔗 9-2).
2. Assemble the guide bracket (🔗 9-3).
3. Assemble the leaf on the guide bracket (🔗 10) and anchor the leaf to the upper hinge.


**!** Play between the leaf and bracket must be MAX 2 mm.  
DO NOT weld the guide bracket to the leaf.

4. Check that:
  - the leaf resting on the bracket is perfectly horizontal (use the spirit level)
  - movement is smooth and with no friction along the entire stroke, all the way to the external opening/closing stops (if present)


**!** When moving it manually, slowly guide the leaf for its entire stroke, do not push the leaf so it moves freely.

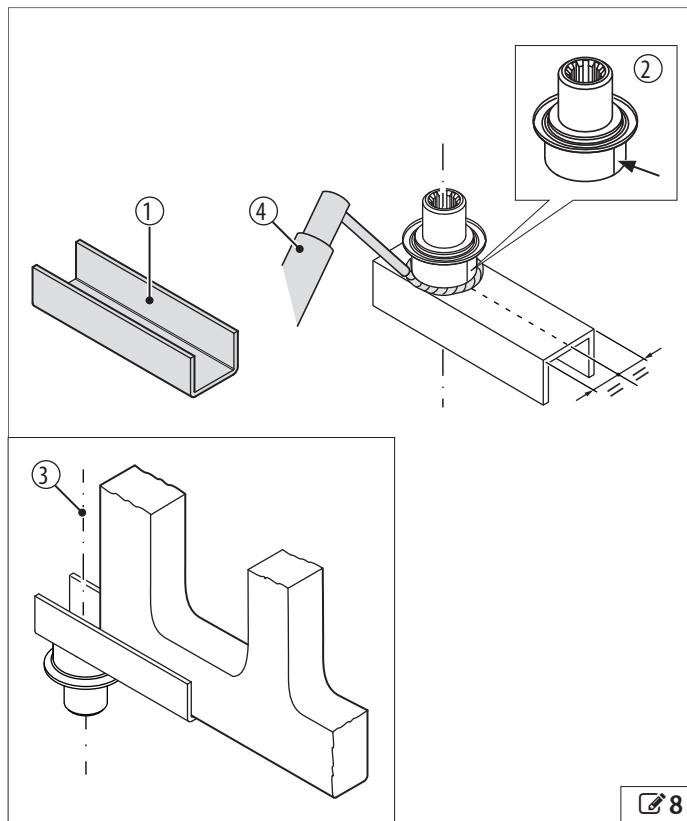

🔗 8

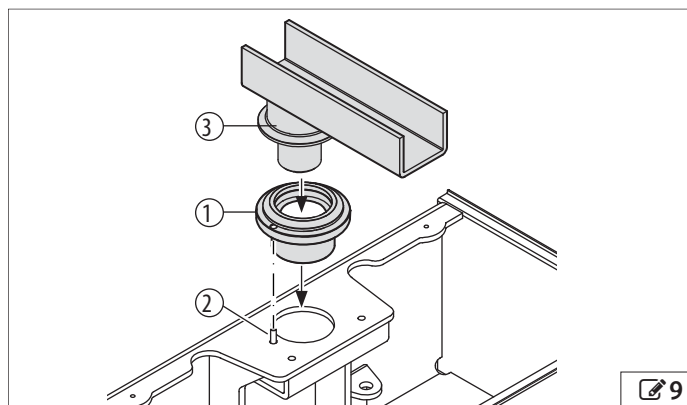

🔗 9

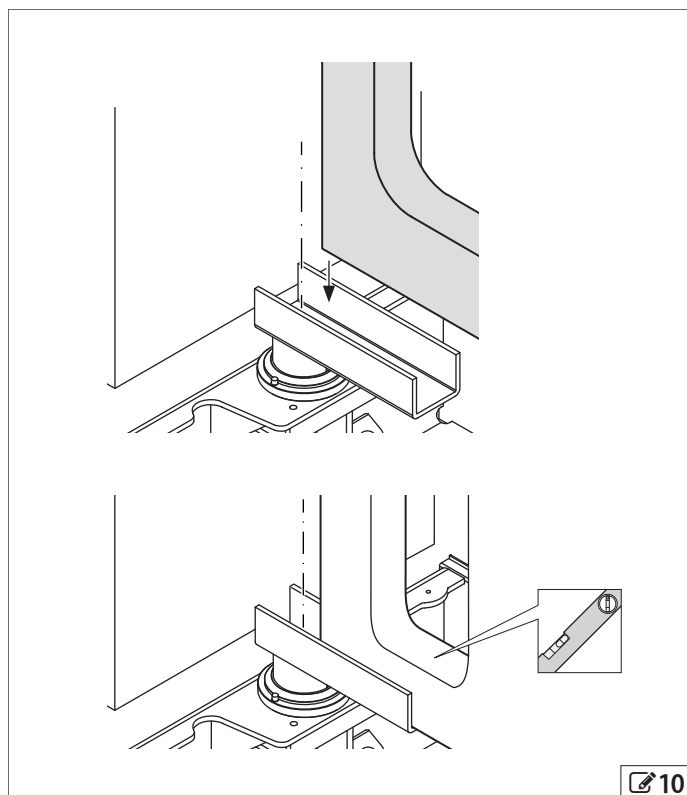

🔗 10

 


5.6 INSTALLING THE ACTUATOR

RISKS



PERSONAL PROTECTIVE EQUIPMENT



**!** Lift the actuator by the handles.

1. Unscrew and remove both caps of the positive stops (🔗 11-1).
  - The actuator is provided with positive stops set for maximum leaf stroke (tightened screws). Ensure both screws are fully tightened (🔗 11-2).

**!** Do not force tightening of the positive stop screws.


2. Assemble a fastening on each positive stop (🔗 11-3).
  - For this stage, insert the fastening screw without tightening it. The fastening screw must be tightened after adjusting the positive stops (§ relative paragraph).
  - Only if positive stops are NOT being used, tighten the fastening screw in this step.

3. Release the actuator by turning the service lever one full turn anti-clockwise (🔗 12-1).


**!** Do not unscrew the service lever by more than one turn so as to prevent oil from leaking.

4. Insert the spanner in the pinion (🔗 12-2) and rotate the pinion until it stops, in the closing direction of the leaf. Then move it back, approximately to angle "α" indicated based on the type of installation or actuator version (🔗 13 or 🔗 14).
  - If the pinion is already turned completely, only move it back.
5. It must now be possible to insert the spanner into the pinion in a parallel position to the closed leaf. Perform a further minimum adjustment if necessary.

Perform steps ① ② ③ for both the positive stops

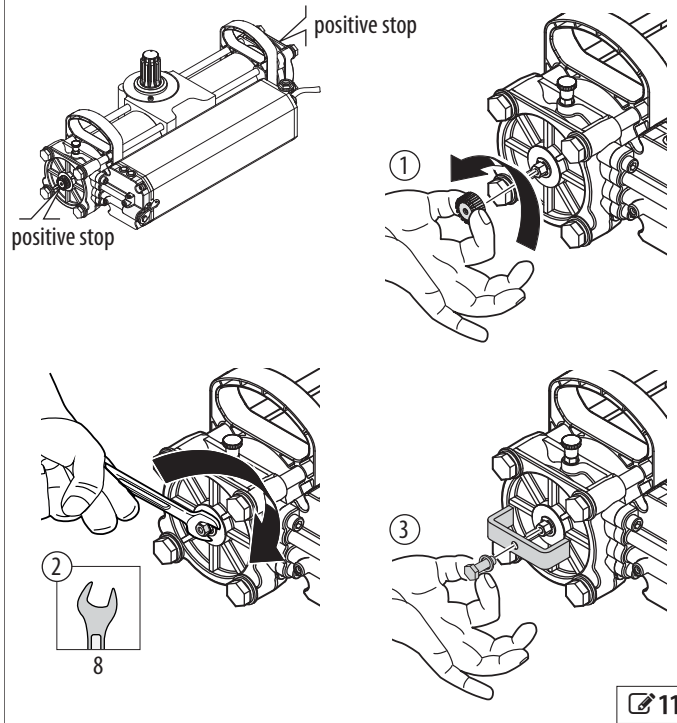


🔗 11

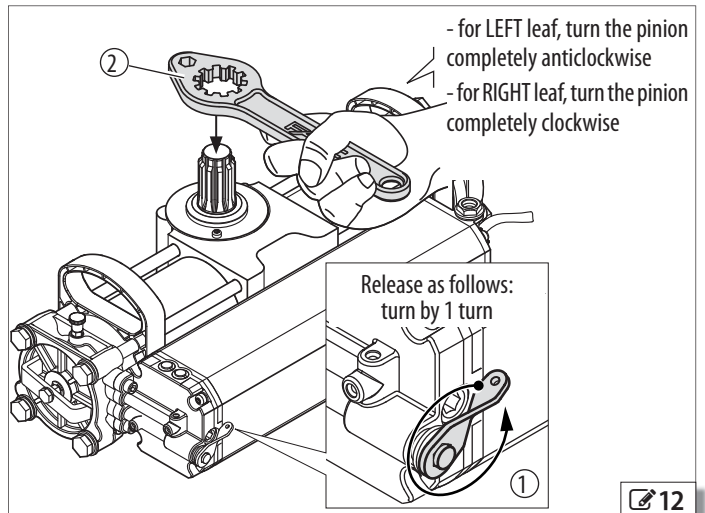

🔗 12


Actuator installed perpendicular to the closed leaf

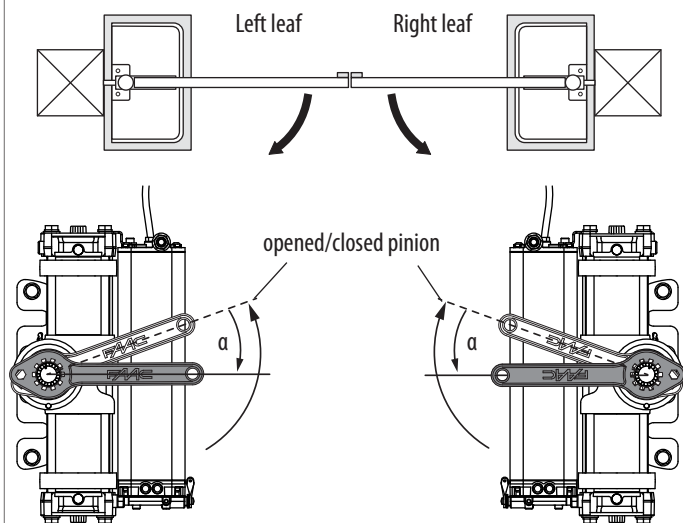

S800 100° versions	α ~3°
S800 180° versions	α ~3°

🔗 14

Actuator installed parallel to the closed leaf

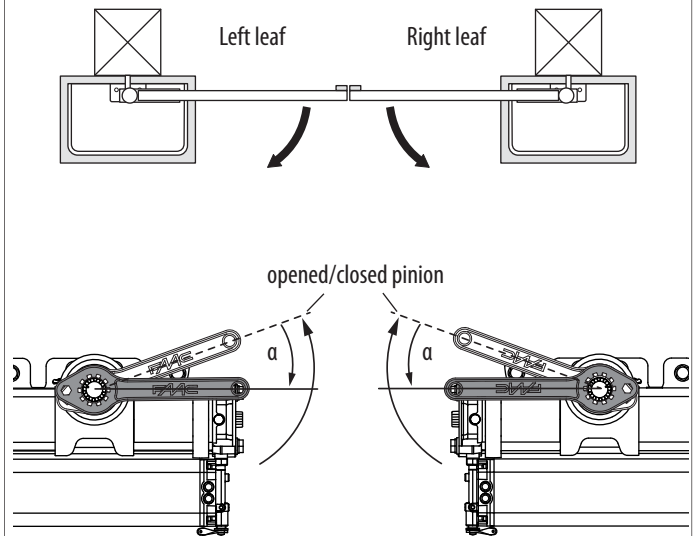

S800 100° versions	α ~20°
S800 180° versions	α ~10°

🔗 13



6. Lubricate the pinion (🔗 15-1).
7. Insert the actuator in the box.
  - The actuator with the pinion must be tilted downwards (🔗 15-2), then place it back in a vertical position and aligned with the grooved joint (🔗 15-3). If necessary, temporarily open the leaf to aid the operation.
  - Be careful not to damage the electrical cables.
8. Lift the actuator and insert the pinion into the joint.

**i** The leaf must be closed during this step.

9. Place the support inserted into the key at the bottom of the box and rest the actuator on it (🔗 15-4).
10. Tighten the tie-rods with the grover in the 2 holes of the box and hooked into the holes of the actuator plate to lift the actuator (🔗 15-5).

**i** Proceed with partial tightening movements, first one tie-rod and then the other, until they stop. A torque wrench must be used to achieve the required tightening torque (🔗 15-6).

11. Open and close the leaf manually to ensure it can be fully opened and closed manually. If not, ensure that all of the installation steps have been carried out correctly. Lastly, remove the key with the support.

**!** When moving it manually, slowly guide the leaf for its entire stroke, do not push the leaf so it moves freely.

## 5.7 ADJUSTING THE POSITIVE STOPS

### On closing

1. With the actuator released and the leaf closed, loosen the screw of the closing positive stop (🔗 16-1 A or B).
2. Stop unscrewing as soon as you feel resistance.

### On opening


1. With the actuator released and the leaf open, loosen the screw of the opening positive stop (🔗 16-1 A or B).
2. Stop unscrewing as soon as you feel resistance.

### Check


1. Manually move the leaf to check the stop positions. If necessary, correct the adjustments.

**!** Slowly guide the leaf as it moves so as to avoid impact on the positive stops.

2. Block the positive stops by tightening the fastening screws (🔗 16-2).
3. Restore the actuator by turning the service lever clockwise until it stops (🔗 16-3).

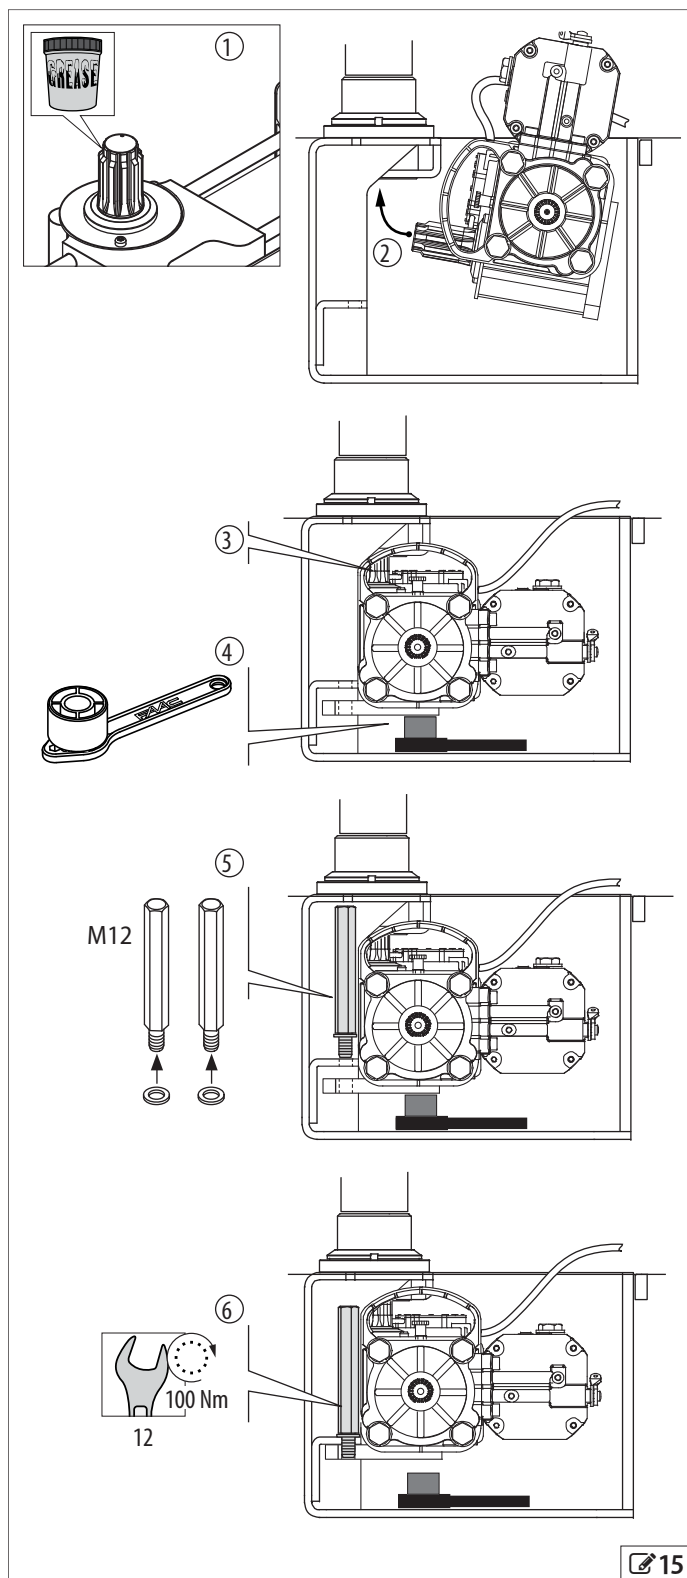

🔗 15

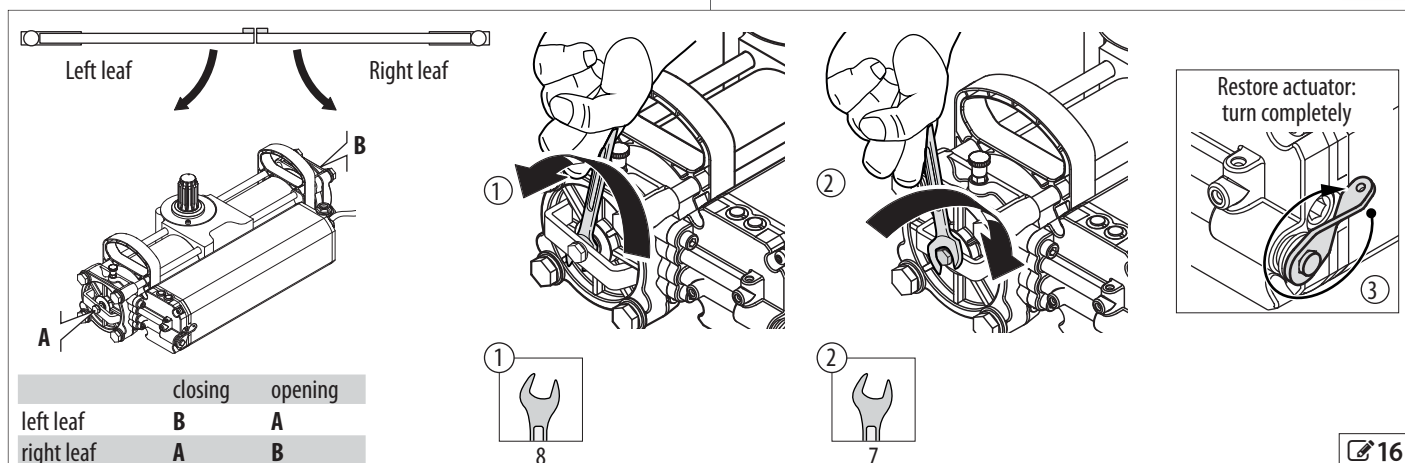

🔗 16

## 6. START-UP

**RISKS**



**PERSONAL PROTECTIVE EQUIPMENT**



Before setting up electrical connections, disconnect the power supply of the automation. If the disconnecting switch is not visible, put up a "ATTENTION - Maintenance in progress" sign.

1. Set up the electrical connections according to the instructions of the electronic control board and the installed accessories.

**Electric motor cable**

yellow-green	earth
blue	neutral
brown	phase 1
black	phase 2

2. Turn the mains power supply back on.
3. Switch the electronic board on according to the specific instructions. If the motor rotates the wrong way, disconnect the power and swap the wires of phases 1 and 2.

### 6.1 FORCE ADJUSTMENT (BY-PASS)

**RISKS**



**PERSONAL PROTECTIVE EQUIPMENT**



Adjust the by-passes in accordance with the applicable standards (EN 12445).

1. Remove the protective caps ().
2. Adjust the opening and closing force by actuating the automation electrically and using the by-pass screw corresponding to the manoeuvre in progress ():

screw A = adjusts the force of clockwise leaf movement  
 screw B = adjusts the force of anticlockwise leaf movement  
 tighten to increase the force +  
 loosen to decrease the force -

3. Set the protective caps back in place ().

### CLOSURE OF THE BOX

Close the cover of the box with the supplied screws ().

### 6.2 FINAL OPERATIONS

1. Ensure that the forces generated by the leaf are within the limits allowed by the standard. Use an impact curve gauge in accordance with standards EN 12453 and EN 12445. For countries outside the EU, when there is no specific local standard, the force must be less than 150 N static.
2. Ensure that the maximum manual moving force of the leaf is less than 220 N.
3. Use appropriate signs to highlight the areas where residual risks remain despite having implemented all safety measures.
4. Put up the "DANGER: AUTOMATIC MOVEMENT" sign on the gate

in a visible position.

5. Put up the CE marking on the gate.
6. Complete the EC Declaration of Conformity of the machine and the system Logbook.
7. Provide the owner/operator of the automation with the EC Declaration, the system Logbook with the maintenance schedule and the user instructions of the automation.

**SCREW**



**A** adjusts the clockwise movement force of the leaf (a)

**B** adjusts the anticlockwise movement force of the leaf (b)


**ADJUSTMENT**

+ tighten to increase the force

- loosen to decrease the force

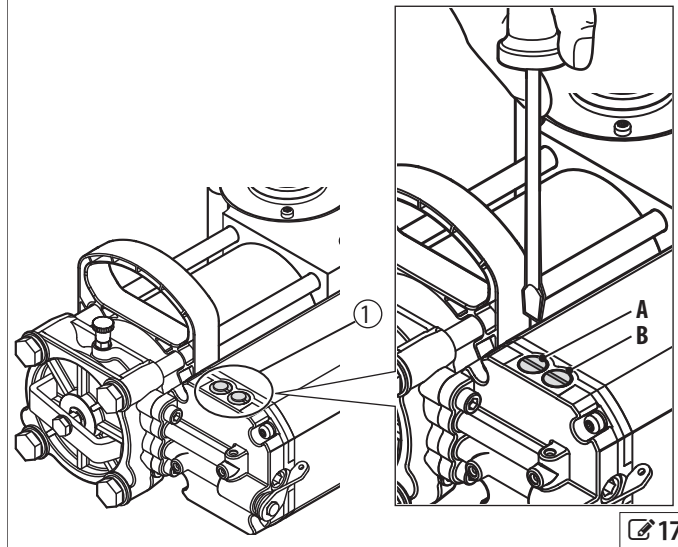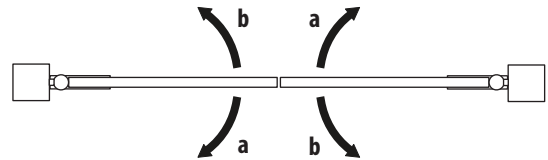

17

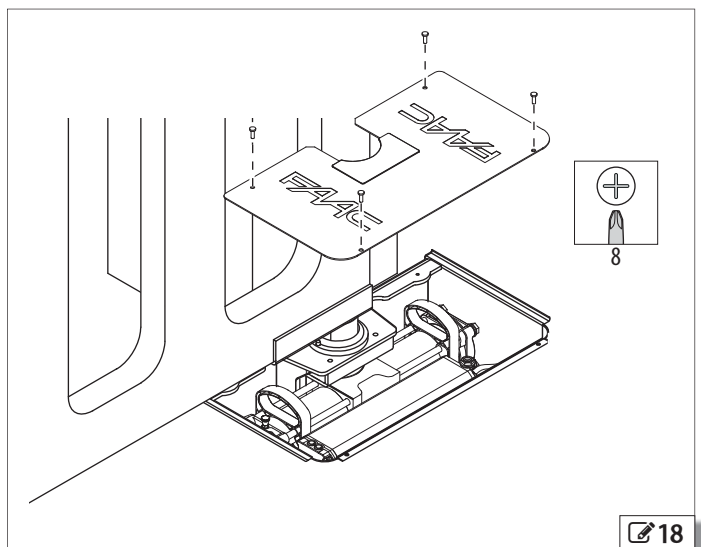

18

## 7. MAINTENANCE

### RISKS



### PERSONAL PROTECTIVE EQUIPMENT



### REQUIRED TOOLS



**⚡** Before performing any maintenance, disconnect the mains power supply. If the disconnecting switch is not visible, apply a "ATTENTION - Maintenance in progress" sign. Restore the power supply once maintenance is complete and after tidying up the area.

**!** Maintenance must be performed by the installer/maintenance technician.

Comply with all the safety instructions and recommendations provided in this manual.

Close off the work site and prevent access/transit. Do not leave the work site unattended.

The work area must be kept tidy and clear upon completing maintenance.

Before starting activities, wait for the components subject to heating to cool down.

Do not modify the original components in any way.

FAAC S.p.A. disclaims any liability for damage caused by components that are modified or tampered with.

**i** The warranty shall be forfeited in the event of tampering with components.

For replacements, use only original spare parts FAAC.

### 7.1 ROUTINE MAINTENANCE

The table **7** Routine maintenance (**16**) lists a rough guide of routine operations, which are guidelines and are in no way exhaustive, to maintain the automation efficient and safe. It is the responsibility of the machine installer/manufacture to define the maintenance schedule of the automation, integrating the list or changing the service intervals based on the features of the machine.

	bleed on opening	bleed on closing
Left leaf	A	B
Right leaf	B	A

## 7.2 OPERATING PROBLEMS

### **7** Guide to solving malfunctions

CONDITION	SOLUTION
The gate does not perform the SETUP	ensure the actuator is not blocked check the presence of the power supply
The gate does NOT OPEN	check motor check for faults/errors in the actuator
The gate CLOSES instead of OPENING and vice versa	invert the motor connection phases and perform a SETUP
The gate performs movements at very low speed	check the set force check the set slowdown spaces
Irregular movement (jerks)	check for air in the hydraulic circuit. Bleed
Excessively noisy automation	there is air in the hydraulic circuit. Bleed check the verticality of the leaves

### BLEEDING

1. Remove the protective caps (**19-1**).
  2. Command the gate to open. During the stroke of the leaf, loosen the screw (**19-2A** or **B**): oil emulsified with air leaks out.
  3. Tighten the screw before the leaf completes the stroke.
  4. Command the gate to close. During the stroke of the leaf, loosen the screw (**19-2A** or **B**): oil emulsified with air leaks out.
  5. Tighten the screw before the leaf completes the stroke.
- Repeat the procedure until non-emulsified oil comes out.
6. Set the protective caps back in place (**19-1**).

### TOPPING-UP THE OIL LEVEL

1. Remove the cap (**19-3**). Check the oil level: it should be just below the cap.
2. Top-up, if necessary. Set the cap in place again.

**!** Only use FAAC oil.

Perform bleeding after topping up the oil level.

**8 Routine maintenance**

If the checks listed below reveal conditions other than those foreseen, they must be restored.

<b>Operations</b>	<b>Frequency</b>
<b>Structures</b>	
Check the structure that the gate, plinth and building/fencing parts adjacent to the automation are fastened to: absence of damage, cracks, fractures, failures.	12
Check the movement area of the gate: absence of obstacles, absence of objects/deposits which reduce safety clearances.	12
Check the absence of hooking points or dangerous prongs.	12
<b>Gate</b>	
Check the gate and its fastenings: integrity, no deformations or rust, etc.	12
Check the correct tightening of screws and bolts.	
Check the concentricity between the upper hinge of the leaf and the lower rotation fulcrum provided by the foundation box.	12
Check hinges and bearings: integrity, perfectly positioned and fastened in place, no deformation, rust, etc.	12
Lubricate hinges and/or bearings if necessary.	12
Check the mechanical stops: fastening and solidity. Both sides must be checked, simulating the impact that they could undergo during use.	12
Check the guide bracket of the leaf: integrity, absence of deformation and rust, proper fastening, etc.	12
Check the absence of wear/collapsing which could jeopardise the condition that all the weight of the leaf bears on the lower rotation fulcrum.	
Check the anti-falling device: fastening and integrity.	12
General cleaning of the gate operating area.	12
<b>Actuator</b>	
Check the integrity and correct fastening.	12
Check the sturdiness of the connections that attach the actuator to the leaf to avoid uncontrolled movements of the leaf should it break.	12
Check the welding of the joint on the guide bracket.	
Check reversibility and irreversibility.	12
Check that there is no oil leakage.	12
Top up the oil level, if necessary. Only use FAAC oil.	12
Bleed the oil, if necessary.	12
Clean the actuator and the foundation box	
Check drainage efficiency.	12
Check the integrity of the actuator cables, of the cable glands and of the junction boxes.	12
<b>Electronic equipment</b>	
Check the integrity of the electronic board enclosure.	12
Check the integrity of the power and connection cables and of the cable glands.	12
Check the integrity of the connectors and of the wiring.	
Check that there are no signs of overheating, burns, etc. on electronic components.	12
Check the integrity and proper operation of the limit switches, if used.	12
Check the integrity of the earthing connections.	12
Check proper operation of the circuit breaker and residual current device.	12
<b>Control devices</b>	
Check the integrity and proper operation of the installed devices and of the remote controls.	12
<b>Sensitive edges</b>	
Check: integrity, fastening and proper operation.	6
<b>Deformable edges</b>	
Check: integrity and fastening.	12
<b>Photocells</b>	
Check: integrity, fastening and proper operation.	6
Check the columns: integrity, fastening, no deformation, etc.	6
<b>Flashing light</b>	
Check: integrity, fastening and proper operation.	12
<b>Electric locks</b>	
Check: integrity, fastening and proper operation.	12
Clean the insertion seats.	

<b>Access control</b>	
Check that the gate opens correctly only with authorised user recognition.	12
<b>Complete automation</b>	
Check that the automation works properly, according to the programmed logic, using the various control devices.	12
Check that the gate moves correctly, smoothly and regularly without any strange noise.	
Check its correct opening and closing speed and that it follows the intended slowdowns.	12
Check proper operation of the manual release: when the release is activated, the gate should only be able to be moved manually.	6
Check the presence of lock caps.	
Ensure the maximum manual moving force of the leaf is less than 220 N.	6
Check the proper operation of the safety edges for obstacle detection.	6
Check the proper operation of the encoder for obstacle detection.	6
Check the proper operation of each pair of photocells.	6
Check that there is no optical/luminous interference between the pairs of photocells.	6
Check the limitation curve of the forces (standards EN 12453 and EN 12445). For countries outside the EU, when there is no specific local standard, the force must be less than 150 N static.	6
Check the presence, integrity and legibility of all the necessary signs: residual risks, exclusive use, etc.	12
Check the presence, integrity and legibility of the CE marking of the gate and of the DANGER AUTOMATIC MOVEMENT warning sign.	12

## 8. INSTRUCTIONS FOR USE

It is the responsibility of the machine installer/manufacturer to draft the user instructions of the automation in accordance with the Machinery Directive, including all the required information and instructions based on the characteristics of the automation.

The guidelines below, which are purely indicative and in no way exhaustive, help the installer draft the user instructions.



The installer must provide the owner/operator of the automation with the EC Declaration, the system Logbook with the maintenance schedule and the user instructions of the automation.

The installer must inform the owner/operator of any residual risks and the intended use and ways in which the machine should not be used.

The owner is responsible for operating the automation and must:

- comply with all User instructions provided by the installer/maintenance technician and the Safety recommendations
- keep the user instructions
- have the maintenance schedule implemented
- keep the system Logbook, which must be completed by the maintenance technician at the end of all servicing

### 8.1 SAFETY RECOMMENDATIONS

Systems set up with FAAC S800 series underground actuators are intended for vehicle transit.

The user must be in good physical and mental condition, aware of and responsible for the hazards that may be generated when using the product.



- Do not use the automation when its range of action is not clear of people, animals or objects.
- Do not pass and/or stop within the automation's range of action while it is moving.
- Do not allow children to come close or play near the automation's range of action.
- Do not obstruct the movement of the automation.
- Do not climb onto, hold onto or be pulled by the leaf.
- Do not allow the control devices to be used by persons who are not specifically authorised and trained.
- Do not allow the control devices to be used by children or persons with reduced mental-physical abilities, unless under the supervision of an adult responsible for their safety.
- Do not use the automation with faults/tampering which could jeopardise safety.
- Do not expose the automation to aggressive chemical or environmental agents; do not expose the actuator to direct water jets of any type or amount.
- Do not perform any operation on the automation components.

### 8.2 USE IN AN EMERGENCY

Environmental phenomena, even occasional, such as ice, snow and strong wind may hinder correct operation of the automation and affect component integrity and may become a potential source of danger.

In any malfunction, emergency or fault, disconnect the power supply of the automation. If the conditions allow the leaf to be safely moved manually, use the MANUAL OPERATION; otherwise, keep the automation out of service until it is restored/repaired.

In case of a fault, the automation must be restored/repaired must only be carried out by the INSTALLER/MAINTENANCE TECHNICIAN.

### 8.3 MANUAL OPERATION



Before performing the Release manoeuvre, disconnect the power supply of the automation.

When moving it manually, slowly guide the leaf for its entire stroke, do not push the leaf so it moves freely.

Do not leave the gate unlocked: after performing manual movement, restore automatic operation.


#### RELEASE MANOEUVRE

1. Open the cap of the lock (🔧 20-1).
2. Insert the key and turn it one anti-clockwise turn until it stops (🔧 20 -2), then move the gate manually.



#### RESTORING AUTOMATIC OPERATION

1. Turn the key by one clockwise turn until it stops (🔧 20-3).
2. Ensure manual movement is prevented, then remove the key and close the cap (🔧 20-1).

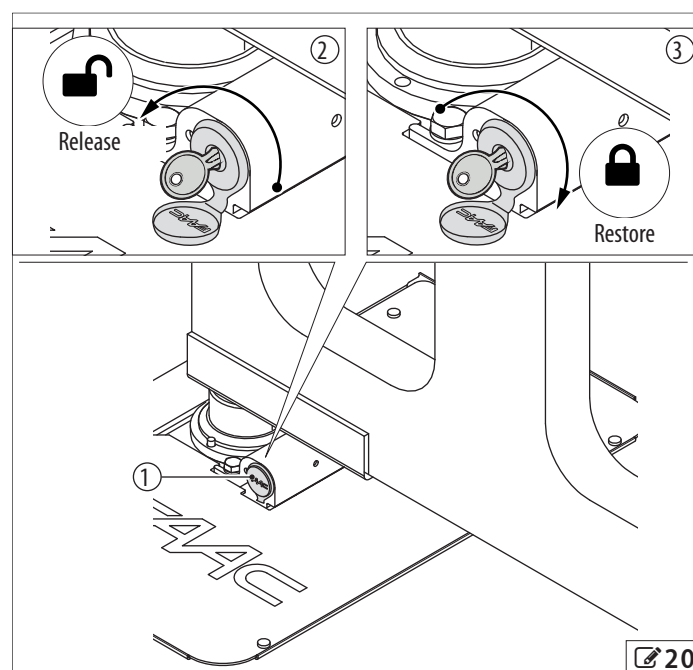



# 1 The limits of use of S800 in relation to the wind

The table shows the maximum wind allowed for S800 based on the leaf surface exposed to the wind. Winds that exceed those allowed may affect the integrity of the mechanical transmission components of S800. It is the responsibility of the installer to assess the impact of the wind on all the elements of the structure (columns, hinges, leaves) in order to define the maximum wind allowed for the automation.

Exposed area (m <sup>2</sup> )	Leaf length (m)													
	1	1.25	1.5	1.75	2	2.25	2.5	2.75	3	3.25	3.5	3.75	4	
1	12								11					
2			11			10			9					
3	10													
4														
5														
6	9													
7														
8														
9	8													
10														
11														
12														
13	7													
14		6												
15					5									
16							4							

Strength and name of the wind (Beaufort scale)		Wind speed (km/h)
0	Calm	≤ 1
1	Light air	> 1...6
2	Light breeze	> 6...11
3	Gentle breeze	> 11...19
4	Moderate breeze	> 19...29
5	Fresh breeze	> 29...39
6	Strong breeze	> 39...50
7	Near gale	> 50...62
8	Gale	> 62...75
9	Severe gale	> 75...87
10	Storm	> 87...102
11	Violent storm	> 102...117
12	Hurricane	> 117

# 2 Limits of use of the positive stops

The limits of use of the positive stops in relation to the length and weight of the leaf are indicated in the table below. Using positive stops beyond the allowed limits is not advisable. If using the integrated mechanical stops beyond the admissible limits is unavoidable, the minimum positive stop speed must be obtained by setting at least 30° at slowdown speed.

Leaf weight (kg)	Leaf length (m)													
	1	1.25	1.5	1.75	2	2.25	2.5	2.75	3	3.25	3.5	3.75	4	
50														
100														
150														
200														
250														
300														
350														
400														
450														
500														
550														
600														
650														
700														
750														
800														


- ✓ = Use of positive stops ALLOWED
- ✗ = Use of positive stops NOT RECOMMENDED


ENGLISH


Translation of the original instructions



3 Foundation for leaf of MAX weight and width

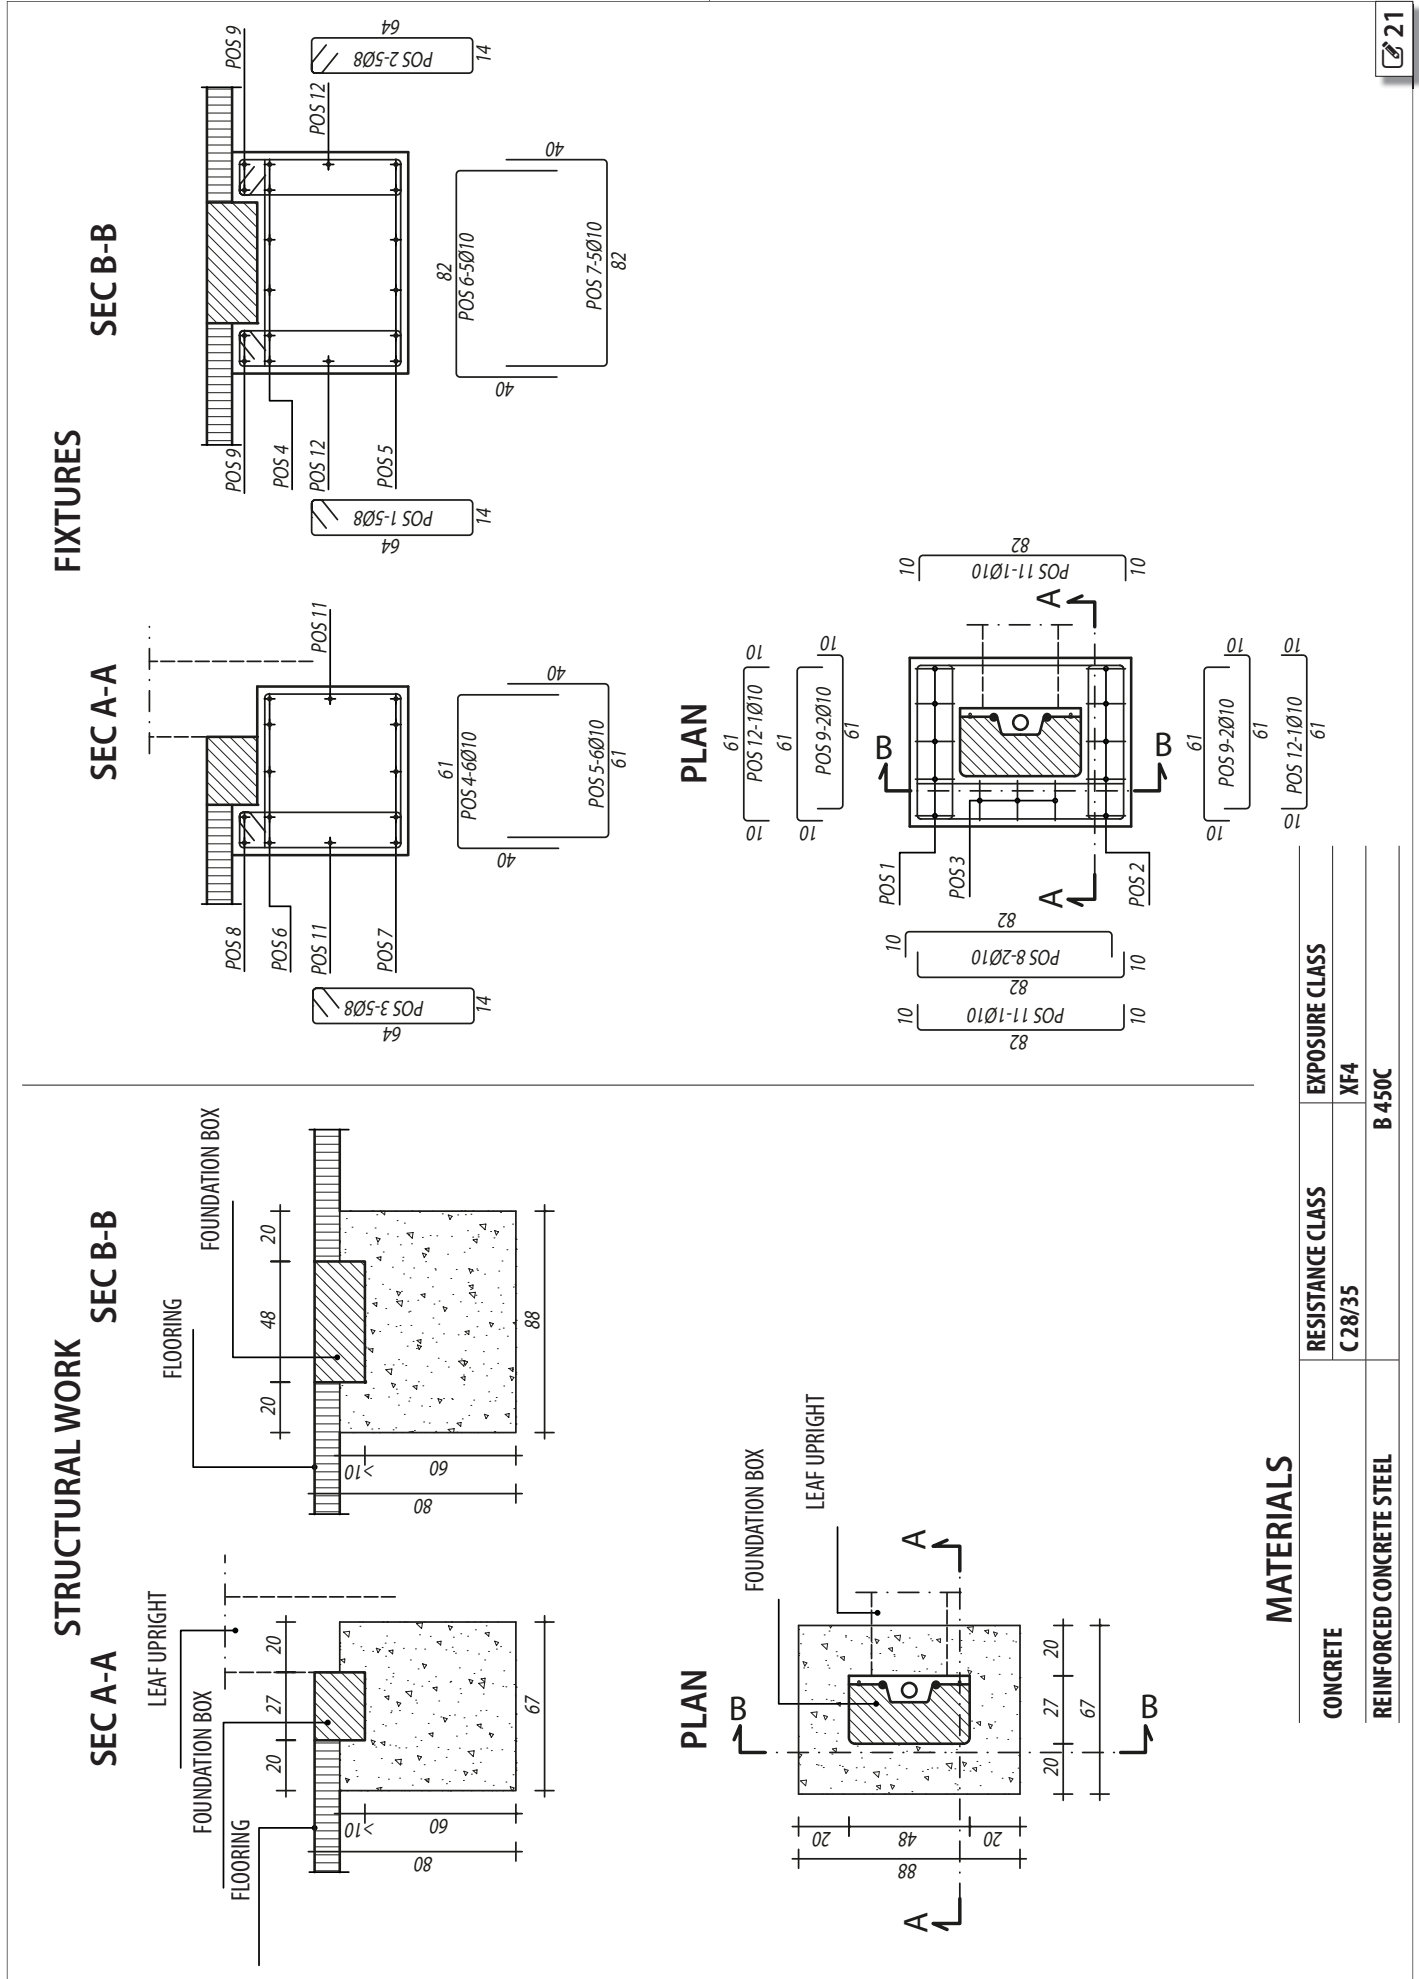

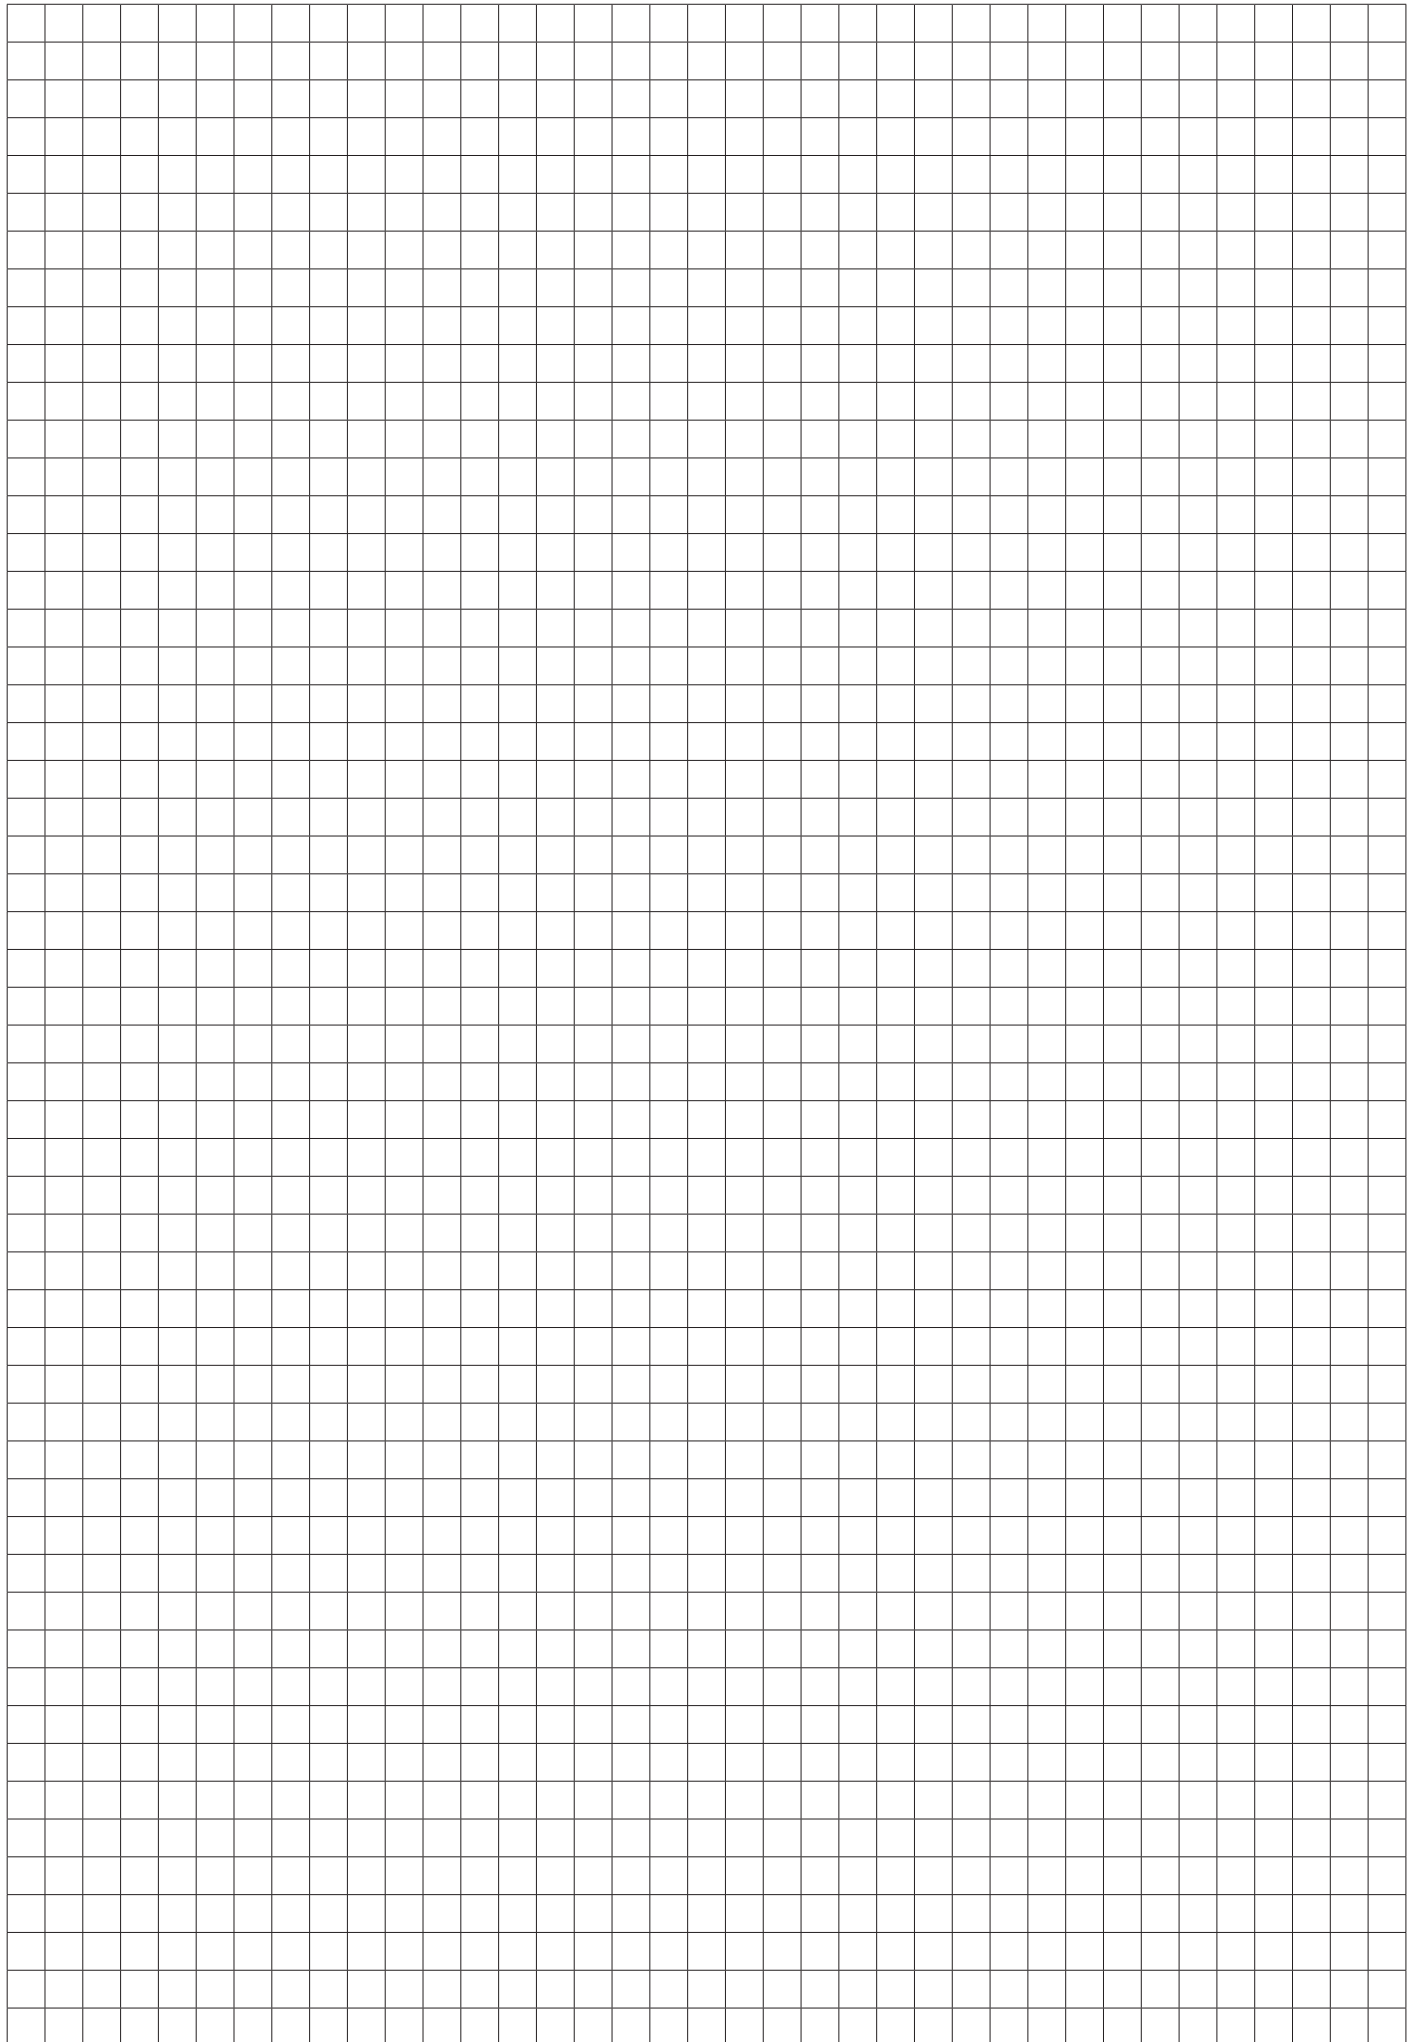

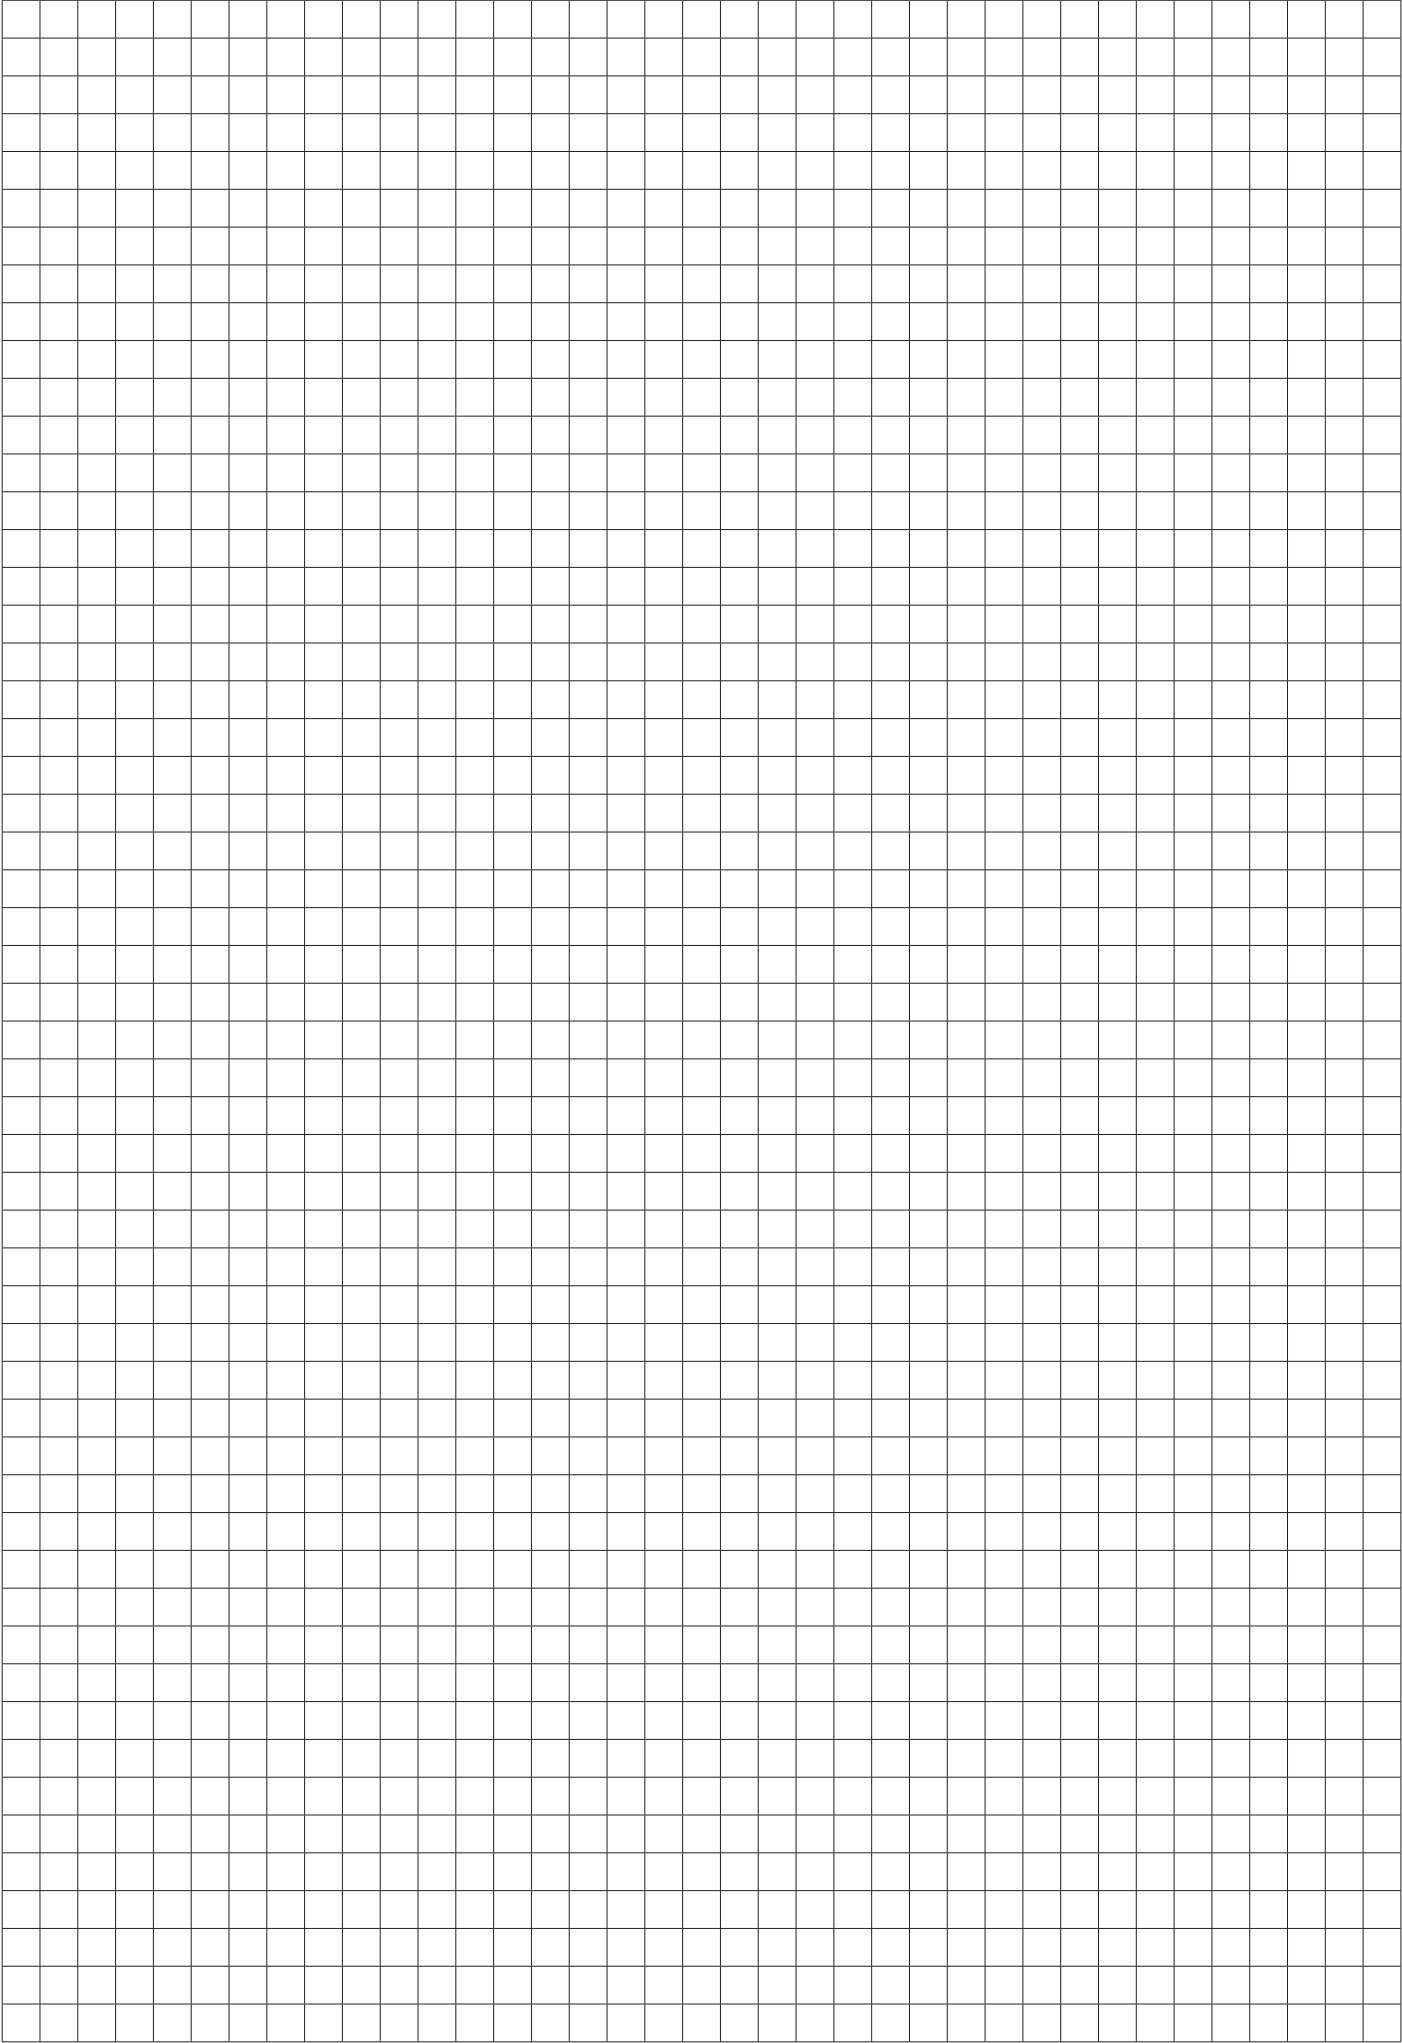



FAAC S.p.A. Soc. Unipersonale  
Via Calari, 10 - 40069 Zola Predosa BOLOGNA - ITALY  
Tel. +39 051 61724 - Fax +39 051 758518  
[www.faac.it](http://www.faac.it) - [www.faacgroup.com](http://www.faacgroup.com)