 


## ■ OPERATION RANGE

Communication must be between operated locations on the same power transformer.

Avoid locations where there is a sub-transformer between them.

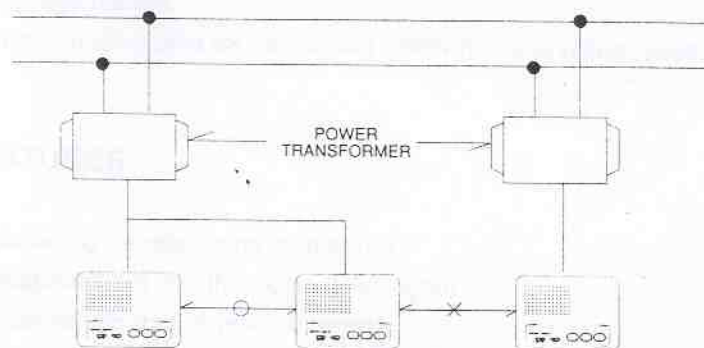

 
## ■ SPECIFICATIONS

Power source	AC 110 -120V, 60Hz AC 220 -240V, 50Hz
Power consumption	5W
Frequency	Ch A : 230 KHz Ch B : 260 KHz Ch C : 290 KHz
R.F Output power	100 mW
Audio output power	500 mW
Dimension	183(W) × 130(D) × 35(H)mm
Weight	450g



# 3 CHANNEL FM WIRELESS INTERCOM

Model WI-3SN

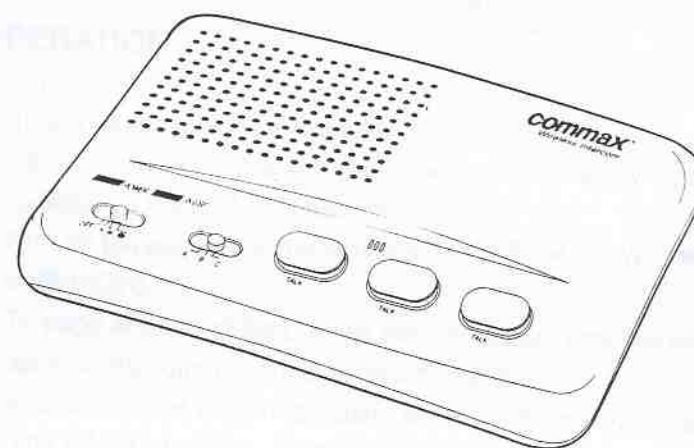

JUNG ANG ELECTRONICS CO., LTD.

## ■ INTRODUCTION

Thank you very much for your selecting our 3 channel F. M. wireless intercom (Model WI-3SN)

The condenser microphone of this intercom produces a high-sensitivity. The phase locked loop (P.L.L) and frequency modulation (F.M.) circuit produces high-fidelity.

A Filter circuit is also for minimizing interference and line noise.

## ■ FEATURES

 
- \* No wiring between sets is required.
- \* Plug each set into the nearest AC outlet.
- \* Push to talk and remove to listen.
- \* Can be used as a monitor for the BABY'S ROOM or any room in the house.

## ■ CAUTION

Please refer to the following conditions when using this item.

- \* The intercom should be situated away from heat sources such as radiators, heat registers, stoves or other items that produce heat.
- \* The intercom should not be used near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, etc.
- \* Please avoid use of this item at low temperature.
- \* Care should be taken so that liquids are not spilled into or on top of either unit.
- \* Power supply cords should be routed so that they are not likely to be walked on or pinched by other items placed upon or near them.
- \* The power cord to the intercom should be unplugged from the AC outlet when left unused for a long time.
- \* In case of use with other electronics such as T.V., hairdryer, fan, computer, etc. line noise may happen.

## ■ CONTROL AND FUNCTIONS

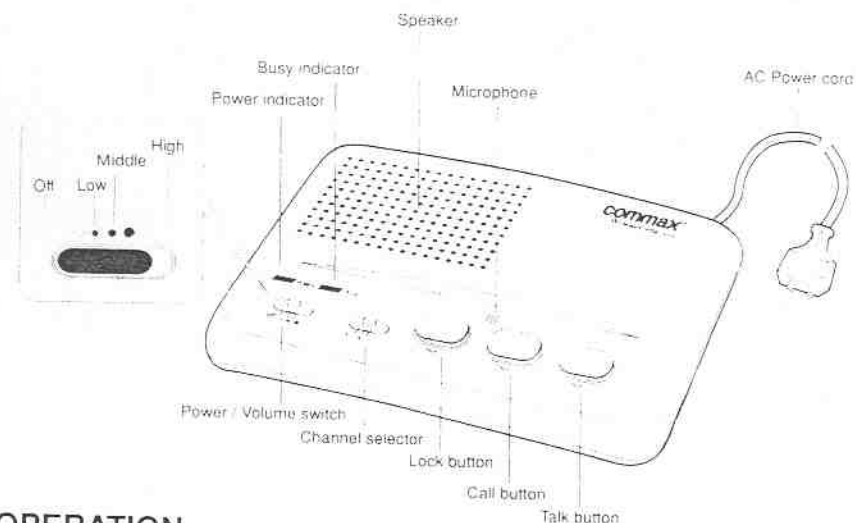

## ■ OPERATION

1. Simply plug each unit into an AC outlet.
  2. Set each intercom station to the desired channel by setting the channel selector to the A, B or C position.
  3. Turn on the power/volume switch to ○ (OFF), ● (LOW), ● (MIDDLE) or ● (HIGH).
  4. To page another station, press the call button, and this will produce a call tone on the same channel to all other units.
  5. In order for the receiving station to respond, press the talk button to talk and release to listen. Speak in a normal voice from arms length for best results.
  6. To listen to a reply, remove your finger from the talk button, and the other station can now send a message.
  7. For dictating or sending long messages, just push the lock button down and talk as long as you want.
  8. In order to listen to the reply, you need to push the lock button down to release it. This will allow a reply to be received from any station.
- Note : When a station is locked into the talk mode, it cannot receive a message or call tones from other stations.