

SERVICE INSTRUCTIONS FOR THE STAFF

FOR REMOTE CONTROL PANEL IFS7002R

1. Indications of IFS7002R

1. Common indicator for fire condition
2. Common indicator for fault condition
3. Indicator for *System error*
4. Indicator for *Fault in power supply*
5. Indicator for *Disabled component*
6. Test indicator
7. Indicator for *Power supply*
8. LCD touch-panel display

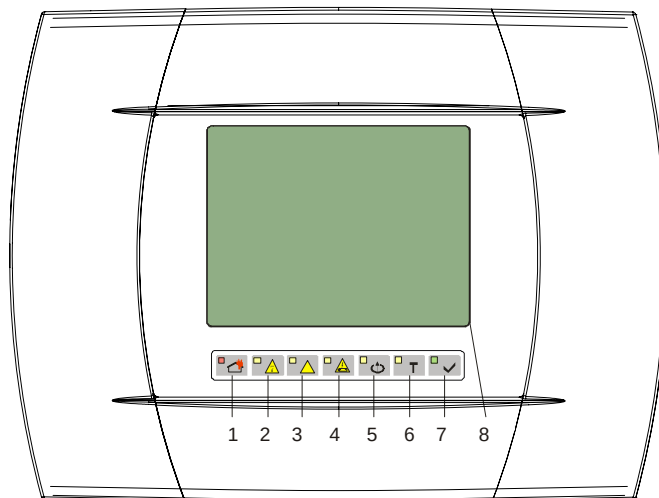


Fig.1

2. Duty mode

When the control panel is in this condition, only the green LED indicator  (Power supply) is illuminated. The local sounder is switched off.

The logo of the company-producer, information for the current local time and the mode of operation (DAY or NIGHT) are shown on the panel's display.

3. Actions of the staff on duty when a signal for fault condition is released

Light indications for various types of faults are shown on Fig. 1. Upon any registered fault condition the sounder of the fire control panel releases discontinuous signal.

In the case of Fault condition the indicator  illuminates compulsory and a text message appears on the display showing the number of the occurred faults. Enter Information and Control Mode (button ) , to reveal on the display all faults. To stop the sound signaling, press the button  (Stop Alarm). Press it once to stop the local sounder of the fire control panel, press it twice to stop the sounder in the specific remote fire control panel. The button appears on the display when the fire control panel enters Fault condition and it is deleted when it is pressed or when all fault conditions in each of the connected fire control panels are removed.

In all other cases when fault condition is signaled press button  to stop the sound signaling and inform the service company.

4. Actions of the staff on duty when a signal for fire condition is released

When a signal for fire condition is released in one or several remote control panels the sounder of the panel produces discontinuous signal (5 sec sound, followed by 5 sec break) and the indicator  illuminates.

Text messages appear on the display indicating the control panel, the zone/zones and device/devices, the time remaining before the control panel proceeds to Fire condition stage II.

In this situation, do the following:

4.1. Press once button  (Stop Alarm) to turn off the local sounder of the control panel, press the button twice to suppress the sounder of the remote fire control panel shown opposite the cursor.

FIRE CONDITION				ZONES IN FIRE: 3	
1	Phase 1	Zone 001	REM #2	Time Fire Phase2:	115
		Zone 001			
3	Phase 1	Zone 002	REM #4	Time Fire Phase2:	120
		Zone 002			
Devices in Fire					Total number: 4
1	Loop 01	Zone 001	Addr 001	Object:	REM #2
		Point 1.001			
2	Loop 02	Zone 003	Addr 001	Object:	REM #2
		Point 2.001			
4	Loop 01	Zone 002	Addr 002	Object:	REM #4
		Point 1.002			
Faults total: 00000/0000*			Failed Outputs:00000		
Disables total: 000			Disabled Outputs:000		
     					
Mode: DAY REP ActInp 0000 11:11:08 Thu 25 Aug 2011					

4.2. Press button  to suppress the activated outputs. When it is pressed a screen appears on the display requesting a password for Access Level 2 to be entered. To enter password use the buttons with digits. The length of the password can be 10 symbols maximum. After entering the password, press the button .

4.3. If the protected site is large and you need more time to reach the place of fire indicated by the repeater, press button  (Inspection). This will add extra time until the respective fire control panel proceeds to Fire condition Stage II, respectively until the outputs for starting the signaling, blocking and extinguishing are activated.

4.4. Check as fast as possible the indicated zones and localized address of the devices for fire condition.

4.5. Possible options for further actions:

4.5.1. If there is no fire (smoke, heat, flame) and the activation of the fire detector is a “false” one, go back to the fire control panel as fast as possible and press the rest button . When it is pressed a screen appears on the display requesting a password for Access Level 2 to be entered. To enter password use the buttons with digits. After entering the password, press the button .

4.5.2. In the case that new “false” activation occurs in the same zone/zones and device/devices, press button  (Stop Alarm) to stop the sound signaling. If an output is activated press button  to suppress it. When it is pressed a screen appears on the display requesting a password for Access Level 2 to be entered. To enter password use the buttons with digits. Press button .

4.5.3. In the case that there is a Fire condition (smoke, heat, flame) activate the closest manual call point or as fast as possible go back to the fire control panel in Fire condition and press buttons  and  to activate the signaling, blockings and extinguishing. Button  is pressed once or twice until its graphic display becomes , indicating that the outputs are activated. Then undertake the measures stipulated in the Fire Rules at the site in the case of fire.

ATTENTION: The remote control panel remains in Fire condition until all zones and remote panels in Fire condition are reset.