



## **AirMax4GW**

# **LTE Outdoor CPE with WiFi Quick Installation Guide**

## Support

You can download the complete guides and supporting programs from <http://www.airlive.com/product/airmax4gw/document>, or scan the QR code here.



Please consult with the FAQs <http://www.airlive.com/product/airmax4gw/faq> before writing to OvisLink Tech Support Team for further assistance



For any other question, please read the user manual in the CD or mail to [tech@airlive.com](mailto:tech@airlive.com) for technical support.

## AirMax4W Package Contents

Please check the package contents and contact your distributor if any part is missing.



AirMax4GW



Mounting Kit





User  
Manual  
CD



Quick  
Installation  
Guide

## I/O Interface

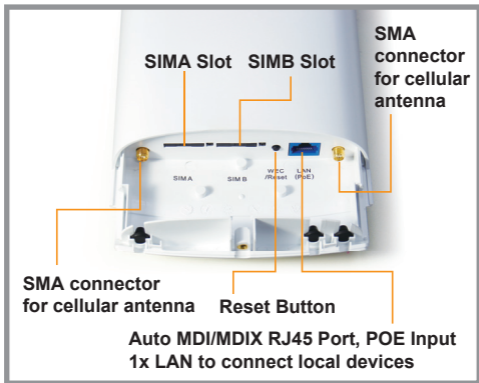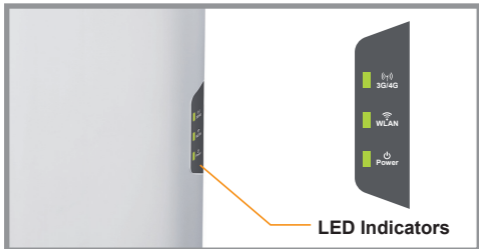

## 01 Insert the SIM card

**Important:** Please insert SIM card when Power is off

Step 1: Unscrew the bottom of Cover and Remote it



## 01 Insert the SIM card

**Important:** Please insert SIM card when Power is off

Step 2: Unlock the SIM socket



## 01 Insert the SIM card

**Important:** Please insert SIM card when Power is off


Step 3: Place SIM Card Properly



## 01 Insert the SIM card

**Important:** Please insert SIM card when Power is off

Step 4: Put Back SIM Socket

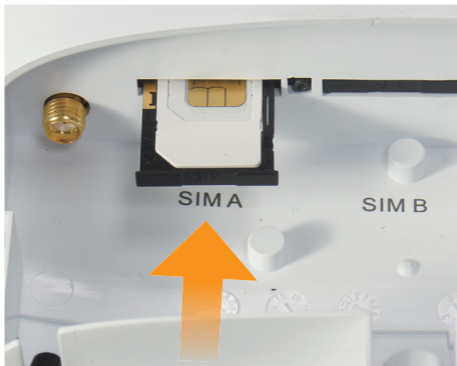



## 02 Power Up AirMax4GW

Step 1: Insert Cat 5e. RJ45 cable into LAN Port




## 02 Power Up AirMax4GW

Step 2: Put back the cover and fasten the screw



## 02 Power Up AirMax4GW

Step 3: Connect another side of RJ45 to PoE switch/ PoE injector


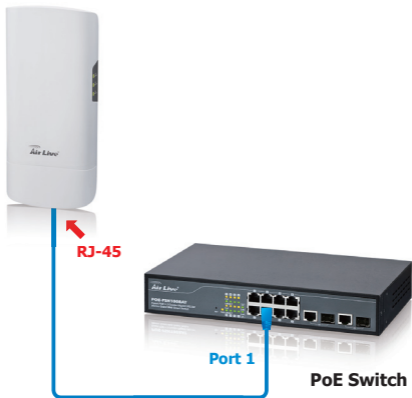


### 03 Mounting the AirMax4GW

AirMax4GW can be wall mounted or pole mounted.

Please follow below pictures to mount to devices

#### Wall Mount Bracket

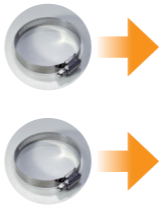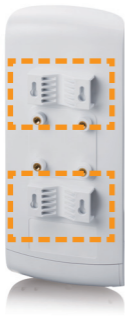

#### Metal Ring Pole Mounting



## 04 Connect to AirMax4GW

After AirMax4GW is powered on. You can connect to SSID "airlive".

AirMax4GW will provide IP to your computer. You donot need to set the IP manually.

### **Default Value**

Default IP: **192.168.123.254**

Password: **airlive**

DHCP: **ON**

## 05 Get into AirMax4GW Webpage

Open the browser and type the  
192.168.123.254

Then AirMax4GW Web Interface will display.



The screenshot shows the AirMax4GW web interface in a browser window. The page title is "AirMax4GW 4G LTE Outdoor Gateway with WiFi". The interface includes a navigation menu on the left and several status tables in the main content area.

**WAN Interface IPv4 Network Status**

WAN ID	Interface	WAN Type	IP Addr.	Subnet Mask	Gateway	DNS	MAC Address	Conn. Status	Actions
10001	WAN1	WAN1	192.168.123.254	255.255.255.0	192.168.123.1	192.168.123.1	192.168.123.254	Up	[Refresh] [Edit]

**WAN Interface IPv6 Network Status**

WAN ID	Interface	WAN Type	Link-Local IP Address	Global IP Address	Connection Status	Actions
10001		Disable				[Refresh] [Edit]

**LAN Interface Status**

IPv4 Address	IPv4 Subnet Mask	IPv6 Link-Local Address	IPv6 Global Address	Actions
192.168.123.254	255.255.255.0			[Edit IPv4] [Edit IPv6]

**3G/4G Modem Status**

Refresh

Physical Interface	Card Information	Link Status	Signal Strength	Network Name	Actions
3G4G	D1821	Connected	45% (45dBm)	ChinaNet Telecom (3G)	[Detail]

**Internet Traffic Statistics**

WAN ID	Physical Interface	Received Packets	Transmitted Packets
10001	3G4G	13821	14261