

# ***Hybrid Security Alarm System User Manual***

---

# Table of Contents

<b>1. INTRODUCTION</b>	<b>1</b>
<b>1.1 WHAT'S IN THE BOX</b>	<b>1</b>
<b>2. PANEL INFORMATION</b>	<b>3</b>
<b>2.1. IDENTIFYING THE PARTS</b>	<b>3</b>
<b>2.2. POWER SUPPLY</b>	<b>7</b>
<b>3. GETTING STARTED</b>	<b>8</b>
<b>3.1. SELECTING MOUNTING LOCATION</b>	<b>8</b>
<b>3.2. MOUNTING</b>	<b>9</b>
<b>3.3. HARDWARE INSTALLATION</b>	<b>12</b>
<b>3.4. SOFTWARE INSTALLATION</b>	<b>24</b>
<b>4. CONNECTION TO PANEL WEBPAGE</b>	<b>27</b>
<b>5. DEVICE MANAGEMENT</b>	<b>28</b>
<b>5.1. LEARNING OF DEVICES</b>	<b>28</b>
<b>5.1.1. Add Sensor</b>	<b>28</b>
5.1.2. Local Learning	29
5.1.3. Edit Devices	30
5.1.4. Delete Devices	34
5.1.5. Identify ZigBee Device	34
<b>5.1.6 Learning of Expansion Boards (WEZC-8, WEZ Series and WEPC-1)</b>	<b>34</b>
<b>5.2. ONVIF IP CAMERA DISCOVERY</b>	<b>36</b>
<b>5.3. ADD RF DEVICE</b>	<b>37</b>
<b>5.4. LEARN RULE</b>	<b>38</b>
<b>5.5. WALK TEST</b>	<b>40</b>
<b>5.6. EXCLUSION</b>	<b>41</b>
<b>5.7. SHUTTER CONTROL TOOL</b>	<b>42</b>
<b>5.8. PSS CONTROL</b>	<b>43</b>
<b>5.9. UPIC CONTROL</b>	<b>44</b>
<b>5.10. SURVEILLANCE</b>	<b>45</b>
<b>5.11. GROUP CONTROL</b>	<b>46</b>
5.11.1. Group Control/Edit	46
5.11.2 Device Edit/Delete	46
<b>5.12. SOUND/SIREN SETTING</b>	<b>47</b>
5.12.1. Device Edit/Delete	47
5.12.2. RF Siren Setup	50
<b>5.13. WIRED ZONES PROGRAMMING</b>	<b>51</b>

5.13.1. 16 On-board Zones and Zone Expanders (WEZC-8, WEZ Series)	51
5.13.2. Output Expander (WEPC-1)	56
<b>6. SYSTEM SETTINGS</b>	<b>59</b>
6.1. PANEL CONDITION	59
6.2. PANEL SETTINGS	62
6.3. PIN CODE	66
<b>7. NETWORK SETTINGS</b>	<b>67</b>
7.1. GSM	67
7.2. NETWORK	70
7.3. WIRELESS	71
7.4. UPNP	72
<b>8. SYSTEM SETTINGS</b>	<b>73</b>
8.1. ADMINISTRATOR SETTING	73
8.2. HOME AUTOMATION	74
8.3. SCENE	79
8.4. REPORTING	81
8.5. CODE SETTINGS	84
8.6. SMTP SETTING	86
8.7. MEDIA UPLOAD	87
8.8. POLLING	88
8.9. XMPP	89
8.10. DATE & TIME	90
8.11. DYNAMIC DNS	91
8.12. TEST IP	92
8.13. FIRMWARE UPGRADE	93
8.14. RF FIRMWARE UPGRADE	94
8.15. IO MCU FIRMWARE UPGRADE	95
8.16. FACTORY RESET	96
8.16.1 Remote Reset	96
8.16.2 Local Reset	96
8.17. BACKUP & RESTORE	97
8.17.1 Backup Data	97
8.17.2 Restore Settings	97
8.18. SYSTEM LOG	98
<b>9. EVENT &amp; HISTORY</b>	<b>99</b>
9.1. CAPTURED EVENTS	99
9.2. REPORTED EVENTS	100
9.3. EVENT LOG	101

**9.4. DEVICE HISTORY** \_\_\_\_\_ **102**

**10. APPENDIX** \_\_\_\_\_ **103**

**10.1. FAULT EVENT DESCRIPTION** \_\_\_\_\_ **103**

**10.2. CONTROL PANEL MODE AND RESPONSE TABLE** \_\_\_\_\_ **104**

**10.3. CROSS ZONE VERIFICATION** \_\_\_\_\_ **106**

**10.4. FIRE VERIFICATION** \_\_\_\_\_ **107**

**10.5. CONTACT-ID PROTOCOL & FORMAT** \_\_\_\_\_ **108**

**10.6. EVENT CODE** \_\_\_\_\_ **109**

# 1. Introduction

The Hybrid Security Gateway is an IP-based multi-functional RF, optional Z-Wave, and/or ZigBee smart home security gateway with 4G/LTE and optional Wi-Fi capability, plus flexible hardwired and wireless sensor zone options, providing comprehensive solutions, including remote management, home security, live visual monitoring, home automation, environmental emergency monitoring, and energy management and being designed to bring all-round convenience, comfort and safety.

## System Feature

- Ethernet / Wi-Fi / Cellular connection: Optional Wi-Fi connection provides backup to Ethernet to extend system flexibility.
- Multiple Communication Paths: The Hybrid Security Gateway has built-in RF, Optional Z-Wave, and/or ZigBee modules.


The Hybrid-Panel Series include the following models:

Name	Reporting Path	Modules
Hybrid-Panel-1-AC16/18V	IP/GPRS Reporting	IP Gateway supporting Sealed Lead-Acid (SLA) rechargeable battery (battery not included)
Hybrid-Panel-1-AC100/240 V	IP/GPRS Reporting	IP Gateway supporting Sealed Lead-Acid (SLA) rechargeable battery (battery not included)

## 1.1 What's in the Box

Your package includes the following items:


- Control Panel

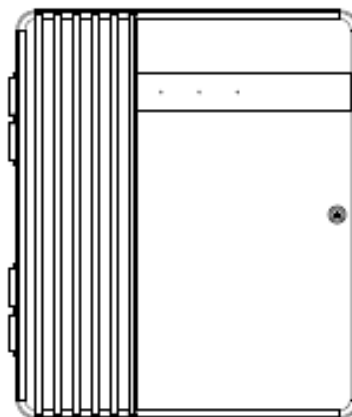







- Open Frame Power Cord (Hybrid-Panel-1-AC100/240V Only)

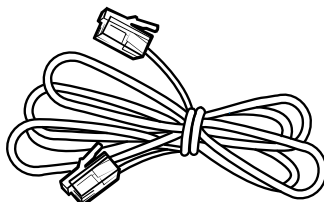

- An Ethernet Cable

 


- Accessories:

Velcro tape x 4	
Jumper Connector x 2	
U-shaped Grommet x 4	
5.6K Resistor (2 resistors for each zone, 32 resistors for 16 zones in total)	
Screw x 4	
Wall Plug x 4	


## 2. Panel Information

### 2.1. Identifying the parts

Top Cover (front view)

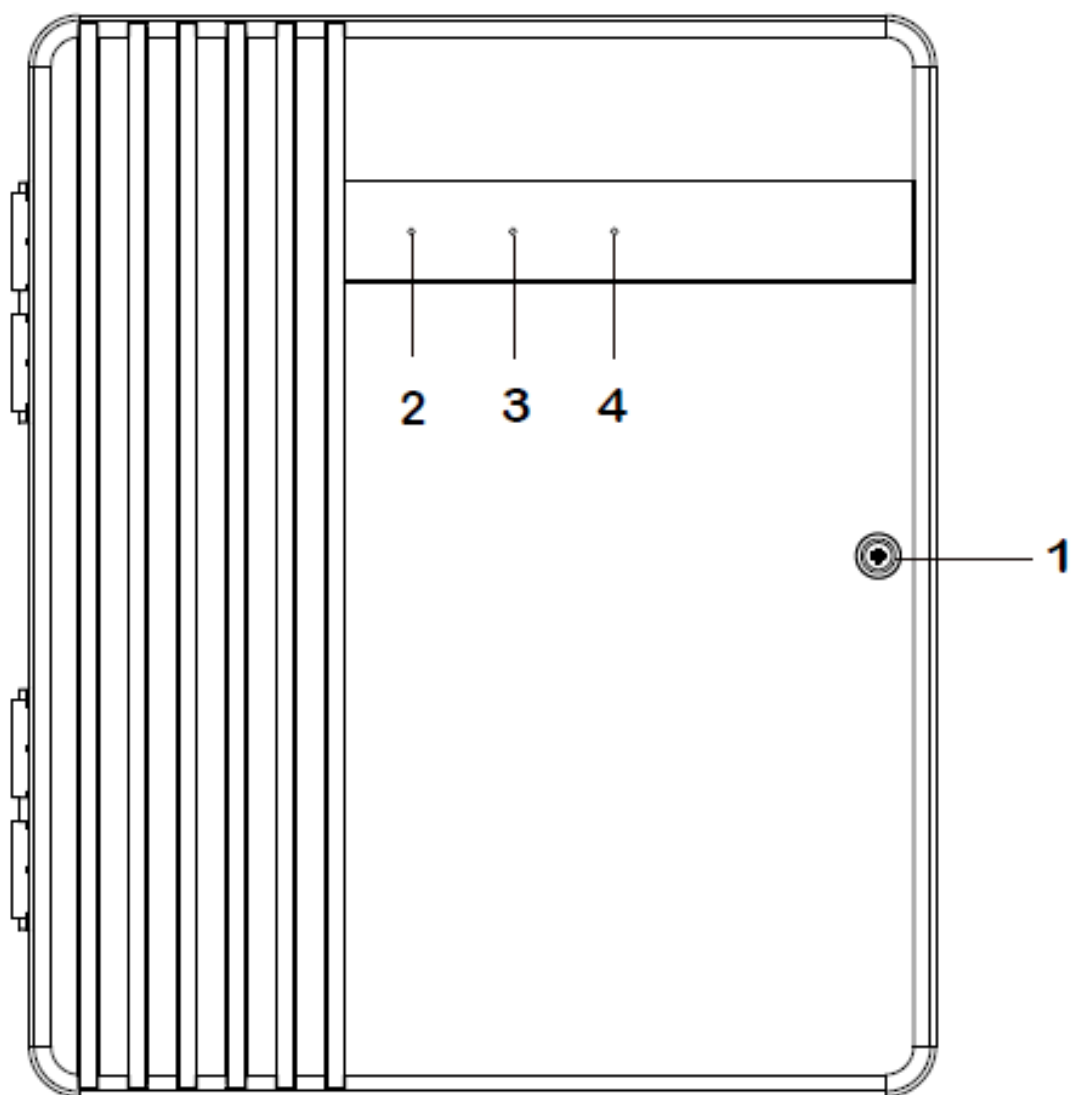

## Back Cover (internal view)

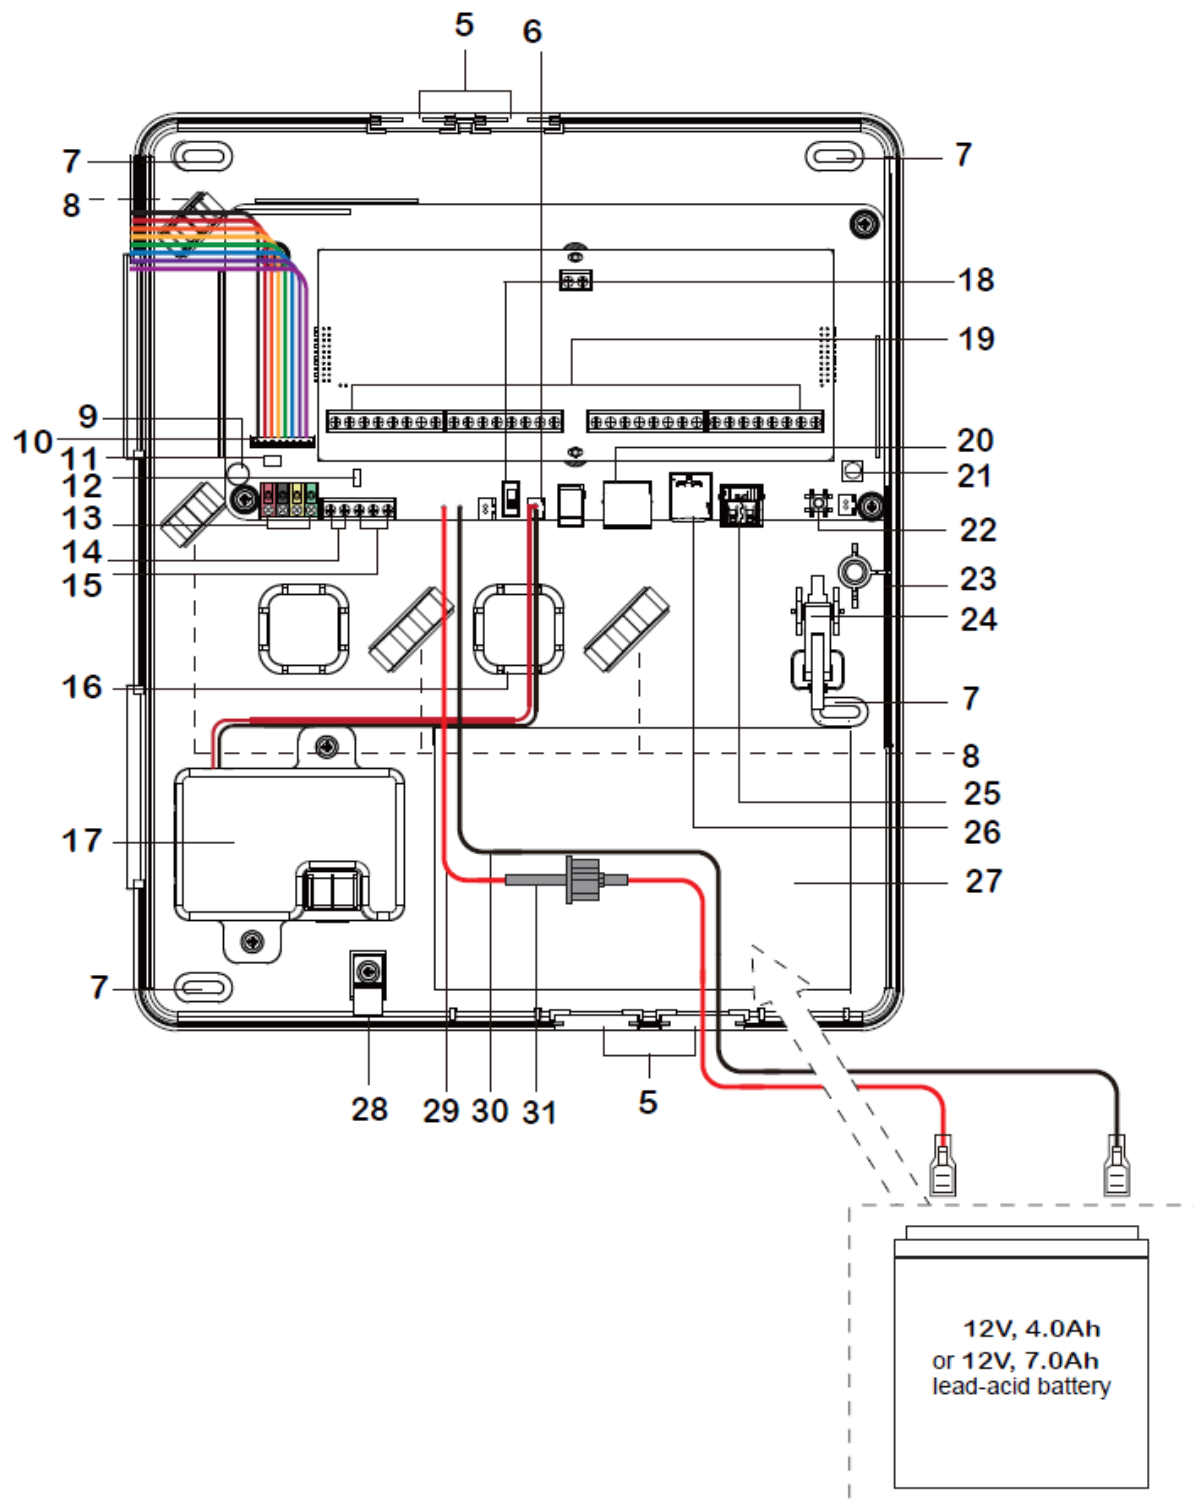



**1 Cover Fixing Screw**

**2 LED 1 - Area 1 (Green/Red)**

- ☞ Full Arm mode - Red lighting up
- ☞ Home/1/2/3 mode - Red flashing
- ☞ Learning mode - Green lighting up
- ☞ Walk Test mode - Green flashing

**3 LED 2 - Area 2 (Green/Red)**

- ☞ Full Arm mode - Red lighting up
- ☞ Home/1/2/3 mode - Red flashing
- ☞ Learning mode - Green lighting up
- ☞ Walk Test mode - Green flashing

**4 LED 3 - Status (Orange/Red)**

- ☞ System Fault - Orange lighting up
- ☞ Alarm Trigger – Red flashing
- ☞ Alarm in Memory – Red lighting up

**5 Removable Protective Cover x 4 (at top and bottom of the back cover)**

Removable cover to reveal or hide cable wiring hole.

**6 Built-in Power Unit Connector**

**7 Mounting Holes x 4**

**8 Wiring Clip x 4**

To be used for securing power cables.

**9 EGND Terminal**

Please refer to **3.3 Hardware Installation** for detail.

**10 LED Board Connector**

The LED board connector is pre-installed onto the control panel.

**11 J53 Jumper Switch**

J53 Jumper Switch can be served as a terminating resistor, which can be turned to ON when wiring different devices to the panel to enhance connection.

**12 J24 Jumper Switch**

Please refer to **3.3 Hardware Installation** for detail.

**13 Pluggable RS485 Terminal**

Connect to a hardwired keypad (KPT-35-Combo), or wired expansion module (WEZC-8/WEPC-1/WEZ Series).

**14 Bell Terminal**

Connect to a wired bell box for bell wiring.

**15 PGM Port**

To be used as a voltage output port or a dry contact relay output depending on J24 jumper settings.

**16 Alternative Hole for Wiring Management x 2**

**17 Built-in Power Unit**

Input: 16 ~ 18VAC / 50VA ~ 70VA (refer to VA power selection table in **2.2 Power Supply**)

or 100-240VAC.

AC module built-in power unit or Open Frame built-in power unit is installed. Use the built-in power unit to connect to the mains power.

☞ **Ensure to turn off all power supplies including Built-in Power Unit and SLA Battery before connecting or removing cables or wires.**

**18 Battery Switch**

Switch to “ON” for the battery to be charged when AC power is connected and serve as a backup power source when AC power is missing.

**19 Zone Terminal & 13.5V Auxiliary Voltage Output Terminal & GND Terminal**

Voltage output to zone 1-16 hardwired devices.

**20 Ethernet Port**

**21 4G-LTE External Antenna Terminal**

For connecting external antenna to the panel.

☞ **Do not disconnect the internal antenna when connecting the external antenna. To switch between the use of internal or external antenna, please configure through software setting. See chapter 7.1, GSM for details.**

**22 Learn Button**

To be used for local learning or local reset.

**23 Internal Antenna PCBA**

**24 Tamper**

**25 USB Port (optional)**

When connecting a USB dongle into the port, it is suggested to use a USB extension cable. There is no USB Port for the panel if it is built in 4G and Wi-Fi.

**26 Micro-SIM Card Socket (not hot swappable)**

**27 Room for SLA Battery**

Room for installing 12V 7Ah or 12V 4Ah rechargeable battery.

**28 Wire Saddle**

**29 Embedded Battery Cable (Power) (Red)**

**30 Embedded Battery Cable (GND) (Black)**

**31 Tube Fuse Holder**

**Please note:**

☞ **The tube fuse is pre-installed onto the battery cable; it is recommended not to change or replace the cable on your own to avoid possible hazards.**

## 2.2. Power Supply

### Built-in Power Unit

- You can use the built-in power unit to connect to the mains power. AC module built-in power unit or Open Frame built-in power unit is installed. Please refer to ***Using the built-in Power Unit*** in **3.3 Hardware Installation** for more details.

#### **Please note:**

- ☞ **Ensure to turn off all power supplies including Built-in Power Unit and SLA Battery before connecting or removing cables or wires.**

### Rechargeable Battery

- A rechargeable battery can be installed inside the Control Panel to serve as a backup in case of a power failure.
- During normal operation, AC power is used to supply power to the Control Panel and at the same time recharge the battery.
- If the battery switch is set as **OFF**, the battery will not be charged when AC power is connected and nor will it serve as a backup power source when AC power is missing. You need to switch the battery to **ON** for it to be charged when AC power is connected and serve as a backup power source when AC power is missing.

### Power Output

- The panel supports up to a maximum total of 13.5V/1.5 - 2A (typical) for the current derived from VDD auxiliary voltage output terminals, Bell and PGM ports.
- The total current provided by Hybrid Panel for hardwired devices, bells, PGM, KPT-35-COMBO and expansion modules should not exceed 2A. Otherwise, additional power is required.

#### **Please note:**

- ☞ **If the total current exceeds 2A, components of Hybrid Panel could be damaged.**

### VA PowerSelection Table

Sealed-Lead-Acid Battery Quality (pcs)	0	0	1
Output Current (A) including Vaux+Bell+Wired+PGM	1.5	2	1.5
Suggested 16VAC Input (VA)	50	70	70

## 3. Getting Started

Read this section of the manual to learn how to set up your Control Panel.

### 3.1. Selecting Mounting Location


The Control Panel is designed to be wall mounted and protected against unauthorized case opening or removal from its mounting surface, follow guidelines below when planning installation location:

- The Control Panel requires the mains power and Ethernet connection.
- If a Cellular Module is used, ensure that there is good cellular coverage (Advisable to have a level of at least 4 out of 5).
- The Control Panel needs to have access to the routing of cables for the system to connect with wired devices.
- A central location between all the devices is often the best place, making wiring to expanders or devices easier, and preferably a place that is hidden from outside view.
- Avoid mounting the Control Panel in a damp location, close to a heat source, or near large metal objects, which may affect wireless radio strength.
- The Control Panel should be protected by sensors so that no intruder can reach the Control Panel without first activating a sensor.
- When using ZigBee/Z-Wave routers to improve ZigBee/Z-Wave network coverage, remember to use only ZigBee/Z-Wave Router with backup batteries for security sensors. If you use a Router without backup battery for security sensors, the Router will be powered down in case of AC failure, and your security sensors will lose connection with the ZigBee/Z-Wave network.


## 3.2. Mounting

**Before installation or any maintenance work, make sure the power supply has been disconnected, and the battery switch has been slid to OFF position.**

**Step 1.** Use a flat-head screwdriver to loosen the cover fixing screw to open the top cover.

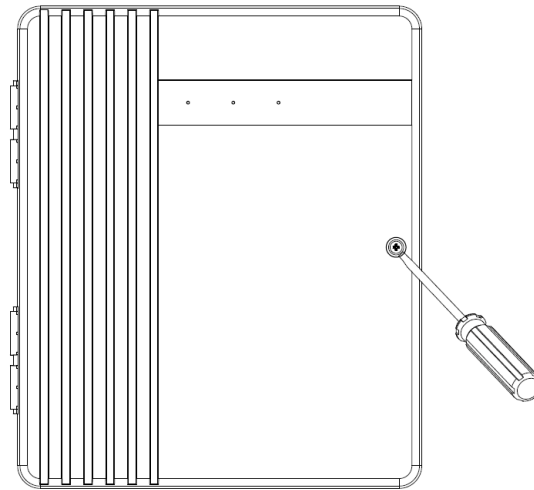


**Step 2.** Use the 4 mounting holes as a template to mark and drill holes appropriately.

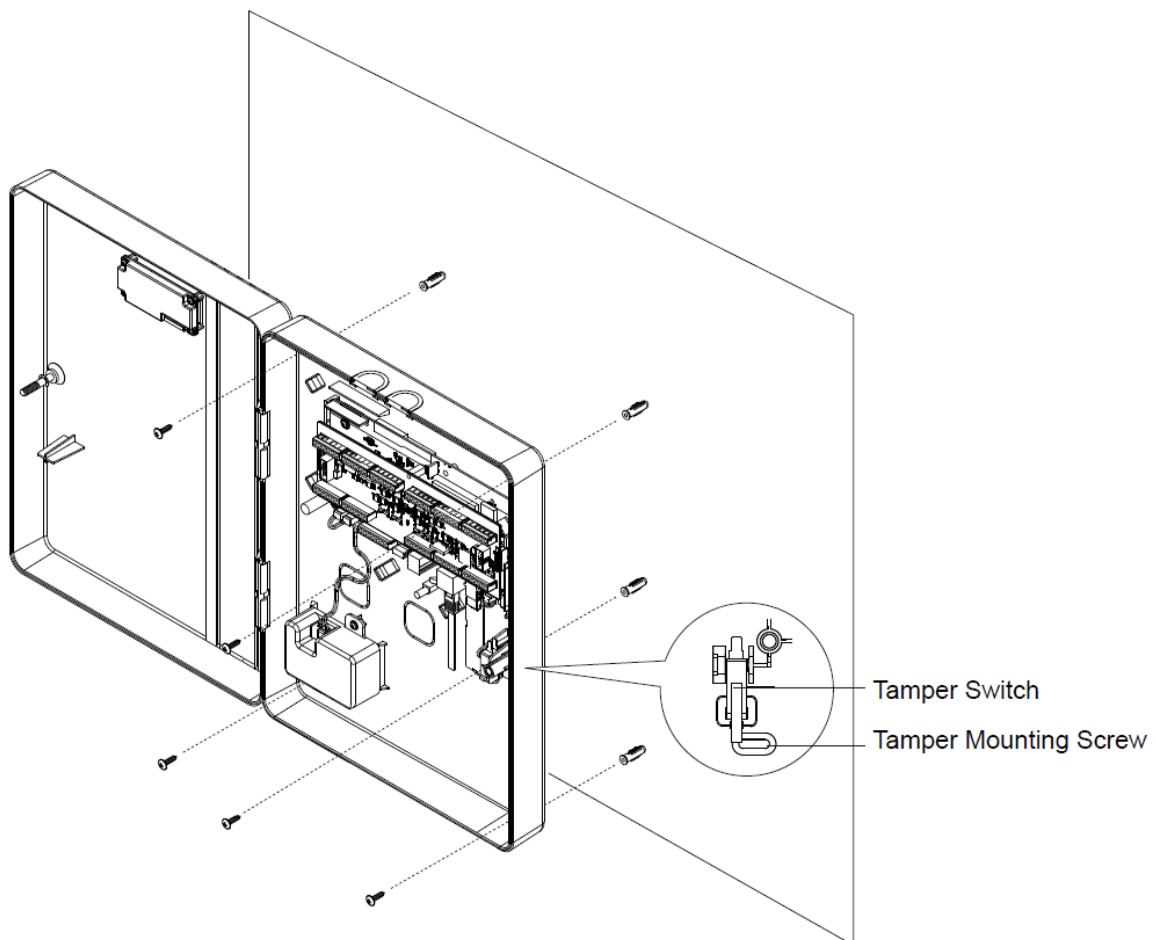


**Step 3.** Use the provided wall plugs for plaster/brick installation. Make sure the wall plugs are

flush with the wall.

- Step 4.** Screw the Control Panel onto the wall. Make sure the Tamper Switch is fully depressed against the wall
- Step 5.** Complete wiring following the instructions in later section **3.3. Hardware Installation.**
- Step 6.** Arrange all wires along the wire clips and then route the wires to the two cable holes on top or bottom. Use cable ties (not included ) to thread through the wire clips and secure the wires. Use the U-shaped grommets around the cable holes to manage wires.

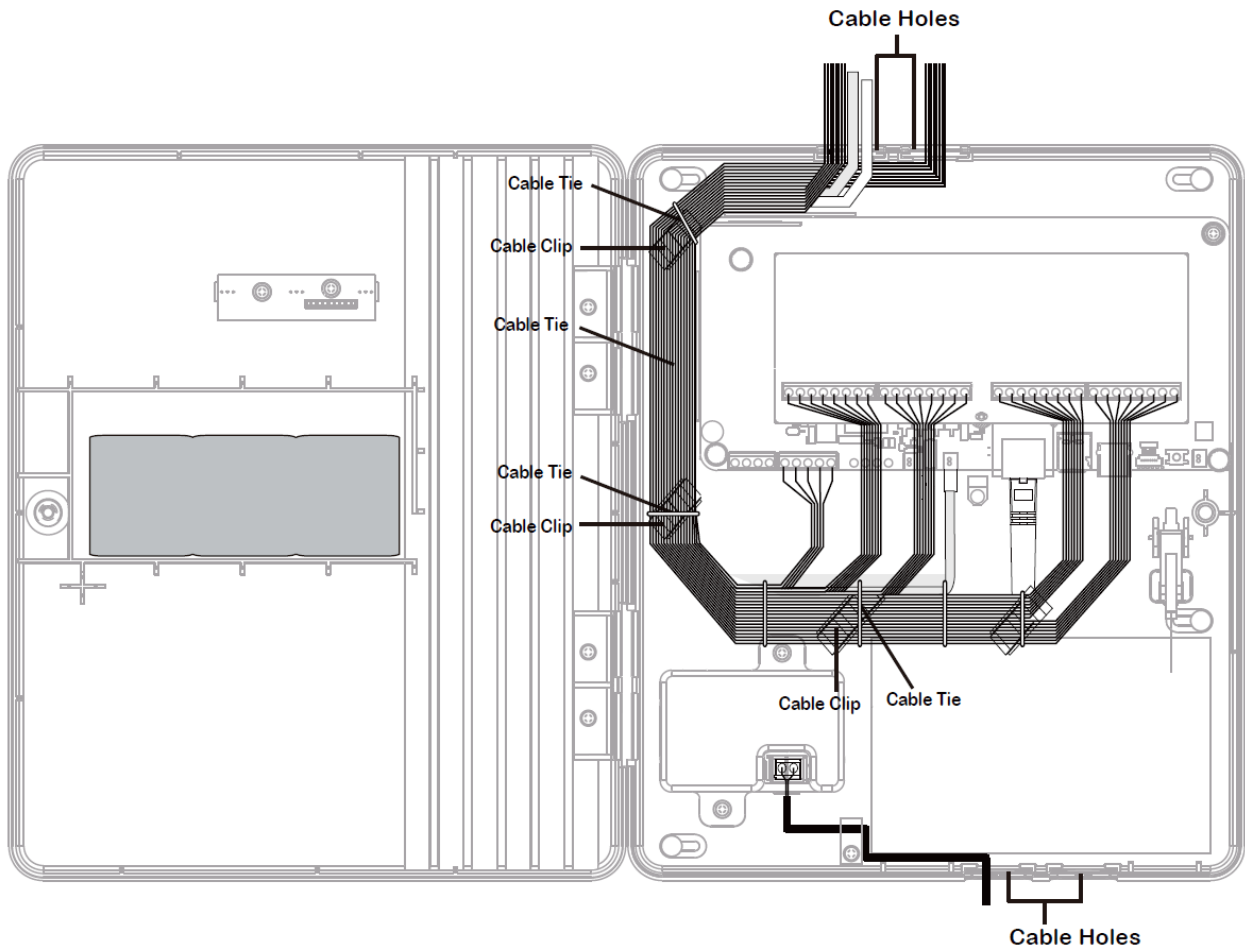


- Step 7.** Take out 4 Velcro tape(s) (Loop side) from the package.
- Step 8.** Peel the release film of the tapes. Apply them to your battery and press firmly for 30 seconds to ensure good contact. Please avoid applying the tape on uneven surface or re-apply it.

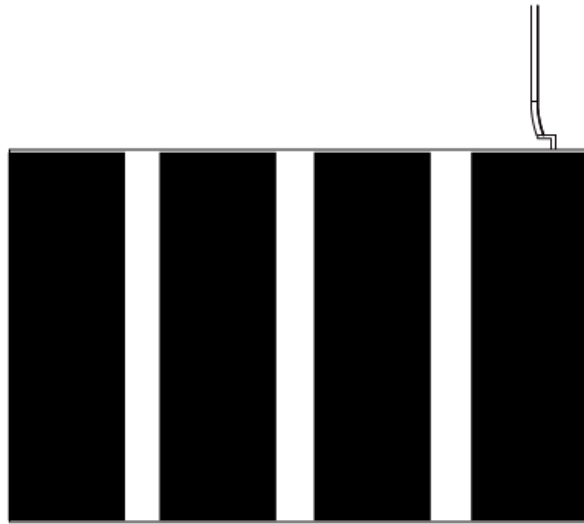

SLA Battery with 4 Velcro Tapes (Loop Side)

**Step 9.** Attach the battery to the hook side with Velcro Tape on the Hybrid Panel.

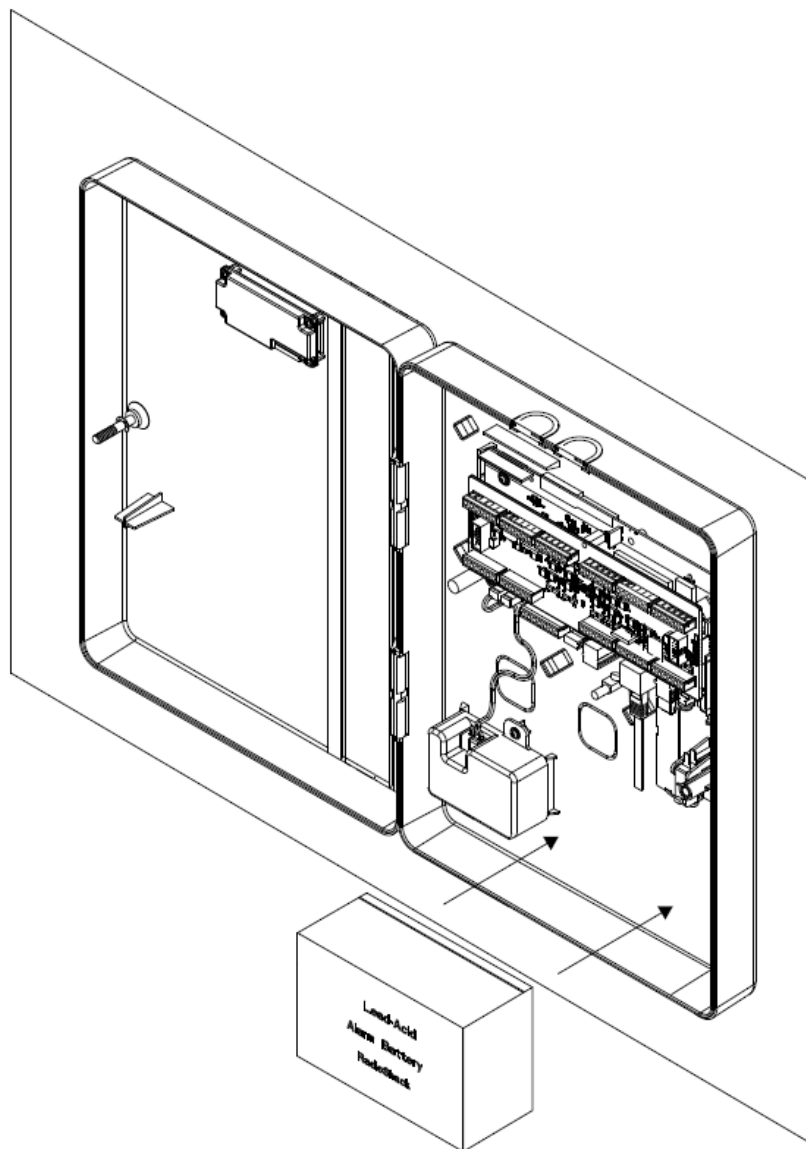

**Step 10.** Close the cover and tighten the cover fixing screw.

### 3.3. Hardware Installation

#### CAUTION:


- **Before servicing, make sure the AC power has been disconnected, and the battery switch has been slid to OFF position.**
- Wiring of the Hybrid Alarm System should only be performed by certified technician with proper knowledge and training in electric equipment.
- Before installation or any maintenance work, make sure the power supply has been disconnected, and the battery switch has been slid to OFF position.
- Do not connect the devices to loads exceeding supported load current.
- Do not connect the battery or the built-in power unit until all wiring is complete.
- The control panel enclosure must be secured to the wall before operation.
- Internal wiring must be routed in a manner that **prevents**:
  - Wiring over circuit boards
  - Excessive strain on wire and on terminal connections
  - Loosening of terminal connections
  - Damage of conductor insulation
- Incorrect connections will result in failure or improper operation. Inspect wiring and ensure proper connections before applying power.

**Step 1.** For configuration and operation of the Control Panel via Ethernet, connect an Ethernet cable to RJ-45 port.

**Step 2.** (Optional) Insert a Micro-SIM card with the gold (metal) side facing down, as example shown below. Before inserting the SIM card, please make sure the pin code is deactivated and SMS messages are removed first.

#### <NOTE>

- ☞ Inserting the SIM Card when the Panel is powered off.
- ☞ Make sure to insert a SIM card with data plan.

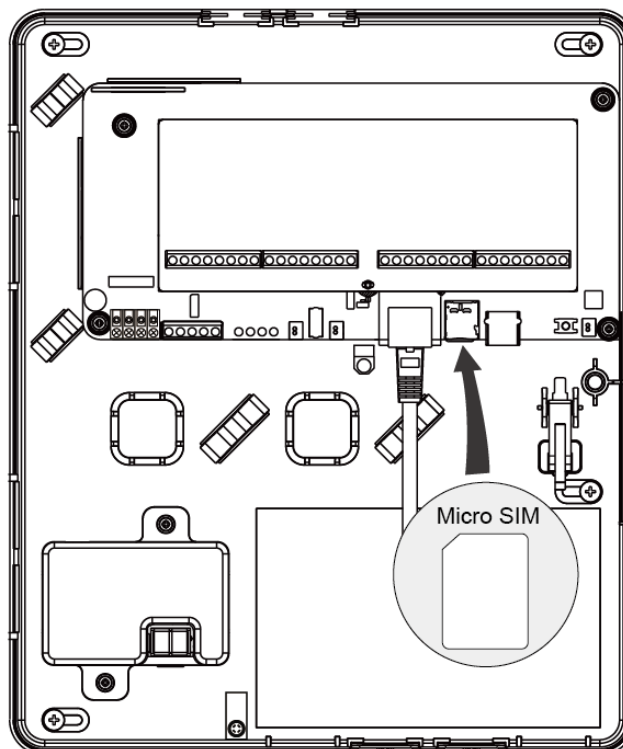


**Step 3.** Complete wiring for Zone 1-16 terminals, GND terminals, AUX power terminals, PGM



terminals, Bell terminals, and Keypad terminals. (Please see the following sections for details.)

- Step 4.** Connect the battery to the PCB board. See **Battery Installation** in the following section for more details.
- Step 5.** Connect to the mains power using the built-in power unit.
- Step 6.** Slide the battery switch to ON position.

### Zone Wiring (Zone 1 -16)

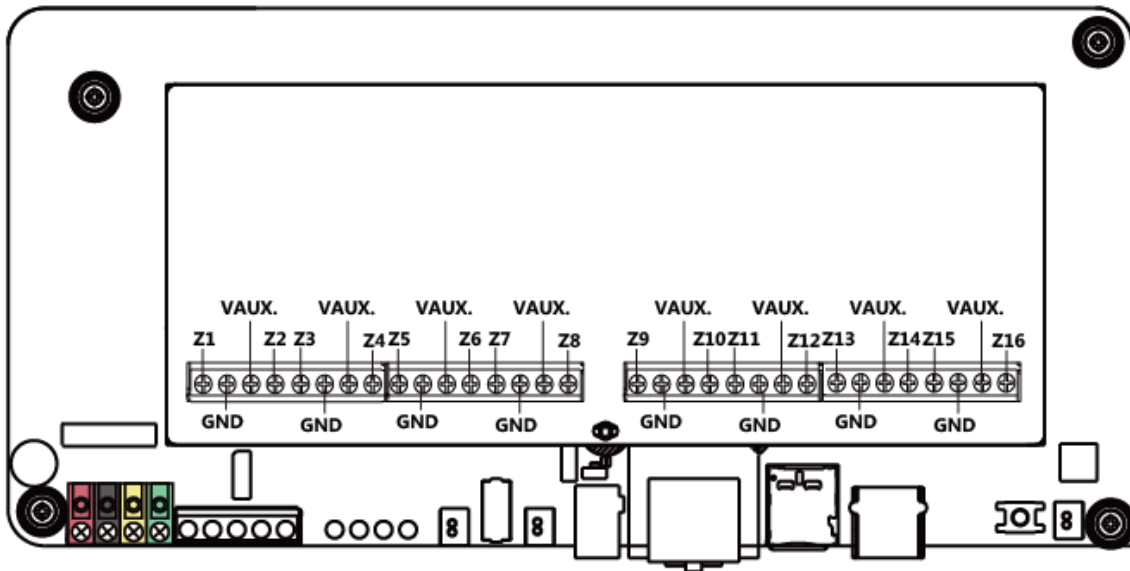

- The 16 zones can be wired by supervising NC (normally close) or NO (normally open) devices, e.g. PIR sensor, door contact, smoke detector, water sensor, fire sensor, CO sensor, gas detector, heat detector, and glass break detector, etc.
- Wire gauge: Minimum 20 AWG, maximum 18 AWG. Do not use shielded wire.
- The hardwired zones support Single-End-of-Line (SEOL), Double-End-of-Line (DEOL) loop configuration, with a value from 1K, 2.2K, 3.74K, 4.7K, 5.6K, 6.8K, 8.2K, 10K ohms, and Triple end-of-line (TEOL) loop (only for 4.7K, 6.8K, 12K). Please install the resistor(s) at the end of each zone loop far away from the Control Panel. The Panel will detect if the circuit is secure, open, or short.
- For an NO loop, please have an EOL resistor in parallel (across) the loop.
- For an NC loop, please have an EOL resistor in series with the loop.
- If a zone wiring method is changed, be sure to turn the system power off and back on again to avoid triggering the alarm.

Please refer to the following diagrams of loop 1 to 10 for wiring examples.


#### **NO/NC Wiring**

The panel can detect alarm for corresponding NO or NC devices via the open, secure or shorted circuits.


#### **<NOTE>**

- ☞ There is no EOL resistor in loop 1 and loop 2

1.

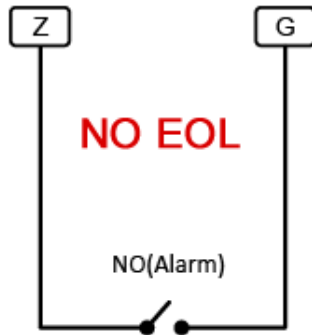


2.

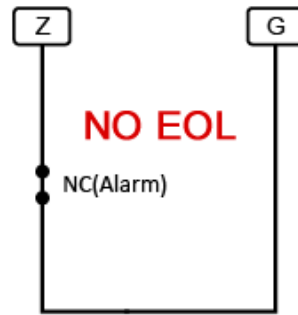


### **Single-End-of-Line (SEOL) Resistor Wiring**

The single-end-of-line (SEOL) resistor shall be installed near the wired device at the end of a zone loop to supervise the wiring conditions for NO and NC devices, so the panel can detect alarm and tamper for corresponding devices via the open, secure or shorted circuits.


3.

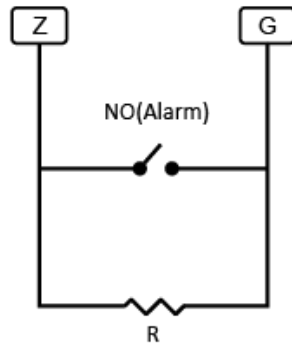


4.

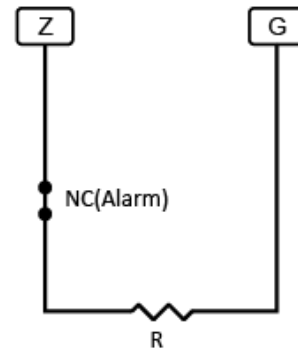

5.

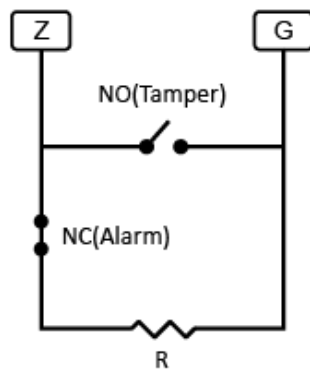


6.

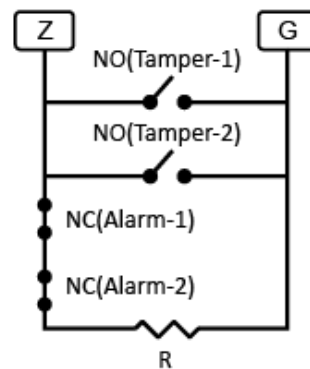


### **Double-End-of-Line (DEOL) Resistor Wiring**

The double-end-of-line (DEOL) resistor shall be installed near the wired device at the end of a zone loop to supervise the wiring conditions for NC devices, so the panel can detect alarm and tamper for corresponding devices via the open, secure or shorted circuits.

7.

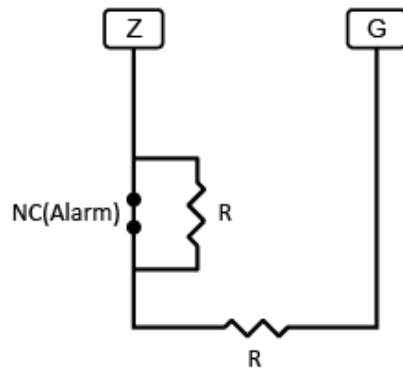


8.

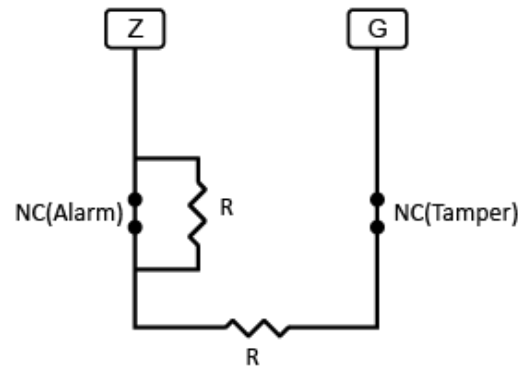


### Triple-End-of-Line (TEOL) Resistor Wiring

The triple-end-of-line (TEOL) resistor shall be installed near the wired device at the end of a zone loop to supervise the wiring conditions for NC or NO devices, so the panel can detect alarm, tamper and anti-masking for corresponding devices via the open, secure or shorted circuits.


9.

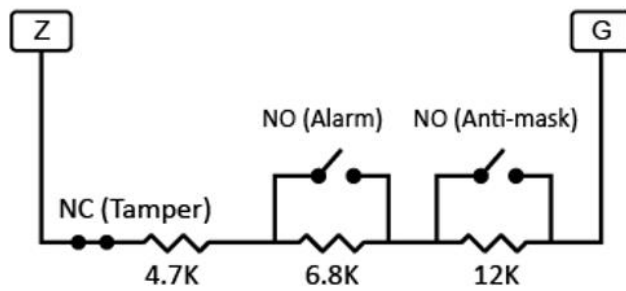

10.

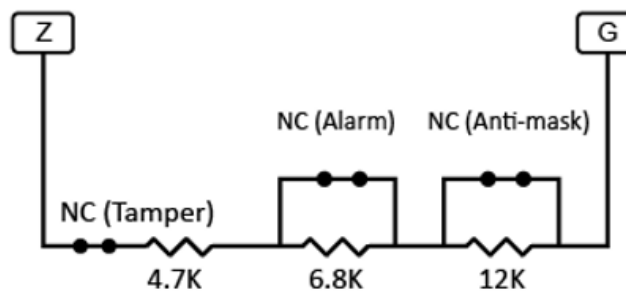


## AUX Power Wiring

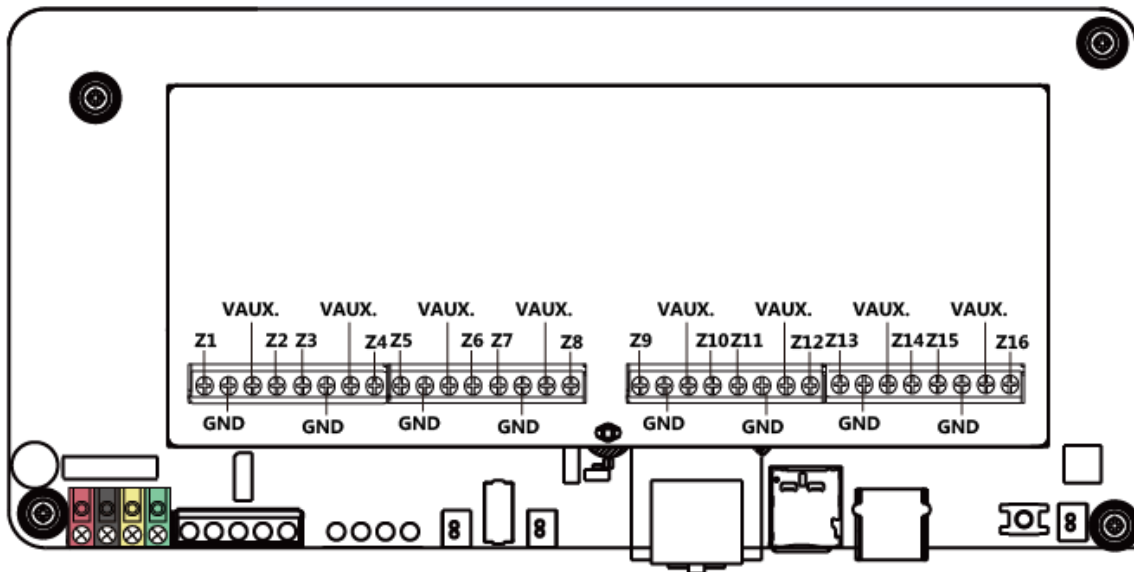


- The Control Panel can provide a maximum total of **2A** current for hardwired zones, auxiliary output, keypad (KPT-35-COMBO), wired expansion module (WEZC-8, WEZ Series), output expander (WEPC-1), and PGM/Bell ports.
- Min/Max operating voltages for devices/detectors is 10 VDC -14VDC.
- Please note that the total current should **not exceed 2A**, otherwise, an additional power supply is required.


## PGM Wiring

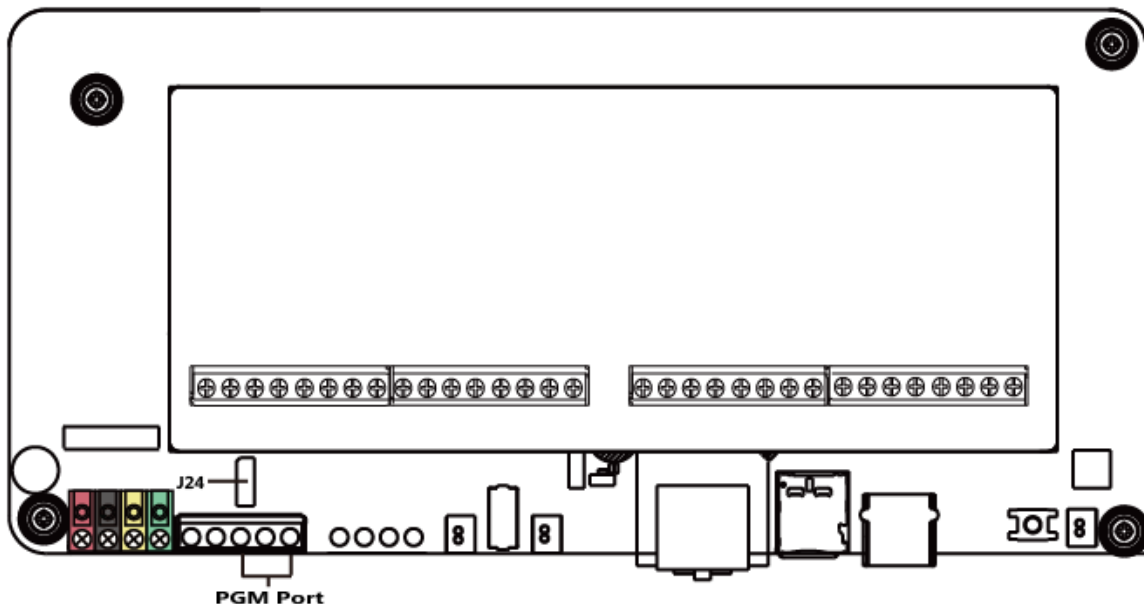

- The PGM port can be a voltage output port or a dry contact relay output depending on J24 jumper settings.
- When J24 Jumper Switch is disconnected, PGM port will operate as a dry contact relay output.

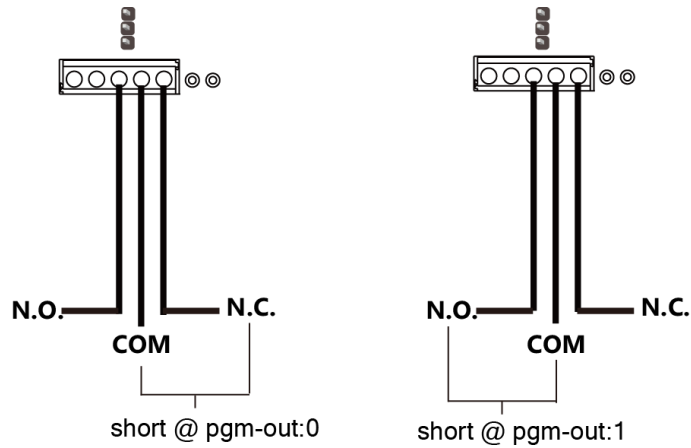


- When the J24 jumper link is inserted connecting the 1<sup>st</sup> and 2<sup>nd</sup> pins, the PGM port will provide 12V output.
- When the J24 jumper link is inserted connecting the 2<sup>nd</sup> and 3<sup>rd</sup> pins, the PGM port will provide 0V output.
- Min/Max operating voltages for devices / detectors is 10VDC -14VDC.
- The total current derived from auxiliary output, bells, and PGM ports should not exceed 2Ah.

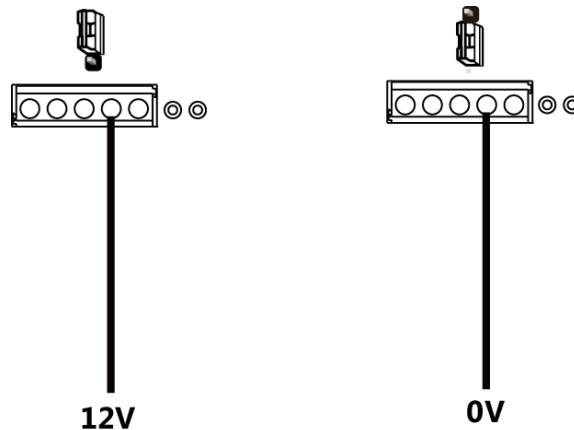


### Wired Zone Expansion

- Hybrid Security Alarm System is compatible with HWC-1 Wireless Converter. One HWC-1 can add 9 wired zones to the Control Panel.

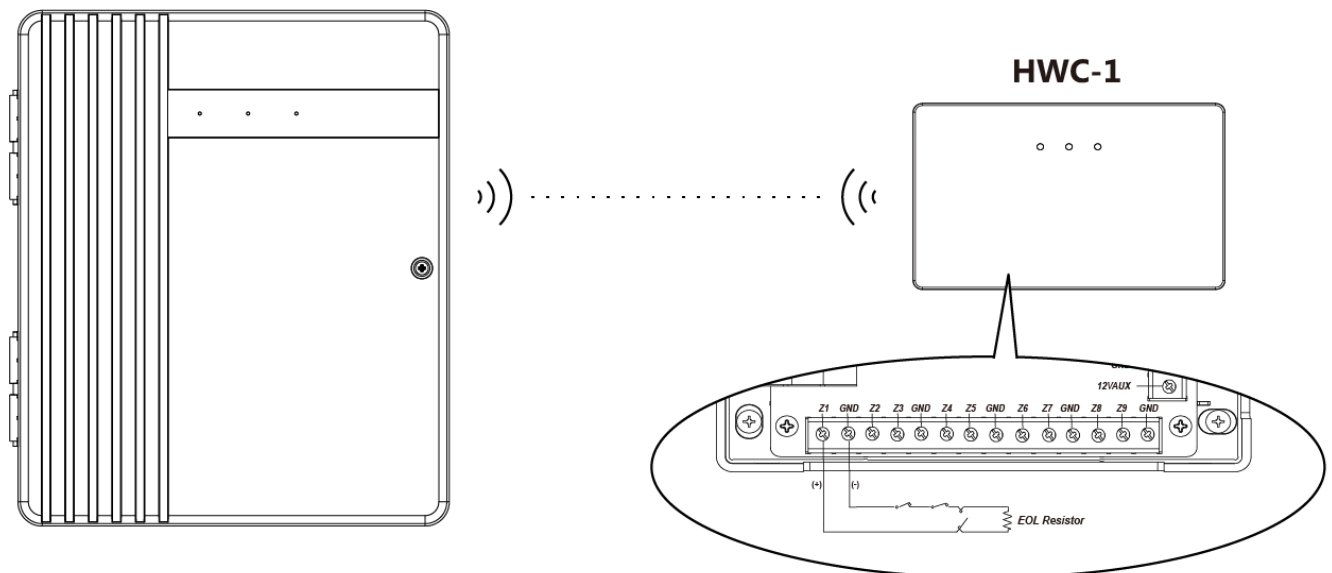

## Bell Wiring

- Be sure to observe polarity when connecting polarized sirens or bells.
- Min/Max operating voltages for devices / detectors is 10VDC -14VDC.
- The total current derived from auxiliary output, bells, and PGM ports should not exceed **2A**.

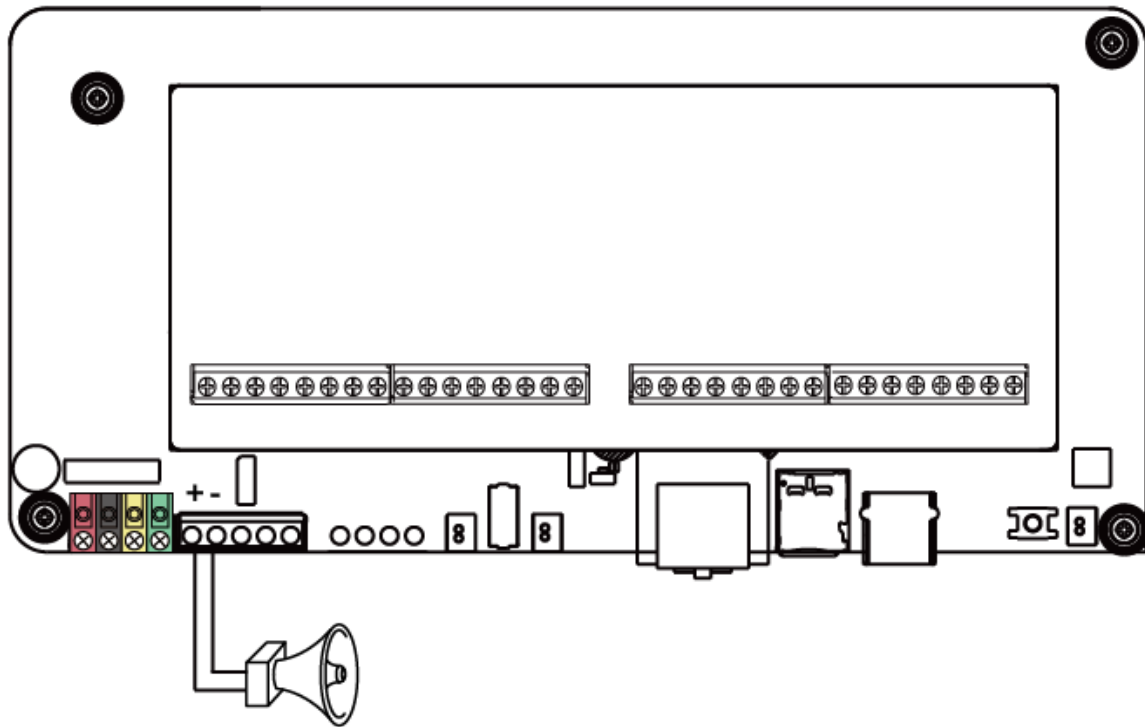

## Connecting Keypad/Expansion Module via RS485 terminals

Compatible keypad (KPT-35-Combo) and expansion modules (WEZC-8/WEPC-1/WEZ Series) can be wired to the panel in series.

### Connection between Panel and Keypad/Expansion Board:

- The keypad or expansion module's terminal can be hardwired to the Control Panel.
- To do so, connect the keypad or expansion module's four terminals to the corresponding terminals on the hybrid panel.
  - For KPT-35-COMBO, connect the "V", "G", "A", "B" terminals to the corresponding "VDD", "GND", "485A", "485B" terminals on the hybrid panel.
  - For WEZC-8/WEPC-1/WEZ Series, connect the "VDD", "GND", "485A", "485B" terminals to the corresponding "VDD", "GND", "485A", "485B" terminals on the hybrid panel.

### Daisy Chain Connection between Keypad/Expansion Board:

- You can add more expansion modules/keypads by connecting one to another to form Daisy Chain Connection.
- To do so, connect the keypad/expansion module's four terminals to the corresponding terminals on the next keypad/expansion module.
  - For connection between keypads, connect the "V", "G", "A", "B" terminals to the corresponding "V", "G", "A", "B" terminals on the next keypad.
  - For connection between Expansion Boards, connect the "VDD", "GND", "485A", "485B" terminals to the corresponding "VDD", "GND", "485A", "485B" terminals on the next Expansion Board.
  - For connection between Keypad and Expansion Board, connect the keypad's "V", "G", "A", "B" terminals to the corresponding "VDD", "GND", "485A", "485B" terminals on the next Expansion Board.


## Wiring Guideline

- The total length of wiring shall not exceed 1000 feet.
- A maximum of 128 keypads/expansion boards (including WEZC-8, WEZ-12/24/36/48-RS485, WEPC-1, KPT-35-COMBO) can be connected to the panel.
- Out of the 128 keypads/expansion boards mentioned above, a maximum of 4 KPT-35-COMBO can be connected to the panel.

## Wiring Example

**(This section is TBA and will be updated soon)**

- KPT-35-COMBO-A is wired correctly as it is within 500' / 152m of the panel, in wire distance.
- WEZC-8 (A) is wired correctly as it is within 800' / 244m of the panel, in wire distance. Since it has the furthest distance from the Control Panel, ensure its jumper switch is set to ON to serve as a terminating resistor before tightening the cover fixing screw.
- WEZC-8 (B) is NOT wired correctly as it is farther than 1300' / 396m from the panel, which makes it exceed the total length of wiring of 1000 feet.
- Ensure the furthest keypad or expansion module's Jumper Switch and Control Panel's J53 Jumper Switch are set to ON to serve as a terminating resistor.

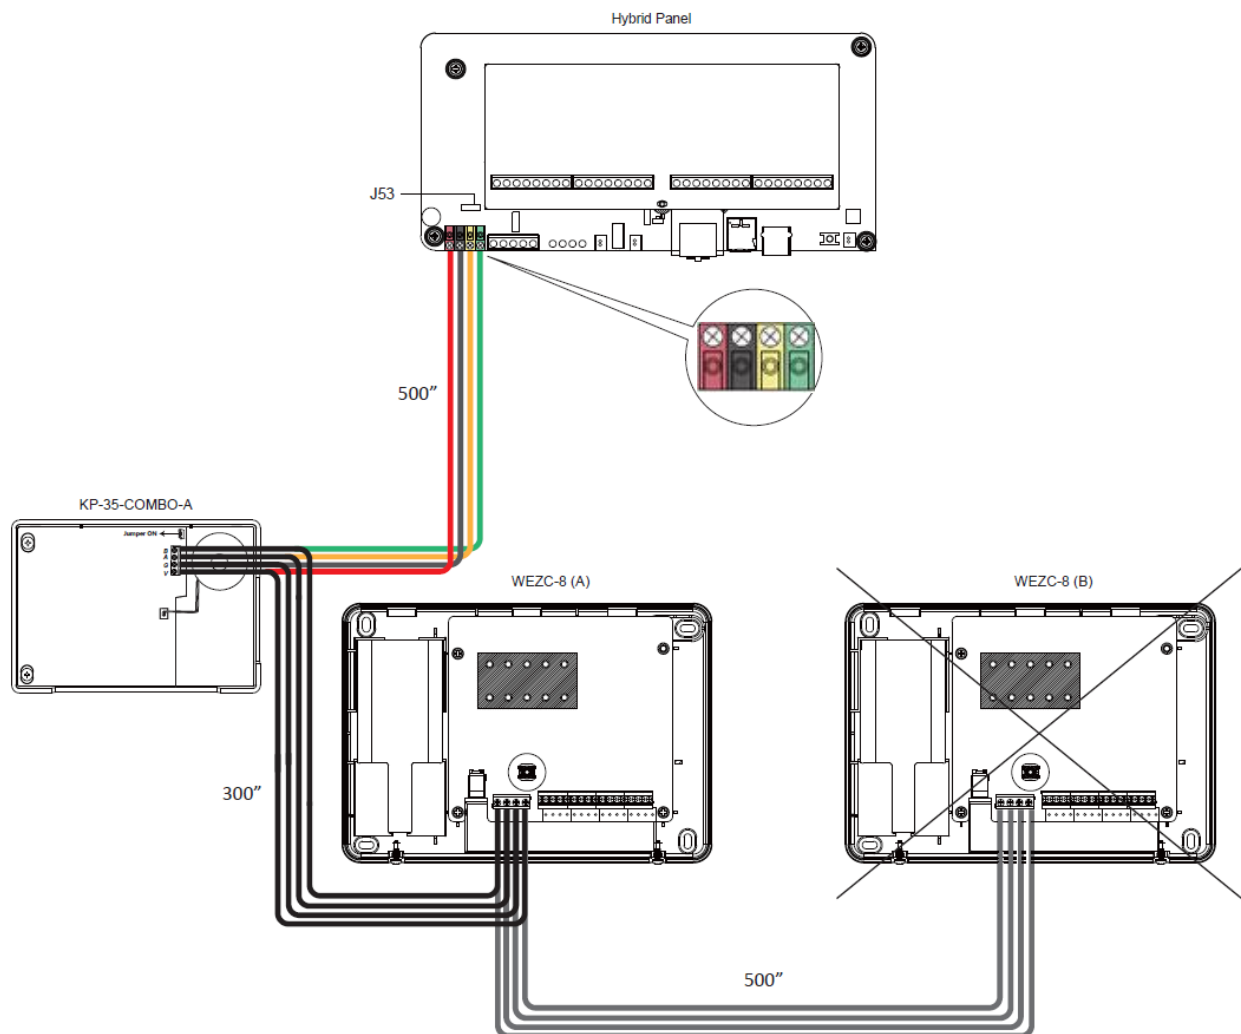


## External Power Supply Guideline


- As the Hybrid Panel may be connected to multiple external devices, be sure to ensure the power supply is adequate for all connected devices.
- Be noted that the external power supply can be used with expansion board WEZC-8 and WEPC-1, but it cannot connect to the WEZ Series.

### **External Power Supply Usage Example**


- If the 13.5V power supply from the main control panel is only enough for the first connected device, please prepare an external power supply to ensure the rest of the connected devices receive enough power.

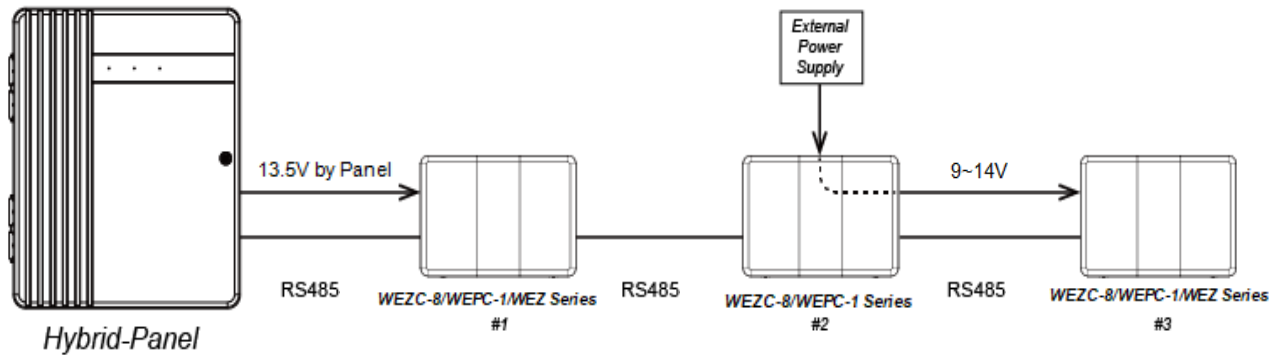

### **Ground Wiring**

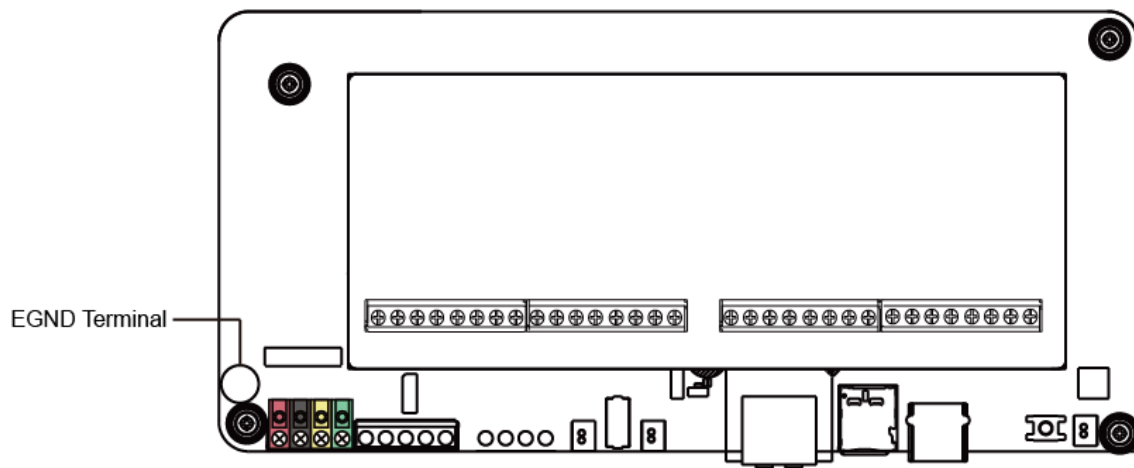

- EGND ground wiring is implemented to protect the panel from electricity leakage.
- Prepare grounding wire (insulated green wire, minimum 22 AWG), and connect it to the building's electrical outlet. Then, secure the grounding wire onto Hybrid Panel' EGND Terminal using a ground screw and nut.

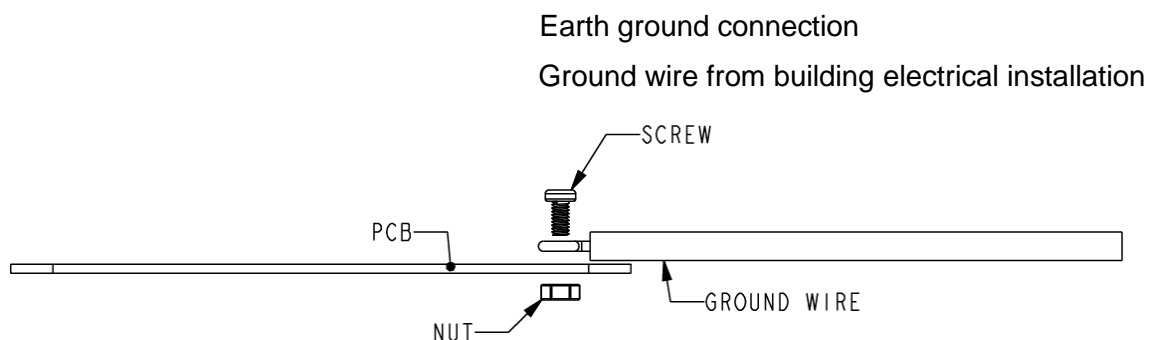


### **Note:**

☞ **The ground wire, nut and screw are not included in the product's package.**



## Battery Installation

- The Control Panel can support a rechargeable battery to serve as a backup power source.
- Battery options include:
  - 1) 12V/7Ah SLA battery
  - 2) 12V/4Ah SLA battery
- To Install the battery, follow the steps below:
  - 1) Connect the GND cable (Black) to the negative pole (-) of battery.
  - 2) Connect the power cable (Red) to the positive pole (+) of battery
  - 3) Use the Velcro Tape to fix the backup battery to the Control Panel.
  - 4) Attach the battery to the hook side with Velcro Tape on the Hybrid Panel.

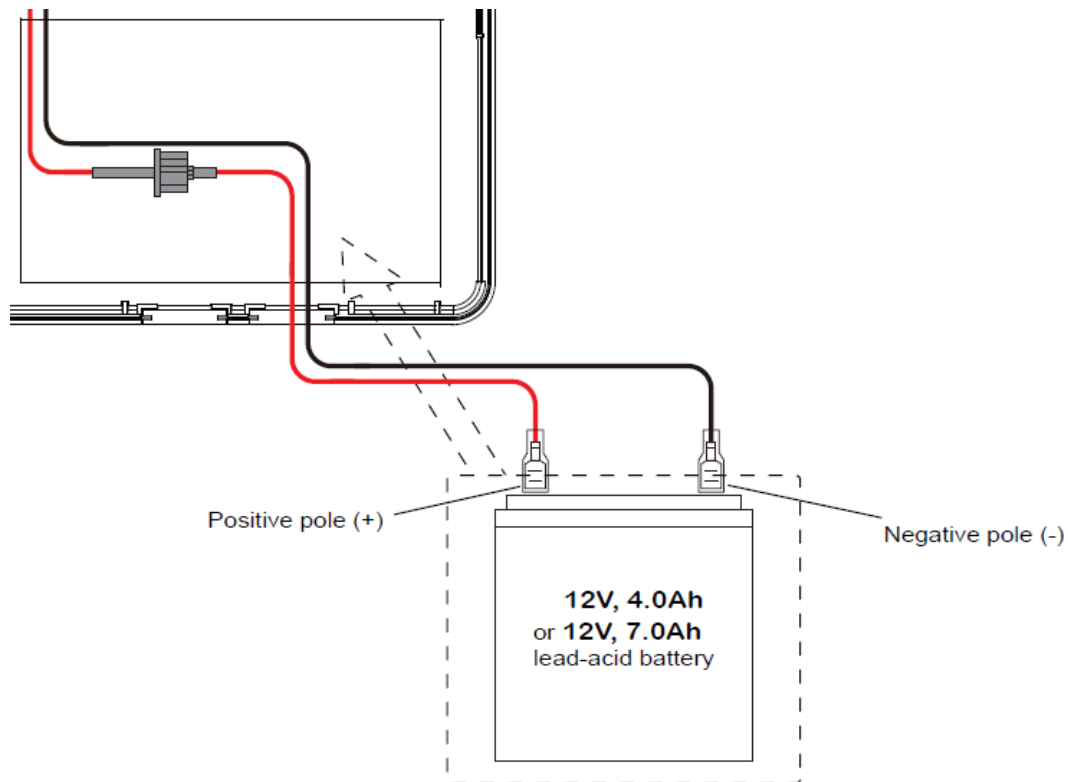


## Using the built-in Power Unit

- **AC Module** built-in Power Unit or **Open Frame** built-in Power Unit is installed. For AC module, connect 2 wires of the AC Transformer to 2 terminals of the built-in Power Unit. For Open Frame, connect **BROWN** wire of the power cord to Terminal **L** of the built-in Power Unit, and connect **BLUE** wire to Terminal **N**. Please refer to two figures below.

### Note:


☞ Ensure to turn off all power supplies including Built-in Power Unit and Battery before connecting or removing cables or wires.

- **AC Module built-in Power Unit:**

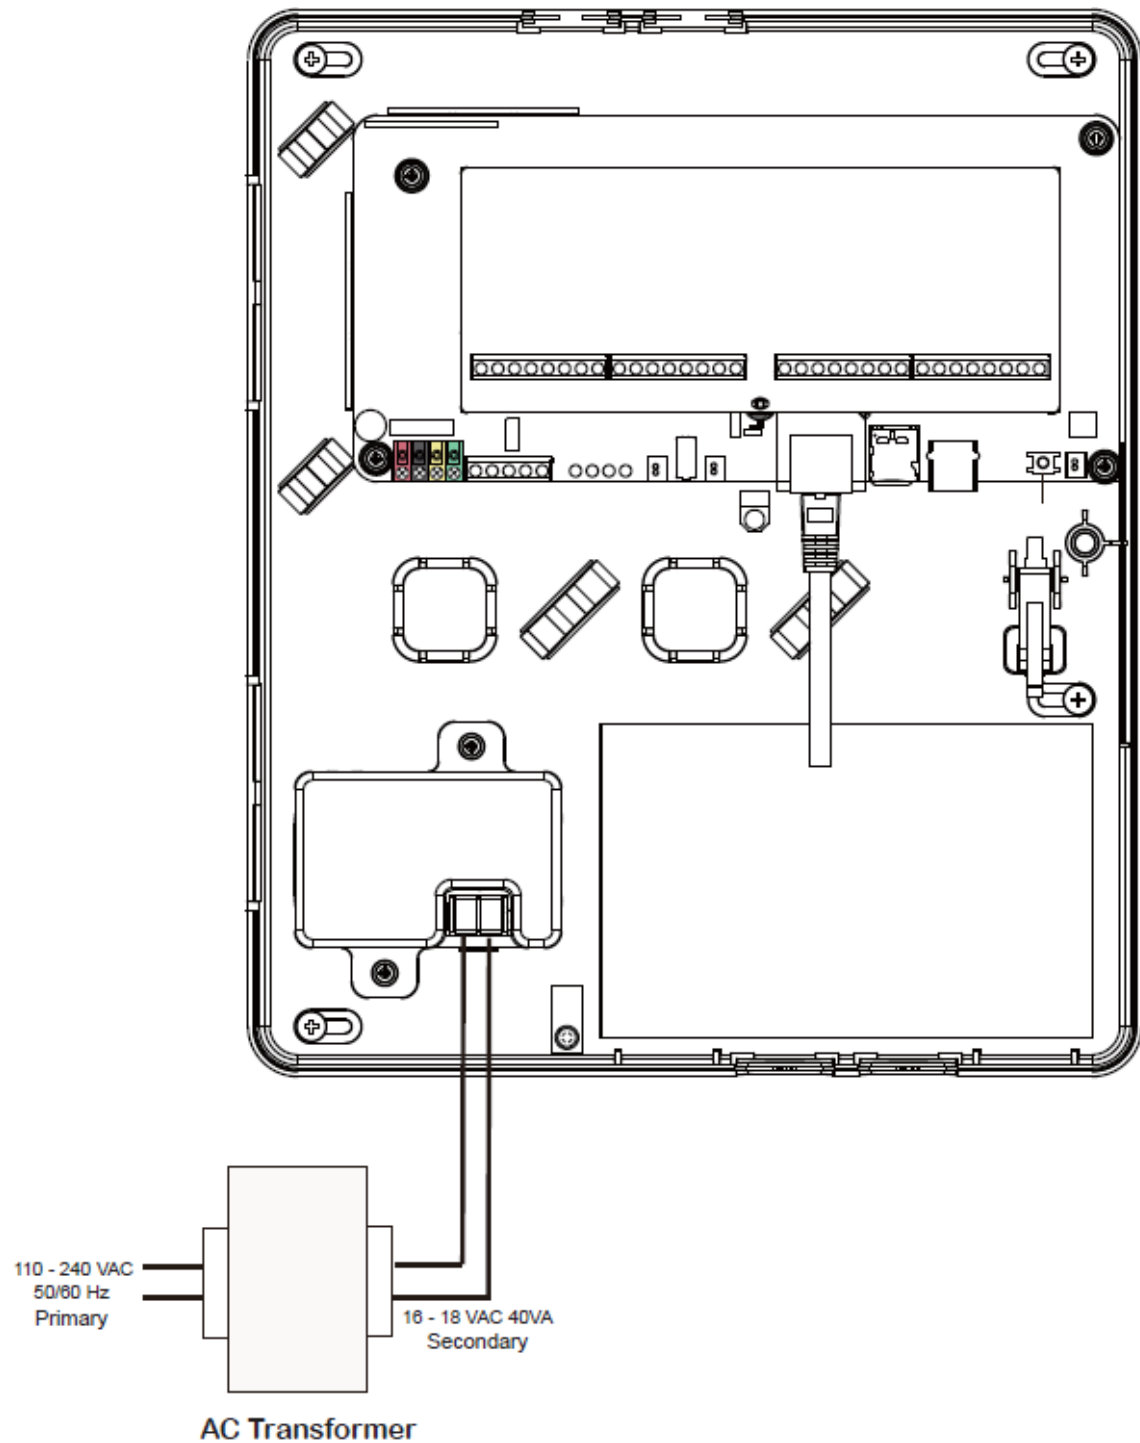

**AC Module Built-in Power Unit:**  
Connecting 2 wires of AC Transformer to  
2 terminals of the Built-in Power Unit

- Open Frame built-in Power Unit:

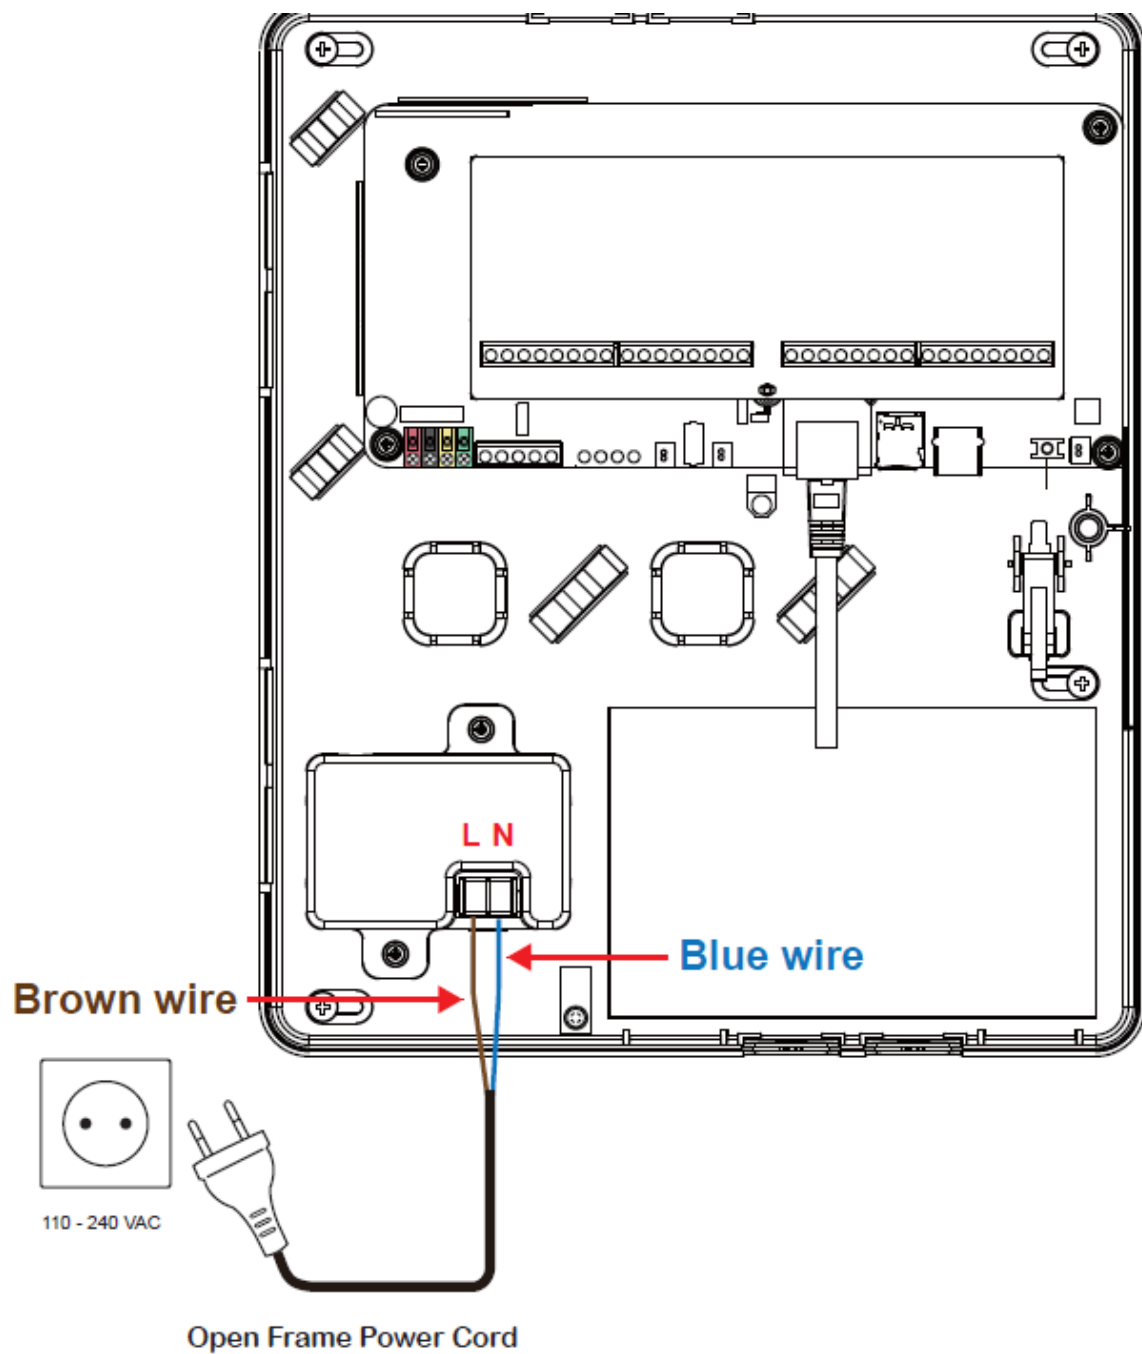

**Open Frame Built-in Power Unit:**  
Connecting **BROWN** wire to Terminal **L**  
Connecting **BLUE** wire to Terminal **N**


## 3.4. Software Installation

※ THIS INSTALLATION IS ONLY REQUIRED FOR FIRST TIME USER ※


### 1. RUNNING THE FINDER SOFTWARE

The Finder software is required for your computer to identify the control panel on the LAN.

**Step 1.** To download Finder software, open your browser and type below URL in the address bar: <http://www.climax.com.tw/climax-download-finder.html>.

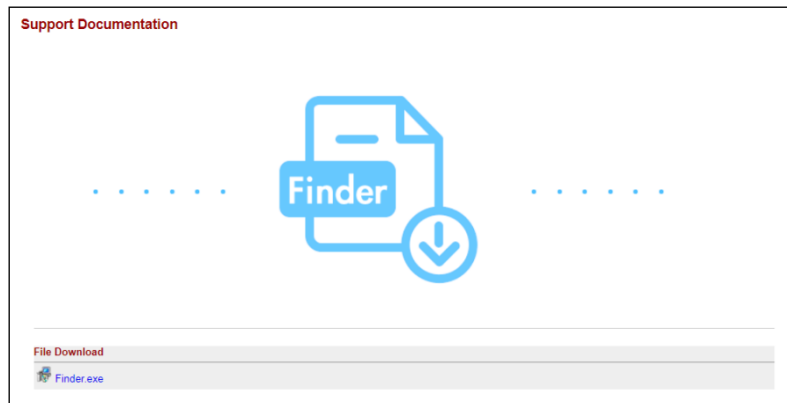

**Step 2.** After download, install the software and follow on-screen instructions to complete installation.

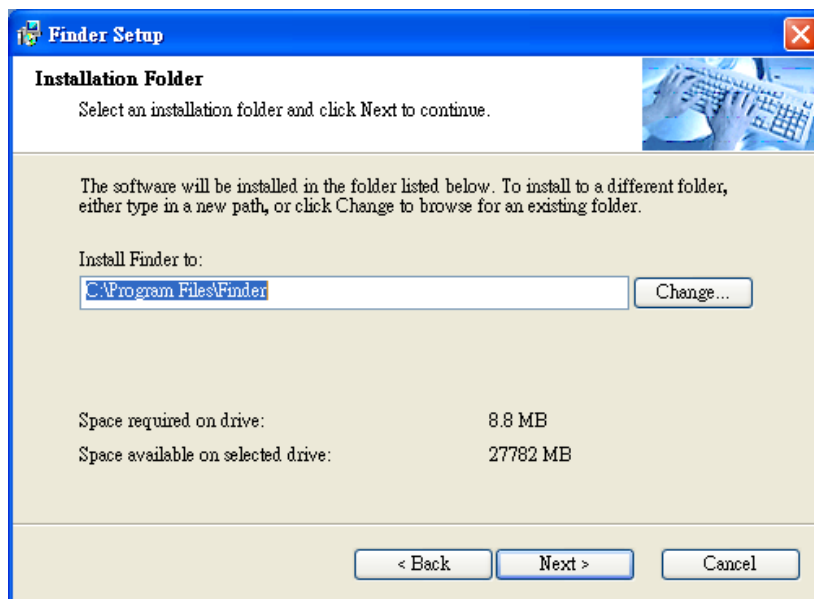


**Step 3.** Follow on screen instruction to complete installation.


**Step 4.** Once complete, the Finder icon will be displayed on your desktop.




**Step 5.** Execute the Finder software. Finder will automatically search for control panel on the LAN and display its information. If available, the panel's LAN IP address, Firmware version and MAC address will be displayed

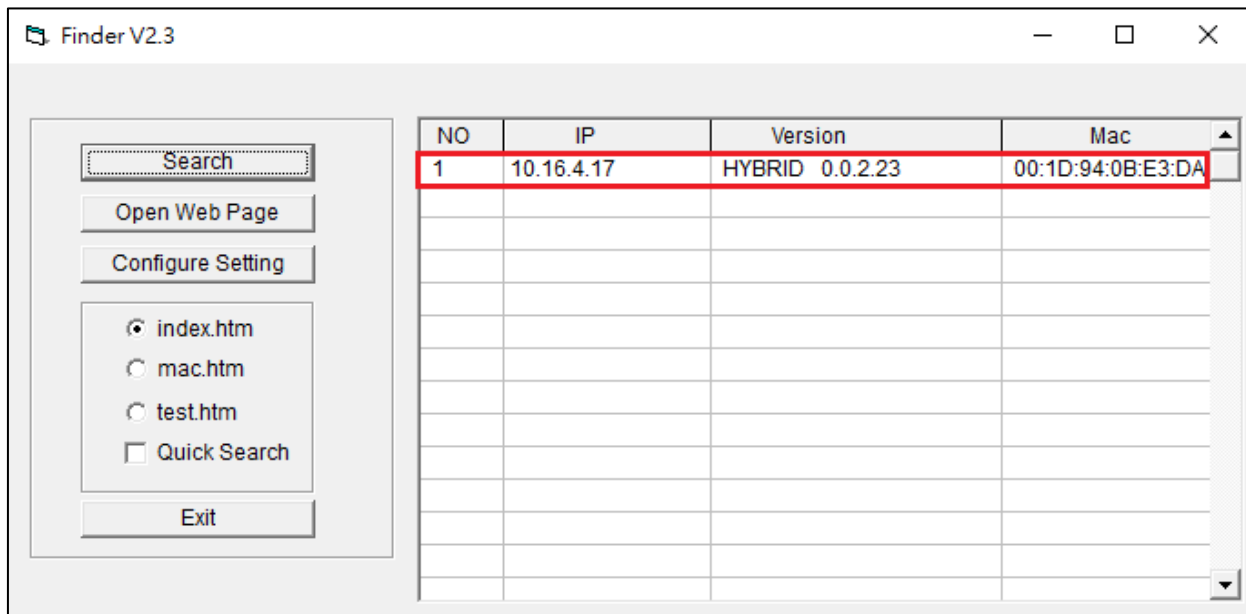

**Step 6.** If the panel information is not displayed, check panel power and Ethernet connection and click on “**Search**” to update the panel information.

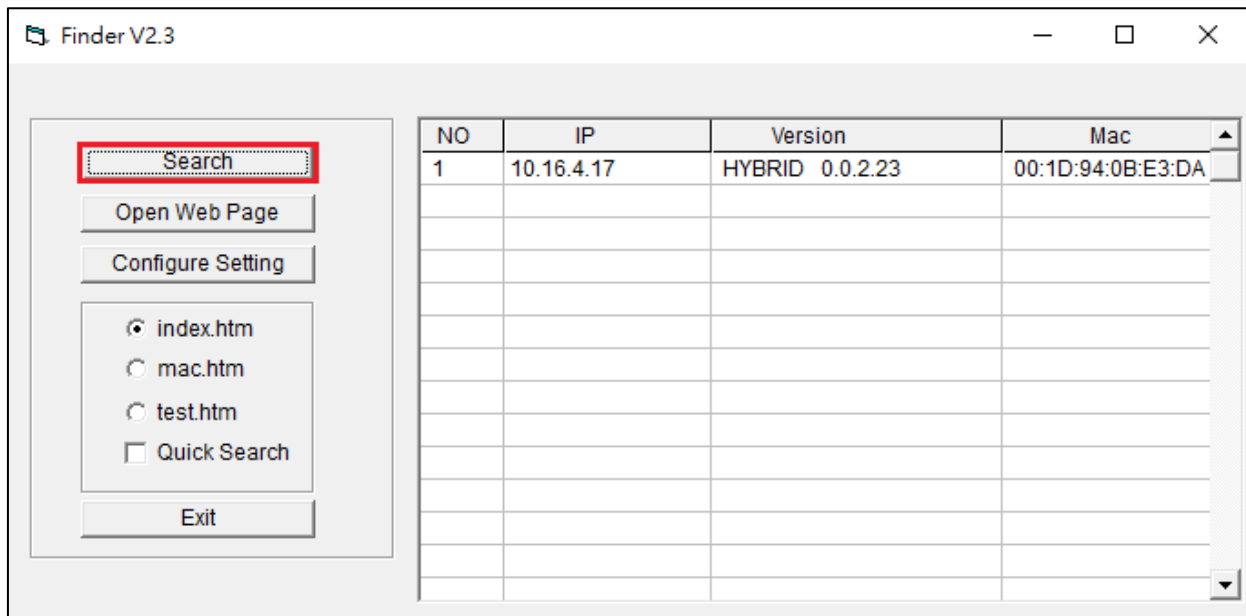

**Step 7. (Optional)** You can choose to edit the panel’s network setting by clicking on the panel column, then click “Configure Setting”

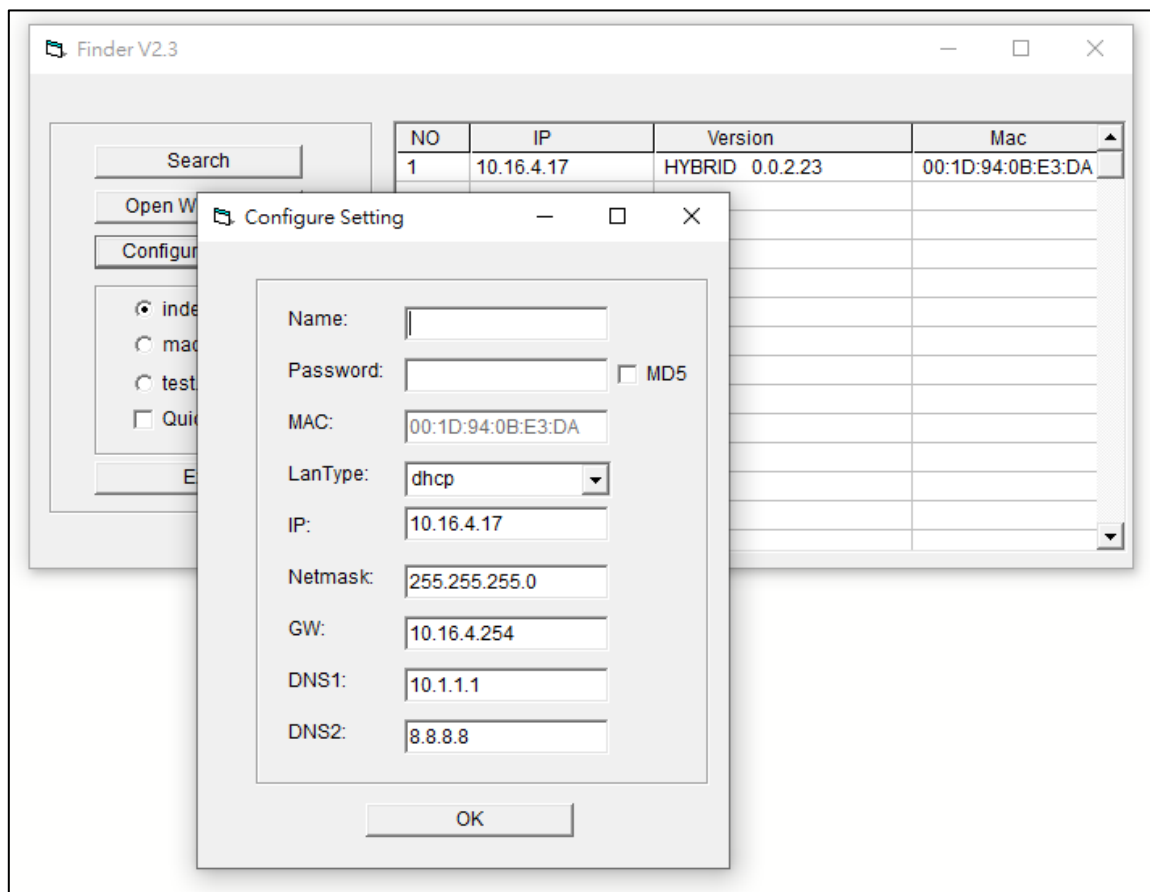

The LanType is default to **DHCP** and does not require manual input of IP/Netmask/Gateawy/DNS setting. If you wish to configure these setting manually, change LanType to **Static**.

After finish changing network setting, enter the user name (default: **admin**) and password (default: **cX+HsA\*7F1**) then click **OK** to confirm. The user name and password can be changed later in panel configuration webpage

- Step 8.** Click the panel information column and click on “**Open Web Page**”, or double click on the panel column to link to the panel configuration webpage. Your default browser will start automatically to connect to the LAN IP displayed in Finder.

## 4. Connection to Panel Webpage

For first time setup, webpage connection is only available within 1 hour after the panel is powered on; if the panel has been powered on for more than 1 hour. Webpage access will be disabled. Reboot the panel to enable webpage function again.

**Step 1.** Select the Control Panel in the Finder software and click on “Open Webpage” to connect to panel webpage.

Alternatively, enter the Control Panel IP address displayed in Finder into your browser’s address section and proceed.


**Step 2.** Enter the User name & Password to proceed

User name: **admin**

Password: **cX+HsA\*7F1**

(If wrong user name and password are entered for **5** times, the local webpage login will be disabled for **5** minutes.)

**Step 3.** You will enter panel Welcome page. The Control Panel’s information will be displayed. Click on the pages and folders on the left to access the Control Panel’s various functions

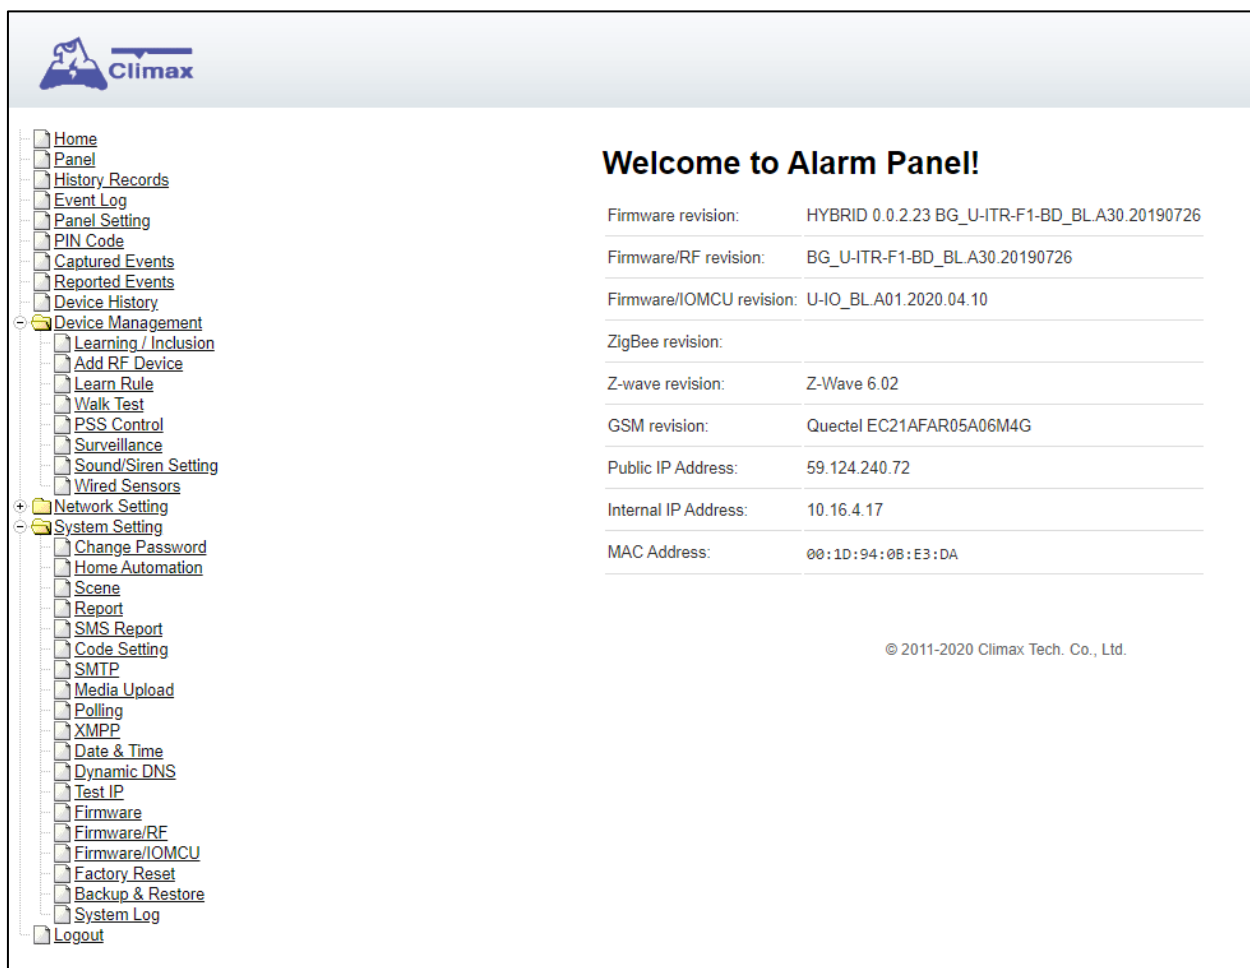

The screenshot displays the Climax Alarm Panel Webpage. On the left is a sidebar menu with the following items: Home, Panel, History Records, Event Log, Panel Setting, PIN Code, Captured Events, Reported Events, Device History, Device Management (expanded), Learning / Inclusion, Add RF Device, Learn Rule, Walk Test, PSS Control, Surveillance, Sound/Siren Setting, Wired Sensors, Network Setting (expanded), System Setting (expanded), Change Password, Home Automation, Scene, Report, SMS Report, Code Setting, SMTP, Media Upload, Polling, XMPP, Date & Time, Dynamic DNS, Test IP, Firmware, Firmware/RF, Firmware/IOMCU, Factory Reset, Backup & Restore, System Log, and Logout. The main content area is titled "Welcome to Alarm Panel!" and displays the following information:

Firmware revision:	HYBRID 0.0.2.23 BG_U-ITR-F1-BD_BLA30.20190726
Firmware/RF revision:	BG_U-ITR-F1-BD_BLA30.20190726
Firmware/IOMCU revision:	U-IO_BLA01.2020.04.10
ZigBee revision:	
Z-wave revision:	Z-Wave 6.02
GSM revision:	Quectel EC21AFAR05A06M4G
Public IP Address:	59.124.240.72
Internal IP Address:	10.16.4.17
MAC Address:	00:1D:94:0B:E3:DA

© 2011-2020 Climax Tech. Co., Ltd.

The Welcome page displays current control panel firmware version information according to different panel model and MAC address.

## 5. Device Management

The Device Management section allows you to learn in, edit, control and view all available accessory devices that can be included in the Panel.

### 5.1. Learning of Devices

Use this function to add new devices into the Control Panel.

The following types of accessory devices are supported:


- **RF device:** All Climax RF devices are supported. (For ZigBee only model, RF devices are not supported.)
- **ZigBee device:** All ZigBee device with ZigBee Home Automation 1.2 profile are supported.

#### <IMPORTANT NOTE>

- ☞ The Control Panel built-in ZigBee module supports up to 40 ZigBee devices by itself. If you wish to include more than 40 ZigBee devices into the Control Panel, you must add extra ZigBee Routers into the Control Panel's ZigBee network to increase the network's maximum device capacity.
- **IP Cameras:** The Control Panel is compatible with Climax VST-1818 Series IP Camera. Up to 6 IP Cameras are supported.

#### 5.1.1. Add Sensor

**Step 1.** Click on “**Learning**” to enter learn page.

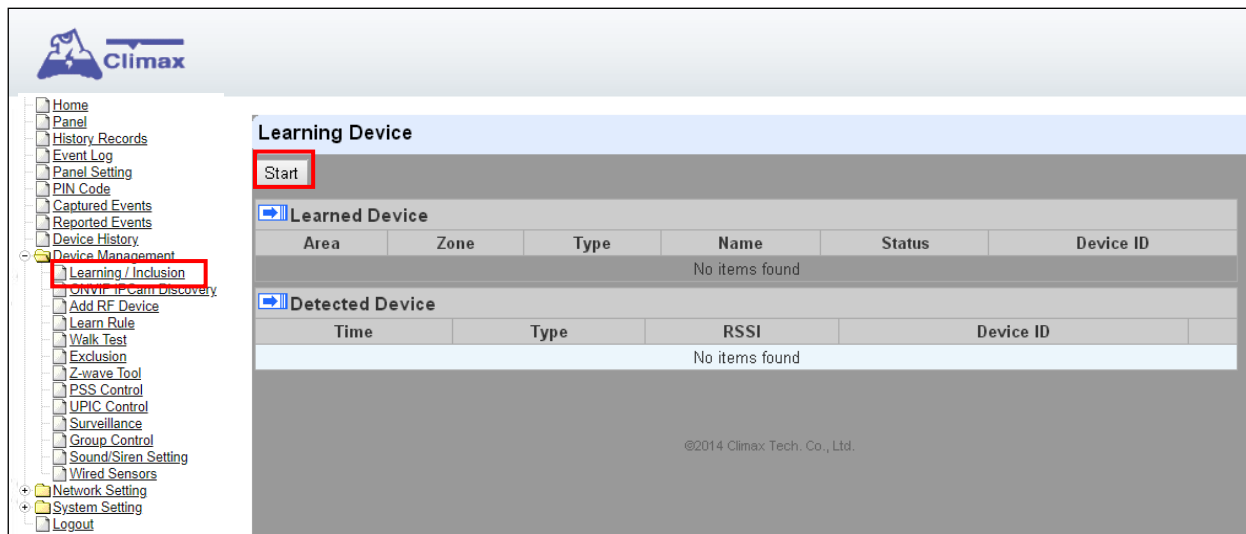

**Step 2.** Click on “**Start**” to enter learning mode.

**Step 3.** Press the test or learn button on the each device or any button on the Remote Controller. (Please refer to each sensor's user manual for test or learn button position).

#### <NOTE>

- ☞ For ZigBee sensors, press and hold the learn button for 10~12 seconds to transmit a learn code.
- ☞ For IP Camera VST-1818 Series, press and hold the Privacy button for 10 seconds.

**Step 4.** When the system received the signal transmitted from device, the screen will display its information for selection.



## <NOTE>

- ☞ It takes 5-10 seconds for the Control Panel to receive a learn code from ZigBee or Shutter Control Sensor.

**Step 5.** Click “Add” to include selected device into panel. If the sensor you wish to learn into already exists in the system, the sensor information will be displayed in the **Learned Device** section. If not, the sensor information will be displayed in the **Detected Device** section.

## <NOTE>

- ☞ For VST-862 F1 devices, press and hold the learn button for 3 seconds for the Control Panel to receive a learn code, and then click “Add” within 30 seconds.

The screenshot shows the Climax web interface for learning a device. On the left is a navigation menu with options like Home, Panel, History Records, Event Log, Panel Setting, PIN Code, Captured Events, Reported Events, Device History, and Device Management (which is expanded to show Learning / Inclusion, ONVIF IPCam Discovery, Add RF Device, Learn Rule, Walk Test, Exclusion, Z-wave Tool, PSS Control, UPIC Control, Surveillance, Group Control, Sound/Siren Setting, and Wired Sensors). The main area is titled 'Learning Device' and contains a 'Stop' button. Below it are two sections: 'Learned Device' (currently empty with 'No items found') and 'Detected Device'. The 'Detected Device' section has a table with columns: Time, Type, RSSI, and Device ID. A single device is listed: Time 02:31:49, Type Door Contact, RSSI 8, and Device ID RF:d291a110. An 'Add' button is highlighted with a red box next to the Device ID.

Time	Type	RSSI	Device ID
02:31:49	Door Contact	8	RF:d291a110

**Step 6.** If the device is successfully learnt into the system, the added device will be displayed in the “Learned Device” section.

This screenshot shows the same Climax web interface after a device has been successfully added. The 'Learned Device' section now contains a table with one entry. The 'Detected Device' section remains empty with 'No items found'. The 'Add' button from the previous screenshot is now crossed out with a red line.

Area	Zone	Type	Name	Status	Device ID
1	1	Door Contact			RF:d291a110

**Step 7.** Repeat Step 3~5 to learn in all device, click Stop to exit learn mode when complete. The system will automatically exit Learn mode if left idle for 5 minutes.

### 5.1.2. Local Learning

Instead of learning devices via configuration webpage, you can also learn in devices by using the learn button of the Control Panel.

**Step 1.** Press and hold the learn button of the Control Panel for 10 seconds, release when the Control Panel emits one short beep. LED 1 & 2 (Green) will turn ON to indicate the Control Panel is now in learning mode.

- Step 2.** Press the test or learn button on each device to transmit signal, refer to device manual for detail.
- Step 3.** When the Control Panel receives signal from device, it will emit 2 beeps to confirm. The device will be included in the panel automatically.
- Step 4.** After finishing learning all devices, press the button once. The Control Panel will emit 2 short beeps to indicate it has returned to normal operation mode. LED 1 & 2 will dim. If the user does not press the button within 5-6 minutes, the system will automatically return to normal operation mode.

### <NOTE>

- ☞ The Control Panel cannot enter learning mode when under Away Arm/Home Arm or Walk Test mode. The Control Panel will emit 5 beeps to indicate error.

### 5.1.3. Edit Devices

After finish learning devices, proceed to edit the device setting.

- Step 1.** Click **Panel** to enter Panel webpage. All learnt in devices will be displayed under **Device List** section.

**Panel Control**

**Area 1**  
Current mode: Disarm  
☐ Disarm ☐ Full Arm ☐ Home Arm 1 ☐ Home Arm 2 ☐ Home Arm 3

**Area 2**  
Current mode: Disarm  
☐ Disarm ☐ Full Arm ☐ Home Arm 1 ☐ Home Arm 2 ☐ Home Arm 3

**Panel Status**

Battery	Tamper	Interference	AC activation	Signal GSM	Background RSSI
Normal	N/A	Normal	Normal	N/A	0

Test System:

**System in maintenance**

**Fault Status**

Fault	Setting
SIM Not Inserted	<input type="checkbox"/> Clear
GSM No Signal	<input type="checkbox"/> Clear

Reload

**Device List**

Area	Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status	
1	1	Door Contact					No	N/A		<a href="#">Edit</a> <a href="#">Delete</a>

**Note**


No.	Type	Description	
#1			<a href="#">Edit</a>
#2			<a href="#">Edit</a>
#3			<a href="#">Edit</a>
#4			<a href="#">Edit</a>
#5			<a href="#">Edit</a>

- Step 2.** To edit the device setting or information, click **"Edit"** at end of device entry.

**Device List**

Area	Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status	
1	1	Door Contact					No	N/A		<a href="#">Edit</a> <a href="#">Delete</a>

- Step 3.** You will enter Device Edit webpage



- Home
- Panel
- History Records
- Event Log
- Panel Setting
- PIN Code
- Captured Events
- Reported Events
- Device History
- + Device Management
- + Network Setting
- + System Setting
- Logout

## Device Edit

### Door Contact

ID: RF:03d6b110

Version:

Capability:

Name:

Area:

Zone:

Attribute: ☐ Permanently Bypass

Attribute: ☒ Latch report

Attribute: ☐ Set/Unset:

Attribute: ☐ 24 HR:

Disarm Response:

Full Arm Response:

Home Arm 1 Response:

Home Arm 2 Response:

Home Arm 3 Response:

Trigger Response:

Restore Response:

Exit: ☒ No Response

Or [Cancel](#)

**Step 4.** Edit your device setting and information according to instruction below. Click “OK” to save your new changes when finished. Alternatively, click “Default” to reset all parameters to default values or click “Reset” to re-enter all the information.

- **Name:** Enter a name for the device.
- **Area:** Select the area which the device belongs to.
- **Zone:** Select the Device zone number.
- **Attribute List:**  
The attribute list determines panel behaviour when the panel receives trigger signal from the device. There are

#### General Attribute:

##### Permanently Bypass

This function allows user to permanently deactivate (bypass) the selected device.

- If bypassed, then the Control Panel will not respond at all when the sensor is triggered.
- If bypassed, the system can be armed directly regardless the device’s fault situation. However, its fault situation will still be monitored, logged and displayed in the webpage.

##### Latch report

This function **ONLY** applies to Remote Control or Door Contact with Set/Unset attribute enabled.

- Latch Report **ON**: When the device is used to change system arm mode, the Control Panel will report the arm/disarm action by the particular device.
- Latch Report **OFF**: When the device is used to change system arm mode, the Control Panel will not report the arm/disarm action by the particular device.

#### Set/Unset

This function is for Door Contact only. This function allows Door Contact to control system mode.

- **Normal Close**: The system will be armed when the Door Contact is opened, and disarmed when Door Contact is closed.
- **Normal Open**: The system will be armed when the Door Contact is closed, and disarmed when Door Contact is open.

#### 24HR

This function enables the device to activated selected alarm event whenever it is triggered regardless of system mode. System mode response will be disabled if 24HR attribute is enabled.

#### **System Mode Attributes:**

The System Mode Attributes determines system behavior under particular arming mode when the sensor is triggered.

#### No Response

- When a sensor with **No Response** is triggered, the Control Panel will not respond.

#### Start Entry Delay 1/ Start Entry Delay 2

- When the system is under Full Arm or Home Arm mode, if a sensor with **Start Entry Delay 1/2** attribute is triggered, Control Panel will start an entry countdown period to give enough time to disarm the system.
- When the Control Panel is in the Disarm mode, if a sensor with **Start Entry Delay 1/2** attribute is triggered, the Control Panel will immediately report a burglar interior alarm (**CID code: 132**).
- When the Control Panel is in the Full Arm mode, if a sensor with **Start Entry Delay 1/2** attribute is triggered, the Entry Delay 1/2 timer starts counting down. If no correct pin code is entered during the entry delay timer to disarm the system, the Control Panel will report a burglar perimeter alarm (**CID code:131**) immediately after entry delay timer 1/2 expires.
- When the Control Panel is in the Home Arm 1/2/3 mode, if a sensor with **Start Entry Delay 1/2** attribute is triggered, the Entry Delay 1/2 timer starts counting down. If no correct pin code is entered during the entry delay period to disarm the system, the Control Panel will report a burglar interior alarm (**CID code: 132**) immediately after entry delay timer 1/2 expires.

#### Chime

- When the system is in Arm/ Home Arm 1/ Home Arm 2/ Home Arm 3 mode, if a sensor set to Chime is triggered, the Control Panel will sound a Door Chime (Ding-Dong Sound).

#### Burglar Follow

- When the system is in Full Arm or Home Arm mode, if a sensor set to **Burglar Follow** is triggered, the Control Panel will report a burglar alarm immediately.
- When a Start Entry sensor is triggered and the system is under Entry Delay Timer countdown, if a sensor set to **Burglar Follow** is triggered, the Control Panel will wait until the Entry Delay Timer expires before activating a burglar alarm. If the system is disarmed before the timer expires, the Control Panel will not activate alarm.

#### **Burglar Instant**

- When the system is under Full arm or Home Arm / Disarm / Entry Time mode, if a sensor set to **Burglar Instant** is triggered, the Control Panel will report a burglar alarm immediately.

#### **Burglar Outdoor**

- When the system is in Full Arm or Home Arm / Disarm / Entry Time mode, if a sensor set to **Burglar Outdoor** is triggered, the Control Panel will report a burglar outdoor event immediately.

#### **Cross Zone**

- See **10.3 Appendix – Cross Zone Verification** for detail.

#### **Apply Scene**

- This function is only available for Remote Keypad and Remote Control.
- Select a Home Automation Scene number for a Remote Keypad or Remote Control button. When the button is pressed, the Control Panel will execute the actions programming in the Scene accordingly. For more information, please refer to **8.3. Scene**.

### **Home Automation Attributes:**

The Home Automation Attributes allows a device to control Home Automation function.

#### **Trigger Response**

- When the device is triggered, the Control Panel will activated selected Home Automation Scene number. Please refer to **8.3. Scene** webpage for detail.

#### **Restore Response**

- When the device transmits restore signal after trigger, the Control Panel will activate selected Home Automation Scene number.

### **Other Attributes:**

#### **Permanent Bypass**

- When checked, the panel will completely ignore all signal received from this device. A bypassed device will be unable to trigger any response, including alarm or fault from the Control Panel. All other attribute settings will be also be ignored.

#### **Exit (No Response)**

- If checked, the panel will ignore trigger signal from this sensor during Exit Time countdown. If deselected, the panel will activated burglar alarm and report immediately when the sensor triggered during Exit Delay Timer.

#### **24HR**

- A sensor set to 24HR attribute will ignore Disarm, Full Arm, Home are and Exit response setting. The panel will activate selected alarm when this sensor is triggered regardless of system mode under any time.

#### <NOTE>

- ☞ Some devices have their own unique functions and will have its own attribute setting which is not listed in this section. Please refer to the device manual for its setting detail.

### 5.1.4. Delete Devices

**Step 1.** To delete a sensor, click “Delete” under “Device List”

Device List										
Area	Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status	
1	1	Door Contact		<div></div>	<div></div>	<div></div>	No	N/A		<a href="#">Edit</a> <a href="#">Delete</a>

**Step 2.** A message “Delete success” is displayed and the sensor you choose is deleted successfully.

### 5.1.5. Identify ZigBee Device

The Identify function is available for ZigBee device only, it can be used to locate ZigBee devices after learning.

For battery powered ZigBee devices, the identify fuction should be used within 1 minute after pressing device button, or 3 minute after learning in the device. Otherwise due to ZigBee network mechanisms, the device may not be able to receive signal successfullly from panel. AC powered ZigBee devices do not have such limits and you can use Identify function anytime.

**Step 1.** Click “Identify” under the Device List after the device column entry.

Device List										
Area	Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status	
1	1	Repeater		<div></div>	<div></div>	<div></div>	No	N/A		<a href="#">Edit</a> <a href="#">Delete</a> <a href="#">Identify</a>

**Step 2.** If the ZigBee device receives signal successfully, the webpage will display a success message and the ZigBee device LED indicator will flash 10 times to confirm.


#### <NOTE>

- If a timeout message is displayed on webpage, it means the device did not receive signal from Control Panel, please check ZigBee device range from panel and make sure to follow instruction above about Identifying battery powered ZigBee devices.


### 5.1.6 Learning of Expansion Boards (WEZC-8, WEZ Series and WEPC-1)

**Step 1.** Connect the expansion board to the Control Panel. Then, power on the Control Panel.

**Step 2.** Click on “Learning” to enter learn page.

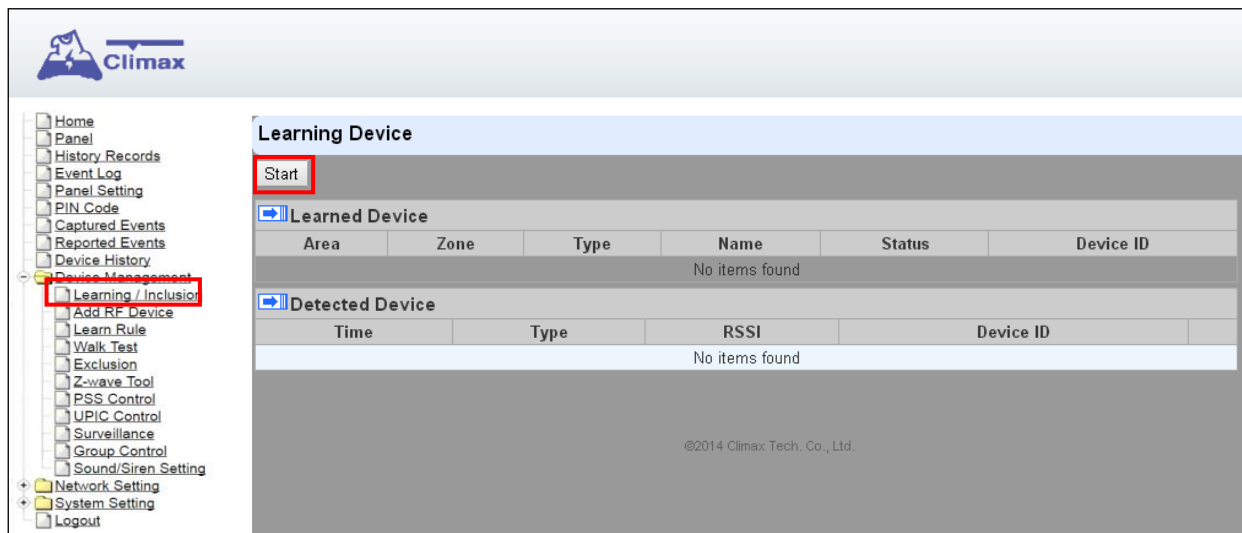


**Step 3.** Click on “**Start**” to enter learning mode.

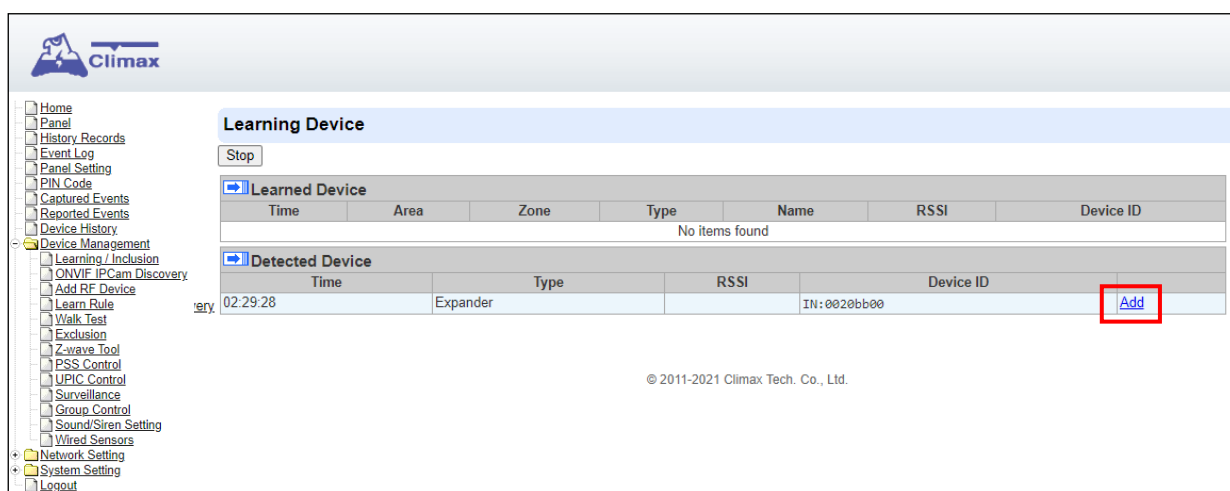

**Step 4.** Click “**Add**” to include expansion board into panel.

**Step 5.** If expansion board is successfully learnt into the system, the added device will be displayed in the “**Learned Device**” section. The Device Type will be shown as “**Expander**”.

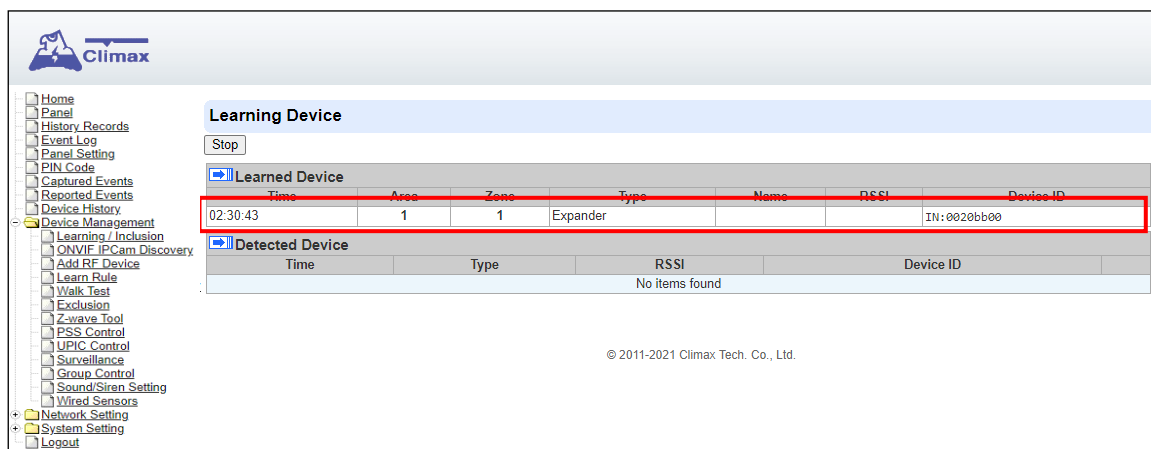

#### <NOTE>

- For details on how to program wired zones, please refer to **5.13. Wired Zones Programming**.

## 5.2. ONVIF IP Camera Discovery


You can learn-in the ONVIF IP Camera into you alarm system by connecting the IP Camera to the same local LAN of the Control Panel.

### <NOTE>

- ☞ This function is only available for integrating specific ONVIF IP Cameras.
- ☞ The server and the platform of the camera must support this function.
- ☞ See ***Dahua and Hikvision Learn-in Setting Quick Guide*** for detailed information.

**Step 1.** Connect IP Camera to the same LAN of Control Panel.

**Step 2.** Make sure the panel is properly installed, and open its webpage, and click on “**ONVIF IPCam Discovery**” under Device Management.

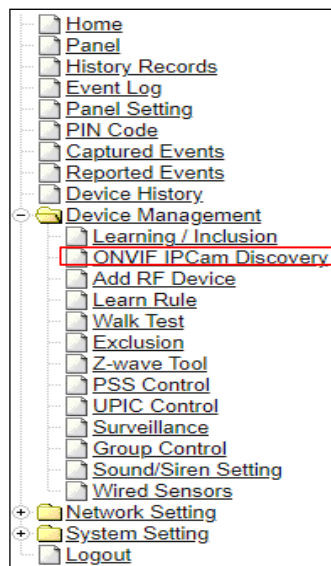


**Step 3.** Set the Control Panel into learning mode.

**Step 4.** Enter the Camera's User ID and Password under the Detected Device section.

- UserID: admin
- Password is printed on the label attached to the camera's box.

**Step 5.** Once the learning is successful, the information will be shown in Learned Device.

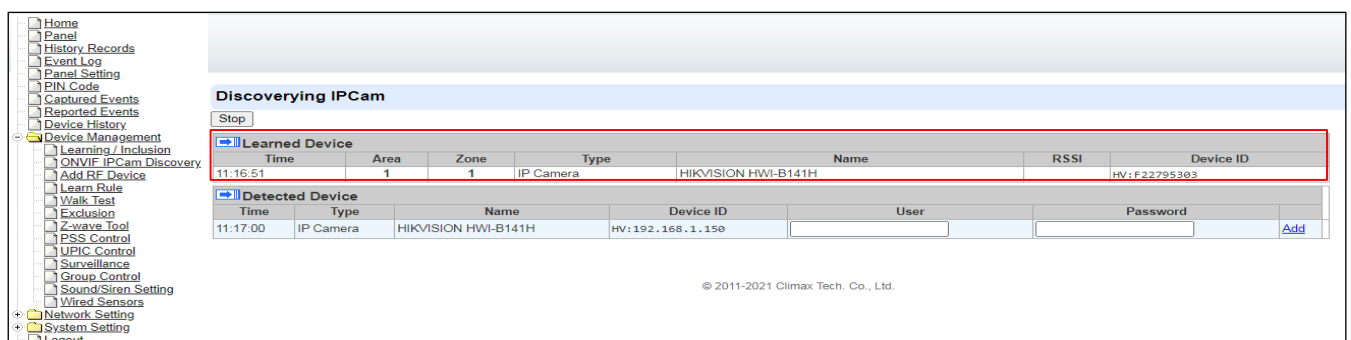




## 5.3. Add RF Device

You can add RF devices into the system by entering its RF code into the system with **Add RF Device** function.

**Step 1.** Click **Add RF Device**.

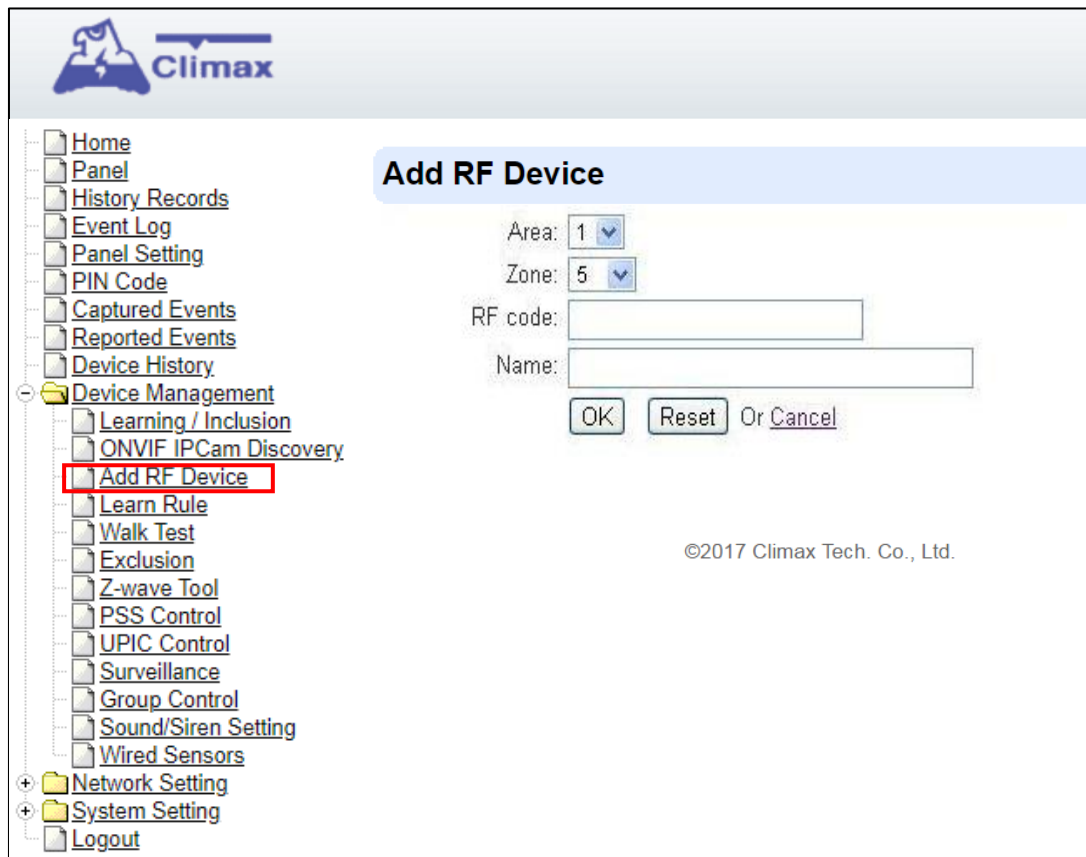

The screenshot shows the Climax web interface. On the left is a navigation menu with the following items: Home, Panel, History Records, Event Log, Panel Setting, PIN Code, Captured Events, Reported Events, Device History, Device Management (expanded), Learning / Inclusion, ONVIF IPCam Discovery, **Add RF Device** (highlighted with a red box), Learn Rule, Walk Test, Exclusion, Z-wave Tool, PSS Control, UPIC Control, Surveillance, Group Control, Sound/Siren Setting, Wired Sensors, Network Setting, System Setting, and Logout. On the right, the 'Add RF Device' form is displayed. It includes dropdown menus for 'Area' (set to 1) and 'Zone' (set to 5), a text input field for 'RF code', and another text input field for 'Name'. Below these fields are three buttons: 'OK', 'Reset', and 'Or Cancel'. At the bottom right of the form area, the copyright notice '©2017 Climax Tech. Co., Ltd.' is visible.

**Step 2.** Select Area and Zone number for the device you wish to add into system.

**Step 3.** Enter the device RF code, and preferred device name (up to 31 characters)


**Step 4.** Press “OK” to save

**Step 5.** If the RF code you entered is valid, the device will be added into the system according to the Area and Zone number. You do not need to learn the device as instructed in **5.1.1. Add Sensor**.

## 5.4. Learn Rule

You can enter the sensor RF code or ZigBee MAC address manually to assign area and zone number to this sensor. Sensors learned with pre-assigned rule will be put under the area and zone number you specified. This function does not work with Shutter Control devices and DECT device.

**Step 1.** Click **Learn Rule**.

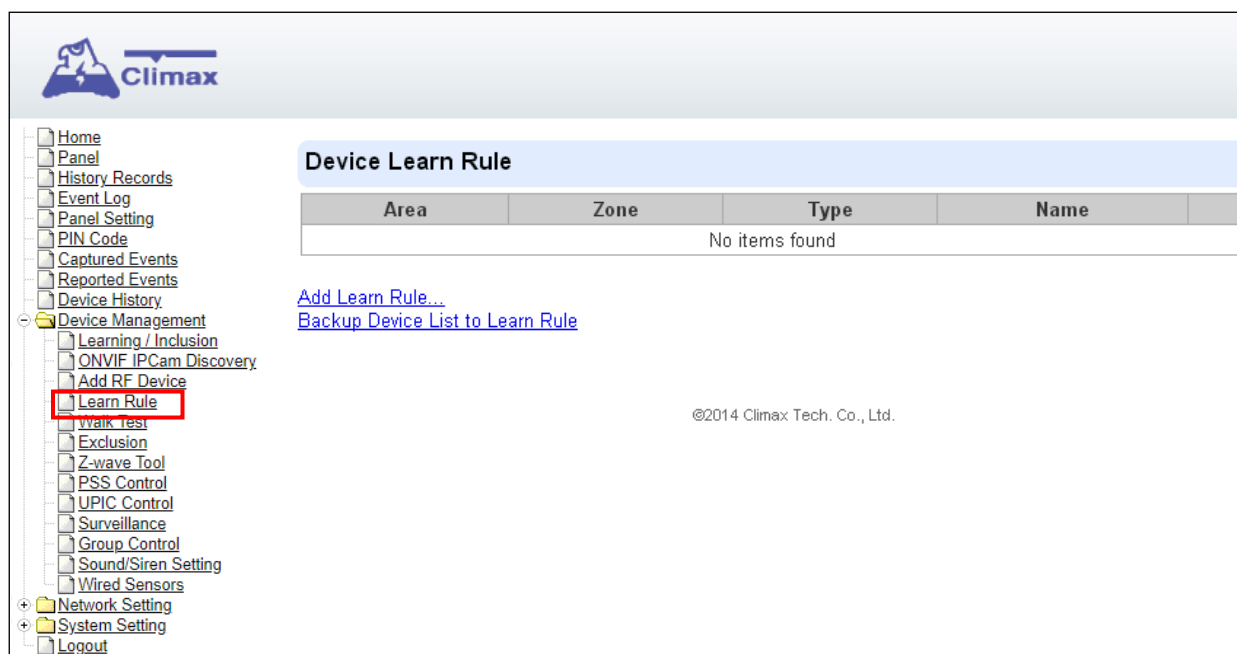

**Step 2.** You will see the **Add Learn Rule** menu.

The 'Add Learn Rule' form contains the following fields and controls:

- Area: 1 (dropdown menu)
- Zone: 1 (dropdown menu)
- System: ☐ RF ☒ ZigBee
- RF code: (text input field)
- ZigBee MAC: (text input field)
- ZigBee Device Type: IR (dropdown menu)
- Name: (text input field)
- Buttons: OK, Reset, Or Cancel

**Step 3.** Select **Area** and **Zone** number for this device.

**Step 4.** Select **RF** or **ZigBee**.

**Step 5.** Key in the RF code or ZigBee MAC info

**Step 6.** For ZigBee device, select a ZigBee Device Type

**Step 7.** Enter a preferred name for sensor (up to 31 letters or numbers).

**Step 8.** Press "OK" to save.

**Step 9.** If the process is successful, the screen will display "**Updated Successfully.**" You can then check, edit or delete the rule under the **Learn Rule** menu.

**Step 10** Repeat the steps to add more rules.

**Step 11.** Learn in the sensors you have entered rules for according to **5.1.1 Add Sensor**.

<NOTE>

- Learn rule function is only used to pre-assign area and zone number to sensors before learning. To add sensor to control panel, you still need to follow the instruction in **5.1.1 Add Sensor** to complete the learning process.

- **Backup Device List to Learn Rule**

You can choose to import learn rule from current learnt in ZigBee devices

**Step 1.** Click “Backup Device List to Learn Rule”.


**Step 2.** Click OK to confirm.

**Step 3.** The Learn Rule page will be updated with new rules according to current ZigBee device list information. Shutter Control device and IP Camera will not be included.

## 5.5. Walk Test

This is to test the sensor operation range for installation purpose.

**Step 1.** Click “**Start**” to enter Walk Test mode.

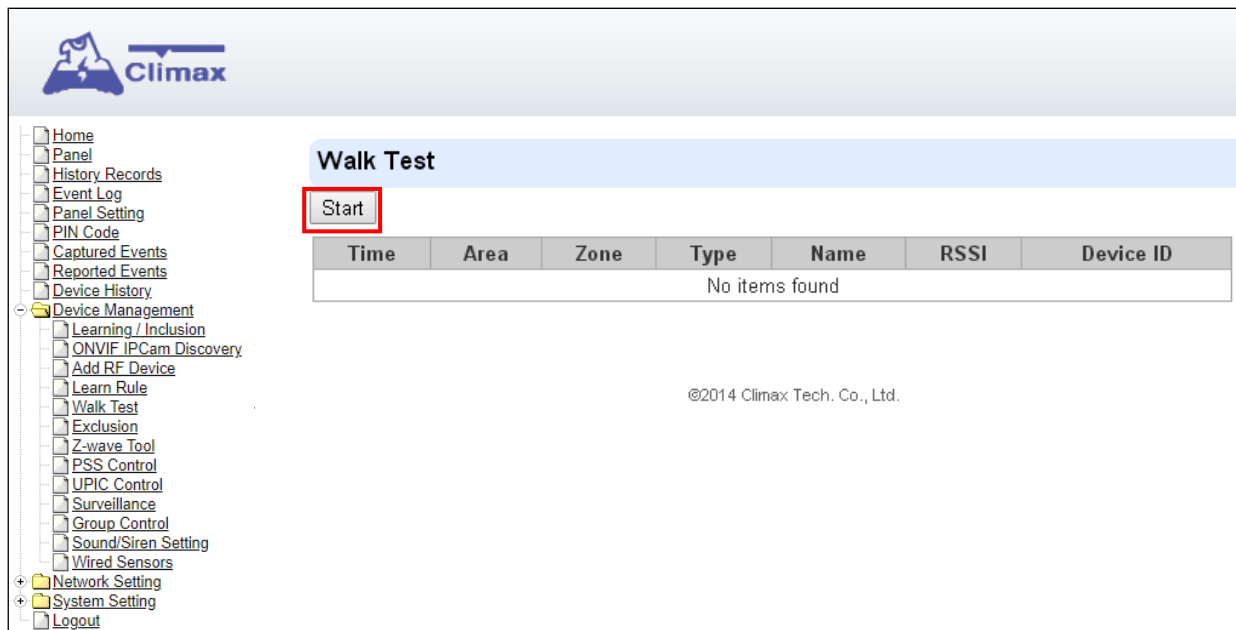

**Step 2.** Press the test button on the sensor(s) or any button on the Remote Controller or triggering the sensor.

**Step 3.** When the Control Panel receives a signal, it will show as below and a 2-tone beep will be heard to indicate that it is safe to install the particular sensor in the location.


- **Time:** time information
- **Area:** operation area
- **Zone:** device zone
- **Type:** device type
- **Name:** device name
- **RSSI:** the RF signal strength between Control Panel and sensor. The RSSI value here must be higher than the RSSI value of Panel's background noise (please refer to **6.1 Panel Condition** section for details). If not, you may still learn in the sensor; however, please relocate the sensor and use Walk test to find a more suitable location.
- **DeviceID:** device's unique identification code.

**Step 4.** Once all sensors are tested, click on “**Stop**” to exit Walk Test mode. The system will automatically exit Walk Test mode if left idle for 5 minutes.

## 5.6. Exclusion

This feature is only available for Shutter Control modules only, or when a Shutter Control dongle is inserted into the Control Panel. This feature is for you to remove Shutter Control device only.

**Step 1.** Click on “**Exclusion**” and click on “**Start**” to start the procedure. Then the Panel will enter the removing mode.



**Remove Z-wave device**


Start

Time	Device ID
No items found	

©2011 Climax Tech. Co., Ltd.

**Step 2.** Refer to the Shutter Control device manual to transmit signal.

**Step 3.** Select the desired Shutter Control and click **delete** to remove it from the Shutter Control list under **Device List** section (**Panel**). Then the Control Panel will remove the Shutter Control device.

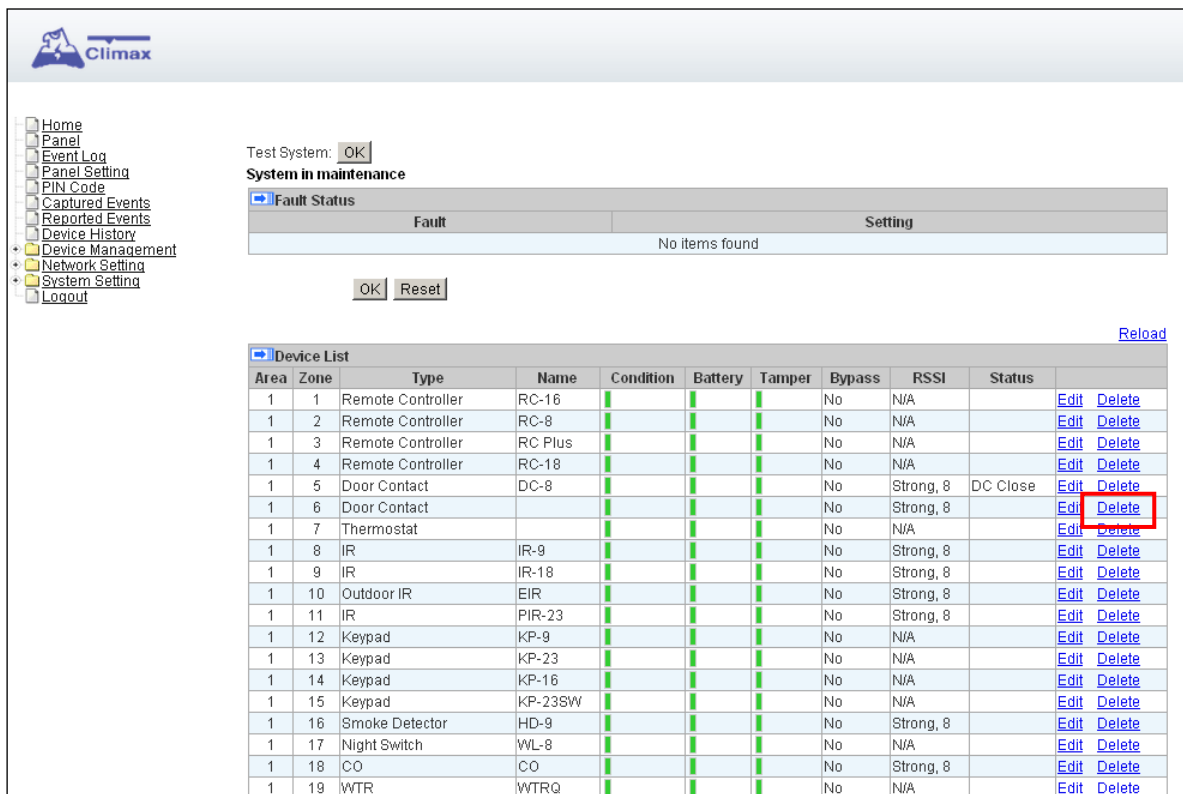

Test System:

**System in maintenance**

**Fault Status**

Fault	Setting
No items found	


[Reload](#)

**Device List**

Area	Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status	Edit	Delete
1	1	Remote Controller	RC-16				No	N/A		<a href="#">Edit</a>	<a href="#">Delete</a>
1	2	Remote Controller	RC-8				No	N/A		<a href="#">Edit</a>	<a href="#">Delete</a>
1	3	Remote Controller	RC Plus				No	N/A		<a href="#">Edit</a>	<a href="#">Delete</a>
1	4	Remote Controller	RC-18				No	N/A		<a href="#">Edit</a>	<a href="#">Delete</a>
1	5	Door Contact	DC-8				No	Strong, 8	DC Close	<a href="#">Edit</a>	<a href="#">Delete</a>
1	6	Door Contact					No	Strong, 8		<a href="#">Edit</a>	<a href="#">Delete</a>
1	7	Thermostat					No	N/A		<a href="#">Edit</a>	<a href="#">Delete</a>
1	8	IR	IR-9				No	Strong, 8		<a href="#">Edit</a>	<a href="#">Delete</a>
1	9	IR	IR-18				No	Strong, 8		<a href="#">Edit</a>	<a href="#">Delete</a>
1	10	Outdoor IR	EIR				No	Strong, 8		<a href="#">Edit</a>	<a href="#">Delete</a>
1	11	IR	PIR-23				No	Strong, 8		<a href="#">Edit</a>	<a href="#">Delete</a>
1	12	Keypad	KP-9				No	N/A		<a href="#">Edit</a>	<a href="#">Delete</a>
1	13	Keypad	KP-23				No	N/A		<a href="#">Edit</a>	<a href="#">Delete</a>
1	14	Keypad	KP-16				No	N/A		<a href="#">Edit</a>	<a href="#">Delete</a>
1	15	Keypad	KP-23SW				No	N/A		<a href="#">Edit</a>	<a href="#">Delete</a>
1	16	Smoke Detector	HD-9				No	Strong, 8		<a href="#">Edit</a>	<a href="#">Delete</a>
1	17	Night Switch	WL-8				No	N/A		<a href="#">Edit</a>	<a href="#">Delete</a>
1	18	CO	CO				No	Strong, 8		<a href="#">Edit</a>	<a href="#">Delete</a>
1	19	WTR	WTRQ				No	N/A		<a href="#">Edit</a>	<a href="#">Delete</a>

## 5.7. Shutter Control Tool

The Shutter Control Tool is used to reset Shutter Control module to factory default and remove all Shutter Control devices, or change routing setting.

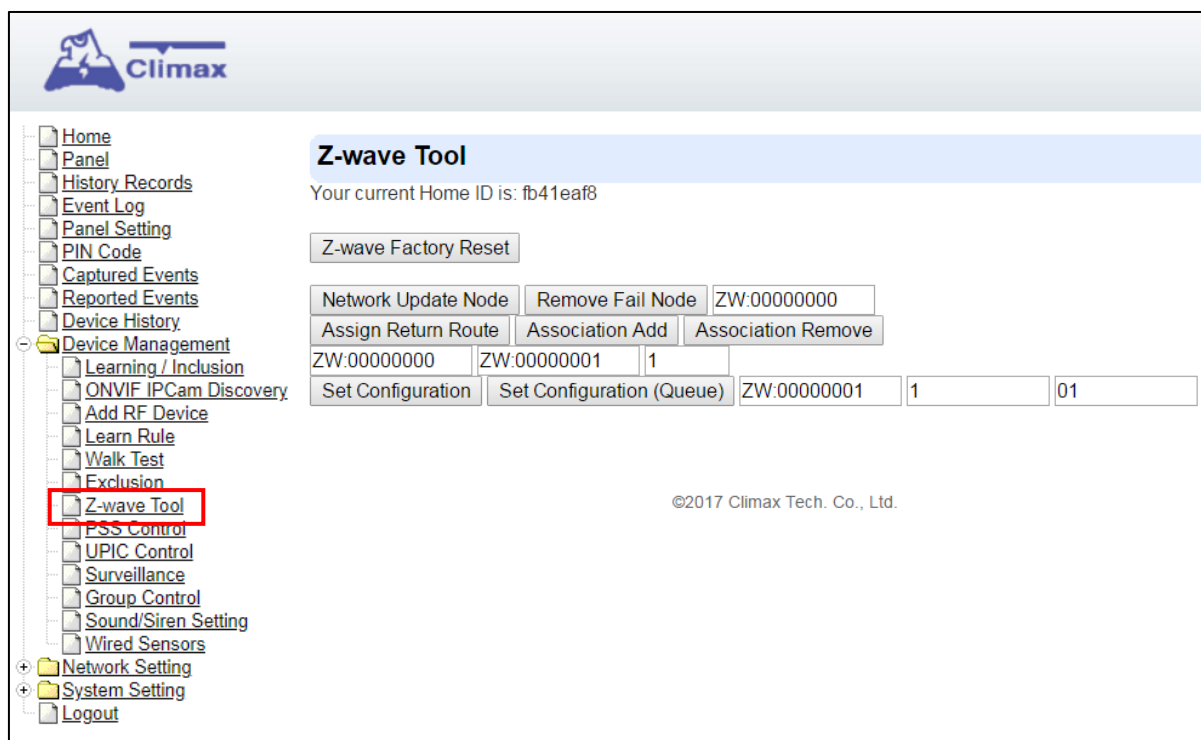

**Step 1.** Click "**Shutter Control Factory Reset**", the Shutter Control module is reset to factory default and all Shutter Control devices will be removed automatically. The Control Panel Home ID will also be changed automatically for a newly added Shutter Control device to recognize.


**Step 2.** The list of Shutter Control devices is still displayed in the **Panel** webpage. Please go to panel webpage and remove all Shutter Control devices.

- **Change Shutter Control Routing Setting**

Use the other functions to configure your Shutter Control routing settings.

## 5.8. PSS Control

This feature is designed to control/edit/delete Power Switches included in the panel.

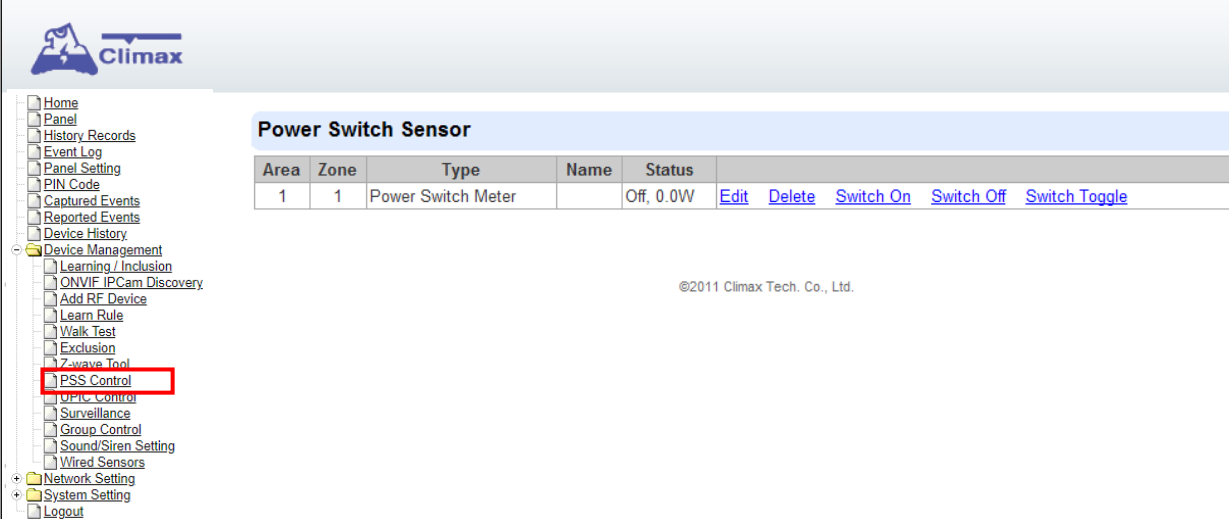

The screenshot displays the Climax web interface. On the left is a sidebar menu with various options. The 'PSS Control' option is highlighted with a red rectangle. The main content area is titled 'Power Switch Sensor' and contains a table with the following data:

Area	Zone	Type	Name	Status	
1	1	Power Switch Meter		Off, 0.0W	<a href="#">Edit</a> <a href="#">Delete</a> <a href="#">Switch On</a> <a href="#">Switch Off</a> <a href="#">Switch Toggle</a>

Below the table, the copyright notice '©2011 Climax Tech. Co., Ltd.' is visible.

- Click **Edit** to edit attributes of power switches.
- Click **Delete** to remove power switch from panel.
- Click **Switch On/Switch Off** to turn on/off power switches. Or click **Switch Toggle** to toggle between on/off status. For Power Switch Dimmer, you can also set its power output level with the slide down menu.

## 5.9. UPIC Control

UPIC Control webpage allows you to control UPIC IR Transmitter included in Control Panel.

The screenshot displays the UPIC Control web interface. On the left is a sidebar menu with categories like Home, Panel, History Records, and Device Management. The 'UPIC Control' option under Device Management is highlighted with a red box. The main area has a header 'UPIC Control' and a table with columns: Area, Zone, Type, and Name. Below the table, there are dropdown menus for 'Air Conditioner', 'TV', 'Home Audio', 'Set-top Box', and 'Others', each with a 'Setup UPIC' button. A diagram labeled 'UPIC5 LEDs' shows a central blue circle connected to five surrounding blue circles numbered 1 through 5.

### ● Transmit IR Signal

Depending on the UPIC model number, select the function to be performed in the drop down menu, then click “Setup UPIC” for the UPIC to transmit IR Signal.

### ● UPIC5 LED Setup (UPIC5 only)

UPIC5 has 6 IR LEDs, a central one and 5 surrounding ones. The central LED will always transmit IR signal when activated; besides the central LED, one of the 5 surrounding LEDs can be selected to activate upon IR signal transmission to increase the IR signal coverage.

**Step 1:** Refer to the diagram on the webpage and UPIC5 manual to determine which LED should be used for signal transmission to each particular home appliance.

**Step 2:** Select the LED number from the drop down menu for each appliance type, then click “Setup LED” to confirm. Please refer to UPIC5 manual for more information.


### <EXAMPLE>

- If “Air Conditioner” is set to LED 1, UPIC5 will transmit all Air Condition functions with both Central LED and LED1.
- If “TV” is set to LED 5, UPIC5 will transmit all Air Condition functions with both Central LED and LED5.



## 5.10. Surveillance

The PIR Camera/Video Cameras and IP Cameras are listed under **Surveillance** for separate control.



**Surveillance**

Area	Zone	Type	Name	
1	2	IR Camera		<a href="#">Edit</a> <a href="#">Delete</a> <a href="#">Request Media</a> <a href="#">Request Media (No Flash)</a>
1	9	IP Camera		<a href="#">Edit</a> <a href="#">Delete</a> <a href="#">Request Media</a> <a href="#">View</a> <a href="#">Setting</a>

©2015 Climax Tech. Co., Ltd.

- Click **Edit** to edit camera attributes.
- Click **Delete** to remove device from panel.
- Click **Request Media** to capture a picture or video
  - PIR camera: A picture will be captured upon request
  - PIR Video Camera: A 10-second video will be recorded upon request
  - IP Camera: The IP Camera will record a video according to its video length setting (Please refer to IP Camera manual for detail.)
  - For PIR Camera/Video Camera, you can choose to take the picture/video without activating the camera's flash.

Picture and video captured by PIR Camera and PIR Video Camera will be stored under the **Captured Event** webpage. Video Recorded by IP Camera will be stored in the IP Camera, please refer to IP Camera manual to view the video

- For IP Camera, click "View" or "Setting" to access IP Camera webpage for video streaming or setting configuration. A new webpage will open and you will be required to enter the username and password for the IP Camera to access streaming or setting.

## 5.11. Group Control

This feature is designed for you to edit a name of group, switch on or off a group of Power Switches. You can also assign Power Switches to groups you desire.

### 5.11.1. Group Control/Edit

**Step 1.** Specify a new name for a group.

**Group List**

Group	Name	Switch On	Switch Off
1	<input type="text"/>	<a href="#">Switch On</a>	<a href="#">Switch Off</a>
2	<input type="text"/>	<a href="#">Switch On</a>	<a href="#">Switch Off</a>
3	<input type="text"/>	<a href="#">Switch On</a>	<a href="#">Switch Off</a>
4	<input type="text"/>	<a href="#">Switch On</a>	<a href="#">Switch Off</a>
5	<input type="text"/>	<a href="#">Switch On</a>	<a href="#">Switch Off</a>
6	<input type="text"/>	<a href="#">Switch On</a>	<a href="#">Switch Off</a>
7	<input type="text"/>	<a href="#">Switch On</a>	<a href="#">Switch Off</a>
8	<input type="text"/>	<a href="#">Switch On</a>	<a href="#">Switch Off</a>

[OK](#) [Reset](#)

**Device List**

Area	Zone	Type	Name	Group 1	Group 2	Group 3	Group 4	Group 5	Group 6	Group 7	Group 8	
1	4	Power Switch Meter		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">Edit</a> <a href="#">Delete</a>

[OK](#) [Reset](#)

**Step 2.** Click Switch On or Switch Off to turn on or off one group of power switches.

### 5.11.2 Device Edit/Delete

**Step 1.** Check on the groups you wish to assign the Power Switch. This is a multiple-choice field and you can assign one Power Switch to multiple groups. Whenever one of the assigned groups receives request to turn on/off, all Power Switches belonging to the group will be activated accordingly.

**Device List**

Area	Zone	Type	Name	Group 1	Group 2	Group 3	Group 4	Group 5	Group 6	Group 7	Group 8	
1	1	Power Switch Meter		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<a href="#">Edit</a> <a href="#">Delete</a>

[OK](#) [Reset](#)

**Step 2.** Click **Edit** to edit attributes of an added power switch or power switch meter or **Delete** to delete this device.

## 5.12. Sound/Siren Setting

The Sound/Siren Setting page includes setting Siren configuration function.

**Sound/Siren Setting**

Area	Zone	Type	Name
1	4	Siren	<a href="#">Edit</a> <a href="#">Delete</a>

**RF Siren Setup**

©2017 Climax Tech. Co., Ltd.

### 5.12.1. Device Edit/Delete

Click **Edit** to edit the Siren's attribute, volume and voice settings, or **Delete** to delete the Siren.

**Sound/Siren Setting**

Area	Zone	Type	Name
1	4	Siren	<a href="#">Edit</a> <a href="#">Delete</a>

**RF Siren Setup**

After clicking **Edit**, you will be directed to the Device Edit page:

### <NOTE>

- The Device Edit page is only available for the newest BX/Siren series and BX series **without DIP Switch**.

Edit your Siren setting and information accordingly to instruction below. Click “**OK**” to save your new changes when finished. Alternatively, click “**Default**” to reset all parameters to default values or click “**Reset**” to re-enter all the information.

- **Name:** Enter a name for the Siren.
- **Area:** Select the area which the Siren belongs to.
- **Zone:** Select the Siren zone number.

#### Attribute:

- **Permanently Bypass:** If checked, the Control Panel will completely ignore all signal received from the Siren. A bypassed Siren will not be able to trigger any response, including alarm or fault from the Control Panel. All other attribute settings will also be ignored.
- **Whole Area:** if checked, all the Volume, Voice and Behavior functions will be simultaneously enabled in all areas.

#### Volume:

- **Alarm Sound:** set the volume of the alarm sound of the Siren when alarming.
- **Full arm confirm beep:** set the volume of the confirm beep sound of the Siren when Control Panel is put into Full Arm Mode.

- **Home arm confirm beep:** set the volume of the confirm beep sound of the Siren when Control Panel is put into Home Arm Mode.
- **Disarm confirm beep:** set the volume of the confirm beep sound of the Siren when Control Panel is put into Disarm Mode.
- **Exit beeps of full arm:** set exit countdown beep volume under Full Arm Mode.
- **Exit beeps of home arm:** set exit countdown beep volume under Home Arm Mode.
- **Entry beeps of full arm:** set entry countdown beep volume under Full Arm Mode.
- **Entry beeps of home arm:** set entry countdown beep volume under Home Arm Mode.
- **Door Chime:** set the volume of the Door Chime sound (Ding-Dong Sound).

#### Voice:

*(The following functions are only available for **SRV** devices):*


- **Doorbell:** set the volume of the ring tone when pressing the button on the Video Door Phone (VDP).
- **Fault beep:** set the volume of the voice played when system is force armed under fault conditions.
- **Pre-alarm (outdoor IR warning beeps):** set the volume of the voice played when an outdoor burglar sensor(Door Contact, IR) is triggered.

#### Behavior

*(The following functions are only available for **RF modules**):*

- **Burglar trigger in home arm:** Enable or Disable whether Siren is activated when an alarm is triggered under Home Arm.
- **Burglar trigger in full arm:** Enable or Disable whether Siren is activated when an alarm is triggered under Full Arm.
- **Strobe activation:** Enable or Disable Siren LED strobe activation.
- **Confirm flash:** Enable or Disable Siren LED flash when system Armed/Disarmed.
- **Exit flash:** Enable or Disable Siren LED flash during an exit countdown period.
- **Entry flash:** Enable or Disable Siren LED flash during an entry countdown period.
- **Trigger flash:** Enable or Disable the flashing from the Siren LED when alarming.
- **Alarm-in-memory sound:** Enable or Disable Alarm in Memory sound.
- **Fault sound:** Enable or Disable system fault sounds.

## 5.12.2. RF Siren Setup

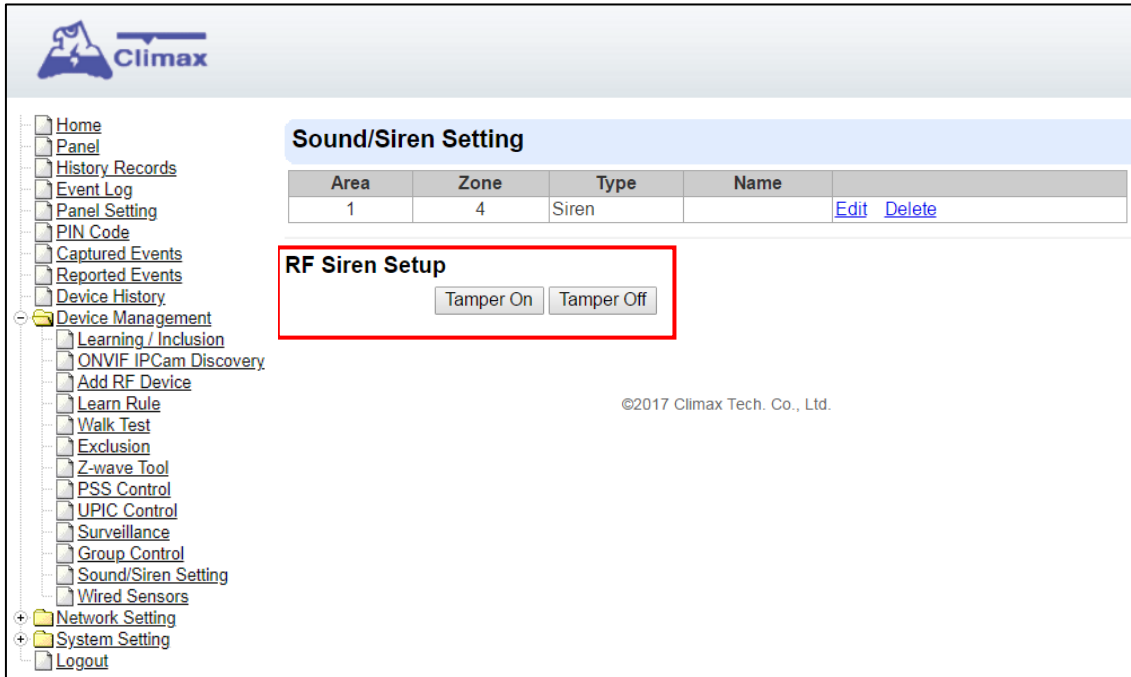

The screenshot displays the Climax web interface. On the left is a navigation menu with options like Home, Panel, History Records, Event Log, Panel Setting, PIN Code, Captured Events, Reported Events, Device History, Device Management, Learning / Inclusion, ONVIF IPCam Discovery, Add RF Device, Learn Rule, Walk Test, Exclusion, Z-wave Tool, PSS Control, UPIC Control, Surveillance, Group Control, Sound/Siren Setting, and Wired Sensors. The main content area is titled 'Sound/Siren Setting' and contains a table with one row: Area 1, Zone 4, Type Siren, and Name. To the right of the table are 'Edit' and 'Delete' links. Below the table is a red-bordered box titled 'RF Siren Setup' containing two buttons: 'Tamper On' and 'Tamper Off'. The footer of the interface shows the copyright notice '©2017 Climax Tech. Co., Ltd.'.

Area	Zone	Type	Name
1	4	Siren	

**RF Siren Setup**

©2017 Climax Tech. Co., Ltd.

### ➤ Tamper On/Off

You can enable/disable all RF Sirens tamper protection with this function. Select to turn on or off the sirens tamper function.

### <NOTE>

- When turned off, if siren tamper will be enabled again automatically after one hour if not turn on manually during the one hour period.

## 5.13. Wired Zones Programming

### 5.13.1. 16 On-board Zones and Zone Expanders (WEZC-8, WEZ Series)

**Step 1.** Click on “**Wired Sensors**” to enter this page. The 16 on-board zone setting page is displayed as below.

Zone	Type	Loop	Resistor	Status
1	(Disabled)	1	1K ohm	Restore
2	(Disabled)	1	1K ohm	Restore
3	(Disabled)	1	1K ohm	Restore
4	(Disabled)	1	1K ohm	Restore
5	(Disabled)	1	1K ohm	Restore
6	(Disabled)	1	1K ohm	Restore
7	(Disabled)	1	1K ohm	Restore
8	(Disabled)	1	1K ohm	Restore
9	(Disabled)	1	1K ohm	Restore
10	(Disabled)	1	1K ohm	Restore
11	(Disabled)	1	1K ohm	Restore
12	(Disabled)	1	1K ohm	Restore
13	(Disabled)	1	1K ohm	Restore
14	(Disabled)	1	1K ohm	Restore
15	(Disabled)	1	1K ohm	Restore
16	(Disabled)	1	1K ohm	Restore

**Step 2.** If an expander module (WEC-8 or WEZ series) is added, you will see **Expanders** at the bottom of the page. Click “**Edit**” at the end of the expander’s entry to access wire zone programming.

Expanders							
Area	Zone	Name	Condition	Battery	Tamper	Maximum Zones	
1	1				Tamper	8	<a href="#">Edit</a> <a href="#">Delete</a>


**Step 3.** Edit the type of the wired sensor, zone wiring, and the EOL resistance for each zone.

- **Type:** Select the type of the wired sensor for each zone from the drop down menu.

Zone	Type
1	Door Contact
2	CO
3	Smoke Detector
4	IR
5	Water Sensor
6	Glass Sensor
7	Heat Detector
8	(Disabled)
9	(Disabled)

- **Loop:** Select the number of loop corresponding to the zone wiring for each zone from the drop down menu. On this web page, there are wiring diagrams below for your reference. Please refer to **3.3 Hardwire Installation – Zone Wiring** for zone wiring instructions.

Loop	
1	▼
1	
2	
3	
4	
5	
6	
7	
8	
9	
10	

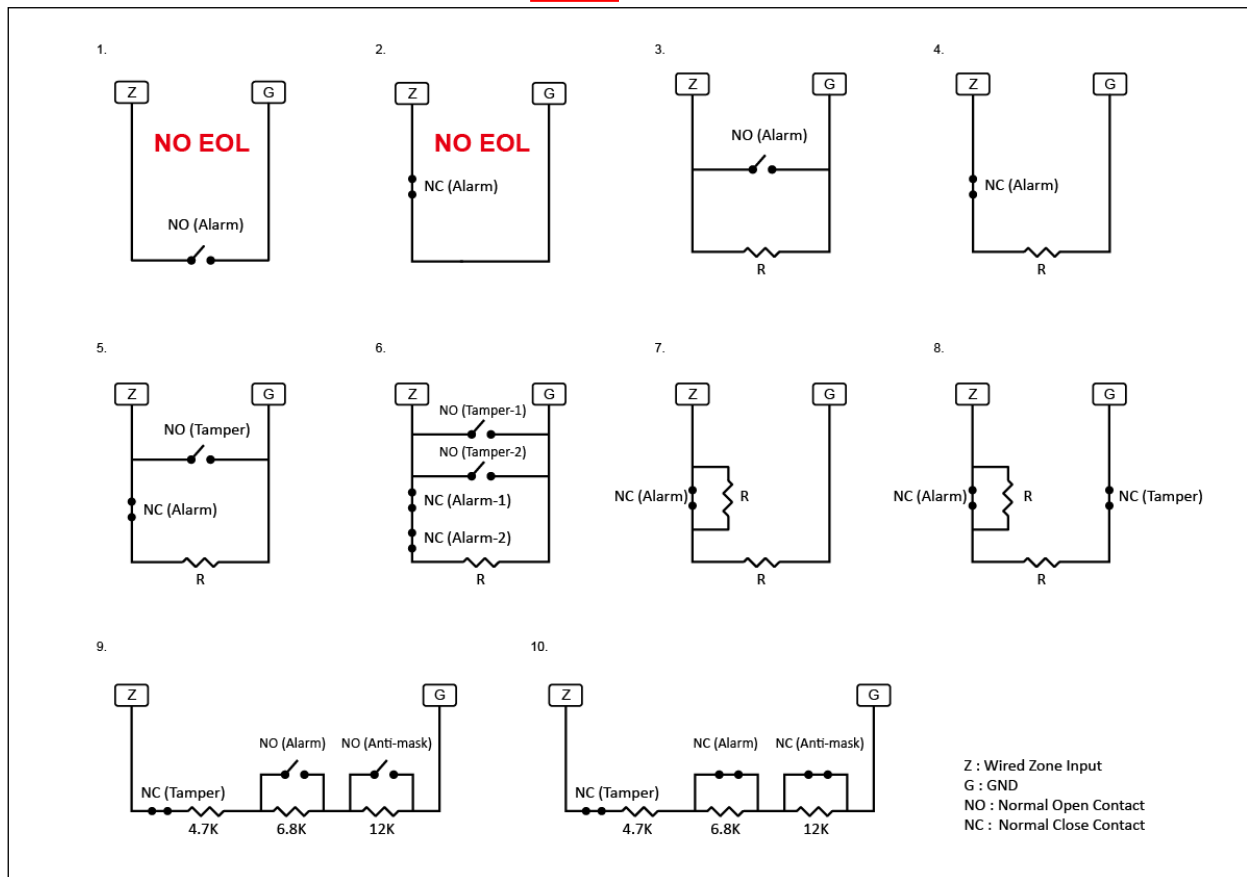

- **Resistor:** Select the resistance for the zone wiring.

Resistor	
1K ohm	▼
1K ohm	
2.2K ohm	
3.74K ohm	
4.7K ohm	
5.6K ohm	
6.8K ohm	
8.2K ohm	
10K ohm	
1K ohm	▼
1K ohm	▼

- **Status:** The status of each zone—Restore, Tamper, or Trigger—will be shown in this field.
- Step 4.** Click **“OK”** to save changes when finished. Alternatively, click **“Reset”** to re-enter all the information.



**Step 5.** If the process is successful, the screen will display **“Updated Successfully.”** The sensor will be assigned to specific area and zone. To edit the device setting or information, click **“Edit”** at the end of device entry.

Wired Sensors						
Zone	Type	Loop	Resistor	Status		
1	Door Contact	1	10K ohm	Restore	Area1Zone5	<a href="#">Edit</a>
2	(Disabled)	1	1K ohm	Restore		
3	(Disabled)	1	1K ohm	Restore		
4	(Disabled)	1	1K ohm	Restore		
5	(Disabled)	1	1K ohm	Restore		
6	(Disabled)	1	1K ohm	Restore		

**Step 6.** You will enter Device Edit webpage.

**Step 7.** Edit your device setting and information according to instruction below. Click **“OK”** to save changes when finished. Alternatively, click **“Default”** to reset all parameters to default values or click **“Reset”** to re-enter all the information.

- **Name:** Enter a name for the device.
- **Area:** Select the area which the device belongs to.
- **Zone:** Select the Device zone number.

● **Attribute List:**

The attribute list determines panel behavior when the panel receives trigger signal from the device. There are

**General Attribute:**

☞ **Permanently Bypass**

This function allows user to permanently deactivate (bypass) the selected device.

- If bypassed, then the Control Panel will not respond at all when the sensor is triggered.
- If bypassed, the system can be armed directly regardless the device's fault

situation. However, its fault situation will still be monitored, logged and displayed in the webpage.

#### [Latch report](#)

This function **ONLY** applies to Remote Control or Door Contact with Set/Unset attribute enabled.

- Latch Report **ON**: When the device is used to change system arm mode, the Control Panel will report the arm/disarm action by the particular device.
- Latch Report **OFF**: When the device is used to change system arm mode, the Control Panel will not report the arm/disarm action by the particular device.

#### [Set/Unset](#)

This function is for Door Contact only. This function allows Door Contact to control system mode.

- **Normal Close**: The system will be armed when the Door Contact is opened, and disarmed when Door Contact is closed.
- **Normal Open**: The system will be armed when the Door Contact is closed, and disarmed when Door Contact is open.

#### [24HR](#)

This function enables the device to activated selected alarm event whenever it is triggered regardless of system mode. System mode response will be disabled if 24HR attribute is enabled.

#### **System Mode Attributes:**

The System Mode Attributes determines system behavior under particular arming mode when the sensor is triggered.

#### [No Response](#)

- When a sensor with **No Response** is triggered, the Control Panel will not respond.

#### [Start Entry Delay 1/](#) [Start Entry Delay 2](#)

- When the system is under Full Arm or Home Arm mode, if a sensor with **Start Entry Delay 1/2** attribute is triggered, Control Panel will start an entry countdown period to give enough time to disarm the system.
- When the Control Panel is in the Disarm mode, if a sensor with **Start Entry Delay 1/2** attribute is triggered, the Control Panel will immediately report a burglar interior alarm (**CID code: 132**).
- When the Control Panel is in the Full Arm mode, if a sensor with **Start Entry Delay 1/2** attribute is triggered, the Entry Delay 1/2 timer starts counting down. If no correct pin code is entered during the entry delay timer to disarm the system, the Control Panel will report a burglar perimeter alarm (**CID code:131**) immediately after entry delay timer 1/2 expires.
- When the Control Panel is in the Home Arm 1/2/3 mode, if a sensor with **Start Entry Delay 1/2** attribute is triggered, the Entry Delay 1/2 timer starts counting down. If no correct pin code is entered during the entry delay period to disarm the system, the Control Panel will report a burglar interior alarm (**CID code: 132**) immediately after entry delay timer 1/2 expires.

#### [Chime](#)

- When the system is in Arm/ Home Arm 1/ Home Arm 2/ Home Arm 3 mode, if a sensor set to Chime is triggered, the Control Panel will sound a Door Chime (Ding-Dong Sound).

#### **Burglar Follow**

- When the system is in Full Arm or Home Arm mode, if a sensor set to **Burglar Follow** is triggered, the Control Panel will report a burglar alarm immediately.
- When a Start Entry sensor is triggered and the system is under Entry Delay Timer countdown, if a sensor set to **Burglar Follow** is triggered, the Control Panel will wait until the Entry Delay Timer expires before activating a burglar alarm. If the system is disarmed before the timer expires, the Control Panel will not activate alarm.

#### **Burglar Instant**

- When the system is under Full arm or Home Arm/ Disarm / Entry Time mode, if a sensor set to **Burglar Instant** is triggered, the Control Panel will report a burglar alarm immediately.

#### **Burglar Outdoor**

- When the system is in Full Arm or Home Arm / Disarm / Entry Time mode, if a sensor set to **Burglar Outdoor** is triggered, the Control Panel will report a burglar outdoor event immediately.

#### **Cross Zone**

- See **10.3 Appendix – Cross Zone Verification** for detail.

#### **Apply Scene**

- This function is only available for Remote Keypad and Remote Control.
- Select a Home Automation Scene number for a Remote Keypad or Remote Control button. When the button is pressed, the Control Panel will execute the actions programming in the Scene accordingly. For more information, please refer to **8.3. Scene**.

#### **Home Automation Attributes:**

The Home Automation Attributes allows a device to control Home Automation function.

#### **Trigger Response**

- When the device is triggered, the Control Panel will activated selected Home Automation Scene number. Please refer to **8.3. Scene** webpage for detail.

#### **Restore Response**

- When the device transmits restore signal after trigger, the Control Panel will activate selected Home Automation Scene number.

#### **Other Attributes:**

#### **Permanent Bypass**

- When checked, the panel will completely ignore all signal received from this device. A bypassed device will be unable to trigger any response, including alarm or fault from the Control Panel. All other attribute settings will be also be ignored.

#### **Exit (No Response)**

- If checked, the panel will ignore trigger signal from this sensor during Exit Time countdown. If deselected, the panel will activated burglar alarm and report immediately when the sensor triggered during Exit Delay Timer.

#### **24HR**

- A sensor set to 24HR attribute will ignore Disarm, Full Arm, Home are and Exit response setting. The panel will activate selected alarm when this sensor is triggered regardless of system mode under any time.

### <NOTE>

☞ Some devices have their own unique functions and will have its own attribute setting which is not listed in this section. Please refer to the device manual for its setting detail.

**Step 7.** If you want to delete the sensor, refer to step 2 and select “**Disabled**” from the drop down menu of **Type** to delete it. If the process is successful, the screen will display “**Updated Successfully.**”

## 5.13.2. Output Expander (WEPC-1)

**Step 1.** Click on “**Wired Sensors**” to enter this webpage.


Zone	Type	Loop	Resistor	Status
1	(Disabled)	1	1K ohm	Restore
2	(Disabled)	1	1K ohm	Restore
3	(Disabled)	1	1K ohm	Restore
4	(Disabled)	1	1K ohm	Restore
5	(Disabled)	1	1K ohm	Restore
6	(Disabled)	1	1K ohm	Restore
7	(Disabled)	1	1K ohm	Restore
8	(Disabled)	1	1K ohm	Restore
9	(Disabled)	1	1K ohm	Restore
10	(Disabled)	1	1K ohm	Restore
11	(Disabled)	1	1K ohm	Restore
12	(Disabled)	1	1K ohm	Restore
13	(Disabled)	1	1K ohm	Restore
14	(Disabled)	1	1K ohm	Restore
15	(Disabled)	1	1K ohm	Restore
16	(Disabled)	1	1K ohm	Restore

**Step 2.** If an expander module (WEPC-1) is added, you will see “WEP” in the **Expanders** section at the bottom of the page. Click “**Edit**” at the end of the expander’s entry to access wire zone programming.

Expanders							
Area	Zone	Name	Condition	Battery	Tamper	Model	Maximum Zones
1	1		<div></div>	<div></div>	<div>Tamper</div>	WEP	4


**Step 3.** Select and assign the output switch for each zone.

- **Type:** Select to activate the power switch for each zone from the Type down down menu. The default setting is “**Disabled**” and you can choose to assign the dry contact relay output power switch to a zone by selecting “**Power Switch**”.

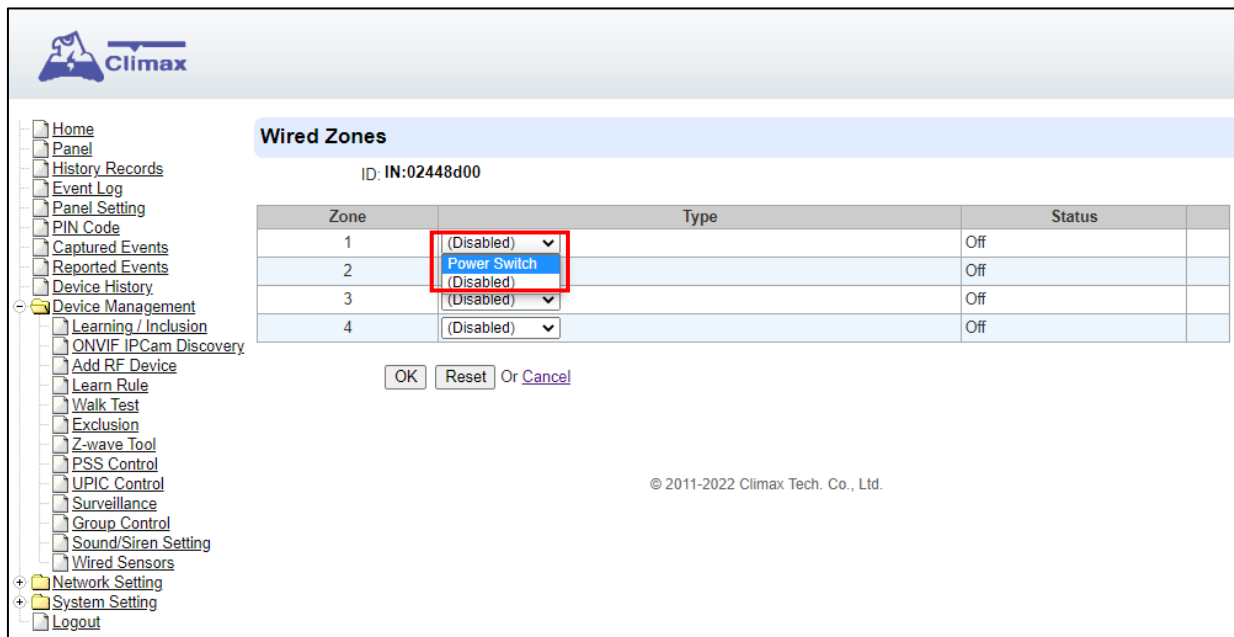


**Step 4.** Click “OK” to save changes when finished. Alternatively, click “Reset” to re-enter all the information.

**Step 5.** If the process is successful, the screen will display “**Updated Successfully.**” The power switch will be assigned to specific area and zone.

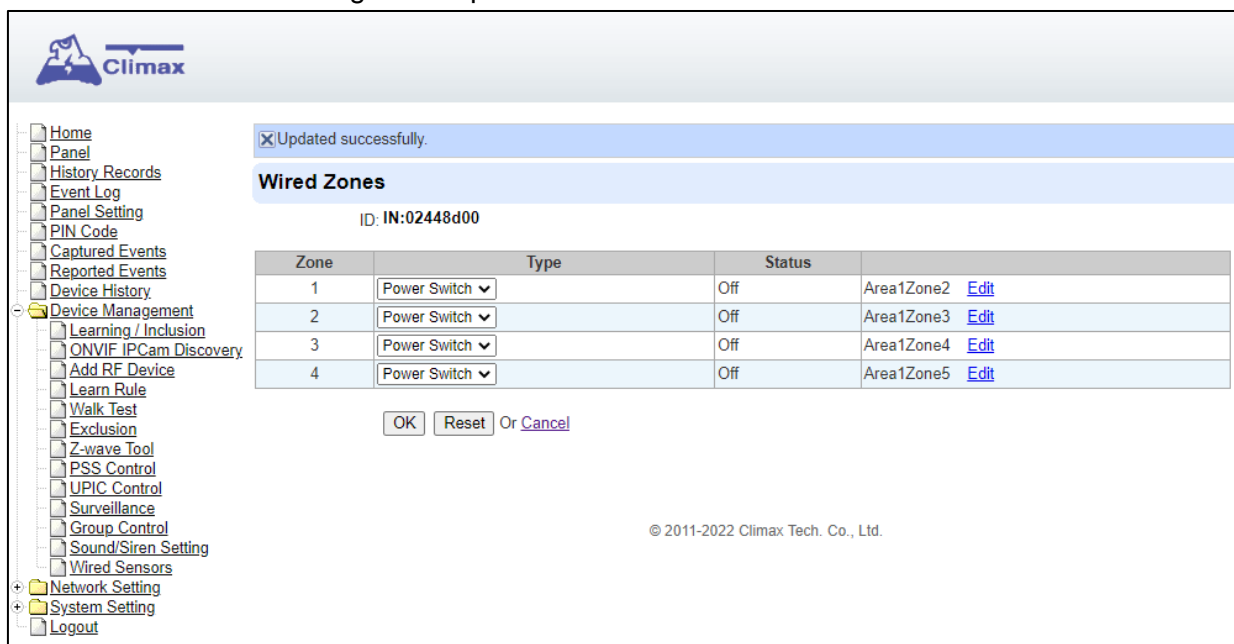

**Step 7.** You may edit your device setting and information. Click “**Edit**” at the end of device entry and click “OK” to save changes when finished.



## Device Edit

### Power Switch

ID: IN:02448d01

Version: \_\_\_\_\_

Capability: \_\_\_\_\_

Name:

Tag:

Area: 1

Zone: 2

Attribute: ☐ Permanently Bypass


Attribute: ☐ Always On

Attribute: Switch on via APP: Don't switch off

- [Home](#)
- [Panel](#)
- [History Records](#)
- [Event Log](#)
- [Panel Setting](#)
- [PIN Code](#)
- [Captured Events](#)
- [Reported Events](#)
- [Device History](#)
- + [Device Management](#)
  - [Learning / Inclusion](#)
  - [ONVIF IPCam Discovery](#)
  - [Add RF Device](#)
  - [Learn Rule](#)
  - [Walk Test](#)
  - [Exclusion](#)
  - [Z-wave Tool](#)
  - [PSS Control](#)
  - [UPIC Control](#)
  - [Surveillance](#)
  - [Group Control](#)
  - [Sound/Siren Setting](#)
  - [Wired Sensors](#)
- [+ Network Setting](#)
- [+ System Setting](#)
- [Logout](#)

© 2011-2022 Climax Tech. Co., Ltd.

**Step 6.** Click on “PSS Control” under Device Management, and you will enter **Power Switch Sensor** webpage. Under this page, you may switch on or off the power switch of each zone.



## Power Switch Sensor

Area	Zone	Type	Name	Status	
1	2	Power Switch			<a href="#">Edit</a> <a href="#">Delete</a> <div style="display: flex; justify-content: space-between; align-items: center;"> <span>Switch On <input type="button" value="Switch On"/></span> <span>Switch Off <input type="button" value="Switch Toggle"/></span> </div>
1	3	Power Switch			<a href="#">Edit</a> <a href="#">Delete</a> <div style="display: flex; justify-content: space-between; align-items: center;"> <span>Switch On <input type="button" value="Switch On"/></span> <span>Switch Off <input type="button" value="Switch Toggle"/></span> </div>
1	4	Power Switch			<a href="#">Edit</a> <a href="#">Delete</a> <div style="display: flex; justify-content: space-between; align-items: center;"> <span>Switch On <input type="button" value="Switch On"/></span> <span>Switch Off <input type="button" value="Switch Toggle"/></span> </div>
1	5	Power Switch			<a href="#">Edit</a> <a href="#">Delete</a> <div style="display: flex; justify-content: space-between; align-items: center;"> <span>Switch On <input type="button" value="Switch On"/></span> <span>Switch Off <input type="button" value="Switch Toggle"/></span> </div>

- [Home](#)
- [Panel](#)
- [History Records](#)
- [Event Log](#)
- [Panel Setting](#)
- [PIN Code](#)
- [Captured Events](#)
- [Reported Events](#)
- [Device History](#)
- + [Device Management](#)
  - [Learning / Inclusion](#)
  - [ONVIF IPCam Discovery](#)
  - [Add RF Device](#)
  - [Learn Rule](#)
  - [Walk Test](#)
  - [Exclusion](#)
  - [Z-wave Tool](#)
  - [PSS Control](#)
  - [UPIC Control](#)
  - [Surveillance](#)
  - [Group Control](#)
  - [Sound/Siren Setting](#)
  - [Wired Sensors](#)
- [+ Network Setting](#)
- [+ System Setting](#)
- [Logout](#)

### Device Tag List

Tag	Device
No items found	

© 2011-2022 Climax Tech. Co., Ltd.

## 6. System Settings

After the initial set-up, you can then program your system by clicking on the left menu to set them individually.

### 6.1. Panel Condition

In the **Panel** Section, user can arm, disarm or partially arm the system. Besides, it displays the current **Panel Status & Device Information**.

**Panel Control**

**Area 1**  
Current mode: Disarm  
☐ Disarm ☐ Full Arm ☐ Home Arm 1 ☐ Home Arm 2 ☐ Home Arm 3

**Area 2**  
Current mode: Disarm  
☐ Disarm ☐ Full Arm ☐ Home Arm 1 ☐ Home Arm 2 ☐ Home Arm 3

**Panel Status**

Battery	Tamper	Interference	AC activation	Signal GSM	Background RSSI
Normal	Normal	Normal	Normal	9	1

Test System:

**System in maintenance**

**Fault Status**

Fault	Setting
Area1Zone6 Tamper	<input checked="" type="checkbox"/> Clear

[Reload](#)

**Device List**

Area	Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status	
1	1	Keypad		Normal	Normal	Normal	No	Strong		<a href="#">Edit</a> <a href="#">Delete</a>
1	2	Remote Controller		Normal	Normal	Normal	No	Strong		<a href="#">Edit</a> <a href="#">Delete</a>
1	3	WTRV		Normal	Normal	Normal	No	N/A		<a href="#">Edit</a> <a href="#">Delete</a>
1	4	IR Camera		Normal	Normal	Normal	No	Good		<a href="#">Edit</a> <a href="#">Delete</a>
1	5	809		Normal	Normal	Normal	No	Strong		<a href="#">Edit</a> <a href="#">Delete</a>
1	6	Door Contact		Normal	Normal	Tamper	No	Strong	DC Open	<a href="#">Edit</a> <a href="#">Delete</a>

#### Panel Control

Select a choice to arm, disarm or partially arm the system.

#### Panel Status

The Control Panel will update the panel status periodically. However, in order to show the current status, you must reload the screen to refresh the display.

- **Battery:** When battery is running low, a “low battery” message will be displayed to inform you to recharge the battery.
- **Tamper:** (reserved)
- **Interference:** This is for you to check whether the Control Panel is purposely interfered. The jamming period detected will be accumulated, and when the total period exceeds 30 seconds within 1 minute, a “Jamming” message will be shown and reported to the Central Monitoring Station accordingly.

- **AC activation:** To check whether AC power is connected. If not, it will show “AC Failure”.
- **Background RSSI:** RSSI value is for you to check the RF environment around the Control Panel. It ranges from 0 to 9, where 0 refers to the weakest and 9 refers to the strongest background noise. Therefore, the lower the RSSI value, the better the environment.

## **Test System**

The function is designed to send a command to sever over the polling or XMPP protocol.

## **Fault Status**

Fault Status	
Fault	Setting
Area1Zone6 Tamper	<input checked="" type="checkbox"/> Clear

OK Reset

The fault events that exist in the alarm system are displayed under this section. When fault event exists in system, the control panel Fault LED will light up to indicate fault status under Disarm or Home Arm mode (The Fault LED will not light up under Arm mode).

When fault event exists, and you attempt to arm the system, the arming action will be prohibited and the panel will display fault information on the webpage. If you still want to arm the system, perform the arming action again to force arm.

You can check the “Clear” box in the setting column then click “OK” to ignore the fault event. Cleared fault event will not cause the Fault LED to light up, nor prohibit arming.

## **Device List**

1. The Control Panel will update the device information periodically. However, in order to show the current status, you must **reload** the screen to refresh the display.

➤ **Area:** operation area

- **Zone:** device zone
- **Type:** device type
- **Name:** device title
- **Status:** device’s current status, such as tamper status, battery status, out of order condition or DC open. If PSM is added into the system, the data of PSM, such as On/Off status, voltage, electric current and watt, will be displayed.

2. Under **Device**, you could further **edit** or **delete** an added device (please refer to 5.1.3 and 5.1.4 for details). Beside, you can reset Panel settings or clear the system faults by pressing **Reset Panel**.


Device List										
Area	Zone	Type	Name	Condition	Battery	Tamper	Bypass	RSSI	Status	
1	2	UPIC					No	Strong, 7		<a href="#">Edit</a> <a href="#">Delete</a>
1	3	IR					No	Strong, 8		<a href="#">Edit</a> <a href="#">Delete</a>
1	6	Keypad					No	Strong, 6		<a href="#">Edit</a> <a href="#">Delete</a>

- After pressing **Reset Panel**, the Control Panel will restart in 60 seconds and all configured



values will be kept without any change.

## **Note**

 Note			
No.	Type	Description	
#1			<a href="#">Edit</a>
#2			<a href="#">Edit</a>
#3			<a href="#">Edit</a>
#4			<a href="#">Edit</a>
#5			<a href="#">Edit</a>

The function is designed for installer to make a note for each control panel. The note you make here can be delivered to a server over XMPP or polling protocol.

## 6.2. Panel Settings

Program the **Panel**, **Time** and **Sound Settings** at your discretion.

**Panel Setting**

AC Fail Report 5 min  
AC Fail Suspend 5 sec  
Jamming Report 1 min  
Auto Check-in Interval 12 hr  
Auto Check-in Offset Period 1 hr  
IR Camera Resolution of Alarm Images 320x240x3 images  
Outdoor IR Camera in Grayscale Disable  
Bypass Ethernet No  
OK Reset

**Area Setting**

Area 1  
Final Door Off  
Arm Fault Type Confirm  
Tamper Alarm Full Arm  
Supervision Check Off

**Time Setting**

Supervision Timer Disable  
Entry Delay 1 for Full Arm Disable  
Entry Delay 2 for Full Arm Disable  
Exit Delay for Full Arm Disable  
Entry Delay 1 for Home Arm Disable  
Entry Delay 2 for Home Arm Disable  
Exit Delay for Home Arm Disable  
Alarm Length Disable  
Cross Zone Timer Disable  
Fire Verification Timer Disable

**Sound Setting**

Door Chime Setting ☐ Off ☒ Low ☐ High  
Entry Delay Sound for Full Arm ☐ Off ☒ Low ☐ High  
Exit Delay Sound for Full Arm ☐ Off ☒ Low ☐ High  
Entry Delay Sound for Home Arm ☐ Off ☒ Low ☐ High  
Exit Delay Sound for Home Arm ☐ Off ☒ Low ☐ High  
Confirm Sound ☐ Off ☒ Low ☐ High  
Warning beep ☐ Off ☒ Low ☐ High  
Entry/Exit Only Final Beeps Disable  
OK Reset

### Panel Setting

- **AC Fail Report:** When an AC power failure is detected, your Control Panel will report to the Central Monitoring Station according to the duration set under AC Fail Report. If 5 minutes is set, the event will be automatically reported to the CMS after 5 minutes. Your Control Panel will start to use its battery power instead of the mains power until the fault even is cleared.
- **AC Fail Suspend:** After an AC power failure event is reported, the Control Panel will

convert to sleep mode to conserve battery power. During this period, both GSM and Ethernet port will be powered off, while the RF and ZigBee modules will keep working. If 5 seconds is set, both GSM and Ethernet port will be powered off after 5 seconds. In order to send messages to the CMS, the Control Panel will power on its GSM and Ethernet temporarily.

- **Jamming Report:** Jamming period is specified as background RSSI level detected exceeding the threshold for a period of time. The jamming period detected will be accumulated.

3 options: Disable, 1 minute and 2 minutes are provided. If 1 minute is set, once the total jamming period exceeds 30 seconds within 1 minute, a "Jamming" message will be reported to the Central Monitoring Station. If 2 minutes is set, once the total jamming period exceeds 60 seconds within 2 minutes, a Jamming message will be reported to the Central Monitoring Station. If Disable is set, the control panel will not send a jamming report to the Central Monitoring Station if a jamming fault is detected.

- **Auto Check-in:** this is to select whether the Control Panel needs to send check-in reporting to the Central Station automatically and to select the period of time between check-in reports. Options available are **Disable, 1 hour, 2 hours, 3 hours... up to 4 Weeks**.

- **Auto Check-in Offset Period:** This is to set the time delay before the first **Auto Check-In** report is made. After power is supplied or re-supplied to the Control Panel, a test report will be sent to the Central Monitoring Station (CMS) based on the Offset Period. This is used to test whether the CMS is able to receive the report from the Panel accurately.

After this test report is sent, the Control Panel will then send reports at regular interval based on the setting of the Auto Check-in Report.

For example, if **Offset Period** is set to 2 Hours, and **Auto Check-in Report** is set to 12 hours, the Control Panel will transmit an event code 602 to the CMS after 2 hours, and then report 602 event code periodically at a regular intervals of 12 hours.

- **IR Camera Resolution of Alarm Images:** This is to select the resolution and number of pictures taken by PIR Camera when the camera detects a movement in armed mode.

Options available are **320x240x3 images (Default), 320x240x6 images and 640x320x3 images**.

- **Outdoor IR Camera in Grayscale:** This is to select whether pictures from Outdoor PIR Camera should be taken in grayscale instead of color pictures.

Options available are: **Disable** (Color Picture) and **Enable** (Greyscale picture)

- **Bypass Ethernet:** Select to enable or disable Bypass Ethernet function. When **YES** is selected, the Control Panel will bypass connection fault when Ethernet cable unplugged status is detected.

### **Area Setting**

- **Area:** Select operation area to apply setting.
- **Final Door:** If set to **On**: When the system is Away Armed and under exit timer countdown, if a opened Door Contact set to Entry attribute is closed, the system will automatically arm the system even if the exit delay timer has not expired yet.
- **Arm Fault Type:** Select how the system should respond when it is being armed under fault condition.
  - ✓ Confirm: The panel will first display a "Mode Change Fault" message and emit 2 beeps. Arming again within 10 seconds will force arm the system.
  - ✓ Direct Confirm: The system will be force armed directly without displaying fault message and report an event.

- **Tamper Alarm:** Select whether the siren should sound alarm when the tamper is triggered.
  - ✓ Full Arm: when tamper is triggered under Full arm mode, Control Panel raises a local alarm and sends report to the monitoring center. While under Home Arm or Disarm modes no alarm will be activated, nor report sent.
  - ✓ Always: Control Panel raises a local alarm and send report for tamper-trigger in all modes.
- **Supervision Check:** Select to enable or disable system supervision function. When **ON** is selected, the Control Panel will monitor the accessory devices according to the supervision signal received.

### Time Setting

- **Supervision Timer:** The Control Panel monitors accessory devices according to the supervision signal transmitted regularly from the device. User this option to set a time period for receiving supervision signals. If the Control Panel fails to receive supervision signal from a device within this duration, it will consider the device out of order and report the event accordingly.
- **Entry Delay 1 for Full Arm:** Set Entry Delay Timer 1 for full arm mode. When a sensor set to Start Entry Delay 1 is triggered under Full Arm mode, the control panel will begin Entry Delay Timer countdown according to duration set with this option  
 If the Control Panel is disarmed before the Entry Delay Timer expires, the panel returns to Disarm mode and no alarm is activated. If the Control Panel is not disarmed before the Entry Delay Timer expires, the alarm will be activated and the panel will send report.
- **Entry Delay 2 for Full Arm:** Set Entry Delay Timer 2 for full arm mode. When a sensor set to Start Entry Delay 2 is triggered under Full Arm mode, the control panel will begin Entry Delay Timer countdown according to duration set with this option  
 If the Control Panel is disarmed before the Entry Delay Timer expires, the panel returns to Disarm mode and no alarm is activated. If the Control Panel is not disarmed before the Entry Delay Timer expires, the alarm will be activated and the panel will send report.
- **Exit Delay for Full Arm:** Set the Exit Delay Timer when entering Full Arm mode. When the user changes system mode to Full Arm, the panel will begin Exit Delay Timer Countdown and enter Full Arm mode when the timer expires. The user must leave area protected by sensors before the timer expires, otherwise an alarm will be activated with the sensor is triggered.
- **Entry Delay 1 for Home Arm:** Set Entry Delay Timer 1 for Home Arm mode. When a sensor set to Start Entry Delay 1 is triggered under Home Arm mode, the control panel will begin Entry Delay Timer countdown according to duration set with this option  
 If the Control Panel is disarmed before the Entry Delay Timer expires, the panel returns to Disarm mode and no alarm is activated. If the Control Panel is not disarmed before the Entry Delay Timer expires, the alarm will be activated and the panel will send report.
- **Entry Delay 2 for Home Arm:** Set Entry Delay Timer 2 for Home Arm mode. When a sensor set to Start Entry Delay 2 is triggered under Home Arm mode, the control panel will begin Entry Delay Timer countdown according to duration set with this option  
 If the Control Panel is disarmed before the Entry Delay Timer expires, the panel returns to Disarm mode and no alarm is activated. If the Control Panel is not disarmed before the Entry Delay Timer expires, the alarm will be activated and the panel will send report.
- **Exit Delay for Home Arm:** Set Exit Delay Timer for Home Arm mode. When the user changes system mode to Home Arm, the panel will begin Exit Delay Timer Countdown

and enter Home Arm mode when the timer expires. The user must leave area protected by sensors before the timer expires, otherwise an alarm will be activated with the sensor is triggered (Default as 10 seconds).

- **Alarm Length:** Set the duration the external siren should sound when an alarm is activated.
- **Cross Zone Timer:** Please refer to **10.3 Cross Zone Timer** for details
- **Fire Verification Time:** Please refer to **10.4 Fire Verification Timer** below for details.

### **Sound Setting**

- **Door Chime Setting:** this function is available only when the attribute of Door Contact (DC) and/or PIR detector (IR) is set as **Door Chime**.  
The Control Panel sounds a Door Chime (Ding-Dong Sound) while the DC and/or IR is activated in Disarm / Full / Home / Entry mode.
- **Entry Delay Sound for Full Arm:** this is for you to decide whether the Control Panel sounds count-down beeps and volume of beep during the entry delay time in the full arm mode.
- **Exit Delay Sound for Full Arm:** this is for you to decide whether the Control Panel sounds count-down beeps and volume of beep during the exit delay timer in the full arm mode.
- **Entry Delay Sound for Home Arm:** this is for you to decide whether the Control Panel sounds count-down beeps and volume of beep during the entry delay time in the home arm mode.
- **Exit Delay Sound for Home Arm:** this is for you to decide whether the Control Panel sounds count-down beeps and volume of beep during the exit delay timer in the home arm mode.
- **Confirm Sound:** this is for you to decide whether to turn off/or adjust Control Panel beeping sounds when changing Arm/Home Arm/Disarm mode.
- **Warning beep:** this is for you to decide whether the Control Panel will sound a warning beep whenever a fault condition has been detected and displayed. The warning beep will be silenced after the Fault message has been read by the user. When a new fault condition is detected, it will then again emit a warning beep every 30 sec.
- **Entry/ Exit Only Final Beeps:** This is for you to determine when the Control Panel should start warning beep during Entry or Exit countdown timer. For example, if the setting is set to 5 seconds, the Control Panel will only stat warning beep during the last 5 seconds of Entry or Exit countdown timer. When set to Disable, the Control Panel will sound warning beep during the entire Entry or Exit countdown timer.

## 6.3. PIN Code

The User PIN Codes are used by Remote Keypad accessory to control system mode remotely. You may set up the PIN Codes available for the areas in the control panel. Each consists of 4-6 digits (numeric number 0~9), no disallowed PIN code. User PIN code #1 for each Area is always activated factory default.

User PIN #1 in Area 1

Password: **1234**

User PIN #1 in Area 2

Password: **4321**

No.	User Code	User Name	Latch	Delete
1.	1234	user	<input checked="" type="checkbox"/>	<input type="checkbox"/>
2.			<input type="checkbox"/>	<input type="checkbox"/>
3.			<input type="checkbox"/>	<input type="checkbox"/>
4.			<input type="checkbox"/>	<input type="checkbox"/>
5.			<input type="checkbox"/>	<input type="checkbox"/>
6.			<input type="checkbox"/>	<input type="checkbox"/>
7.			<input type="checkbox"/>	<input type="checkbox"/>
8.			<input type="checkbox"/>	<input type="checkbox"/>
9.			<input type="checkbox"/>	<input type="checkbox"/>
10.			<input type="checkbox"/>	<input type="checkbox"/>
11.			<input type="checkbox"/>	<input type="checkbox"/>
12.			<input type="checkbox"/>	<input type="checkbox"/>
13.			<input type="checkbox"/>	<input type="checkbox"/>
14.			<input type="checkbox"/>	<input type="checkbox"/>
15.			<input type="checkbox"/>	<input type="checkbox"/>
16.			<input type="checkbox"/>	<input type="checkbox"/>
17.			<input type="checkbox"/>	<input type="checkbox"/>
18.			<input type="checkbox"/>	<input type="checkbox"/>
19.			<input type="checkbox"/>	<input type="checkbox"/>
20.			<input type="checkbox"/>	<input type="checkbox"/>
21.			<input type="checkbox"/>	<input type="checkbox"/>
22.			<input type="checkbox"/>	<input type="checkbox"/>
23.			<input type="checkbox"/>	<input type="checkbox"/>
24.			<input type="checkbox"/>	<input type="checkbox"/>
25.			<input type="checkbox"/>	<input type="checkbox"/>
26.			<input type="checkbox"/>	<input type="checkbox"/>
27.			<input type="checkbox"/>	<input type="checkbox"/>
28.			<input type="checkbox"/>	<input type="checkbox"/>
29.			<input type="checkbox"/>	<input type="checkbox"/>
30.			<input type="checkbox"/>	<input type="checkbox"/>

### Area

**Area:** Select the area for setting User PIN Code.


### User Code Setting

- **User Code:** Enter the 4-digit code in the field.
- **User Name:** Enter a user name for easy recognition of system events. Up to 17 alphanumeric characters are allow for each user name.
- **Latch:**
  - ☒ Latch → **Latch Report ON** = Whenever the User PIN Code is used to change system mode, the panel will report the event.
  - ☐ Latch → **Latch Report OFF** = When the User PIN Code is used to change system mode, the panel will not report the event.
- **Delete:** Check the box if you want to delete selected user. User#1 in each area cannot be deleted

After finish all setting, click **OK** to confirm change.

## 7. Network Settings

### 7.1. GSM

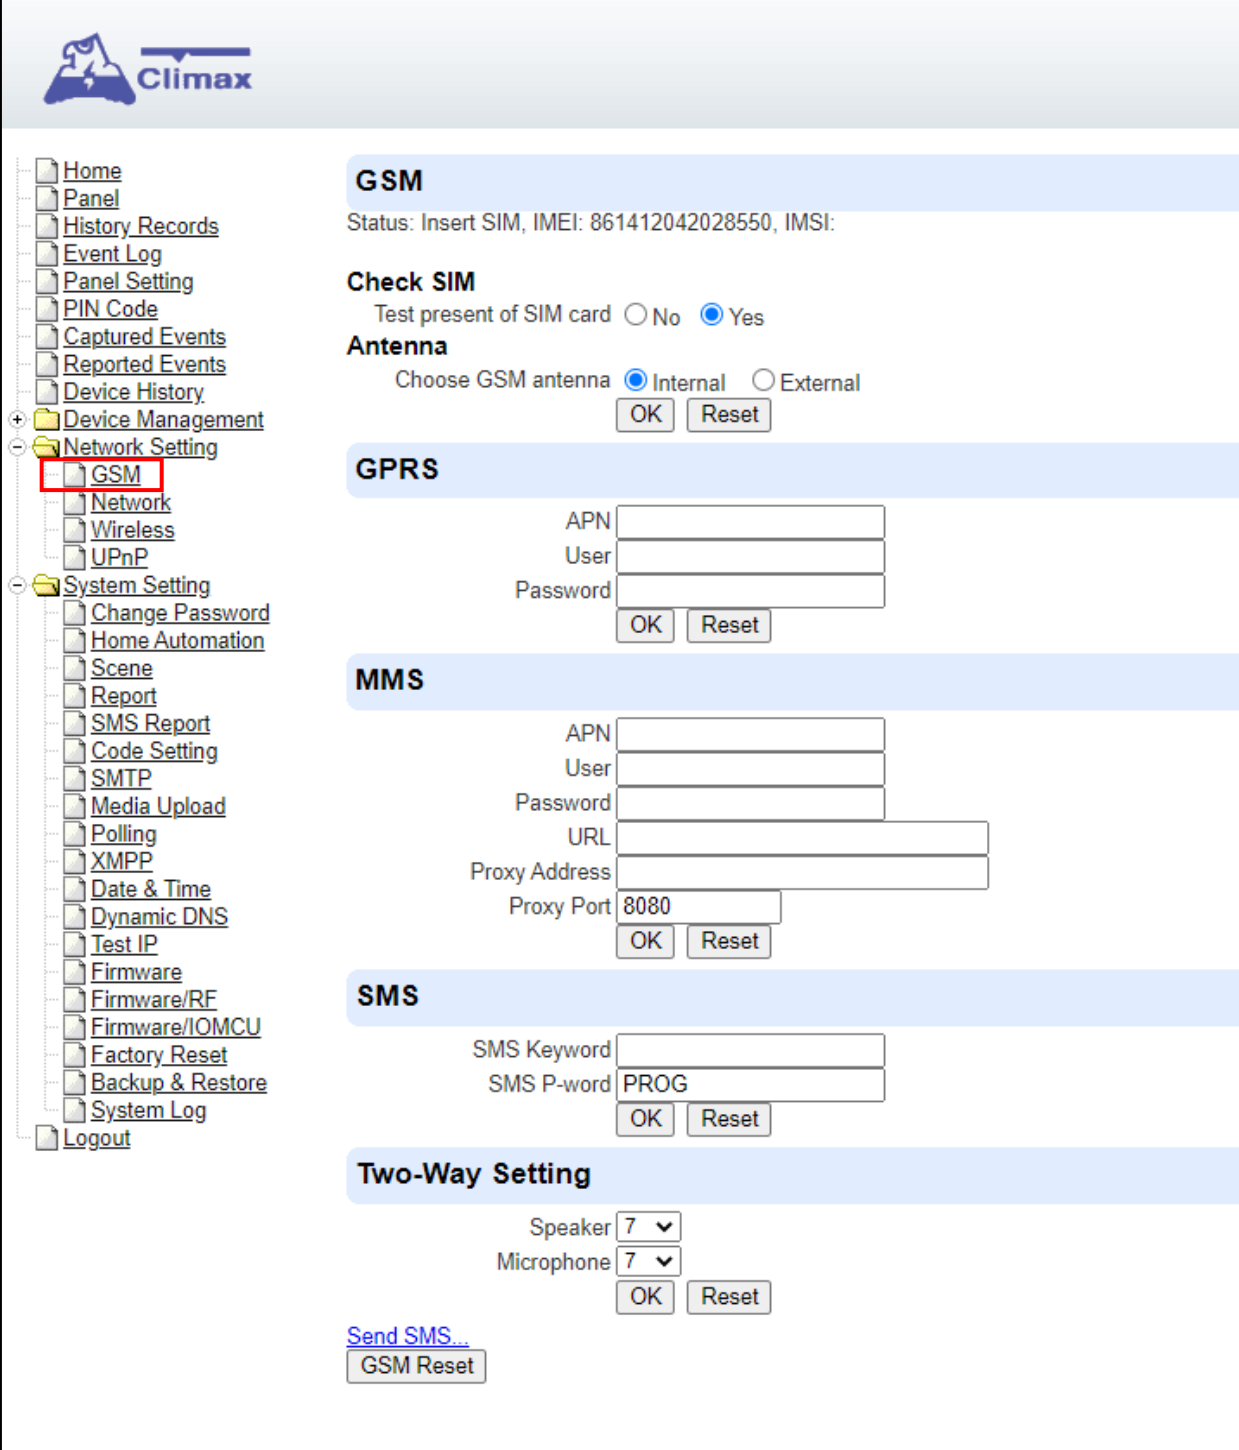

**Climax**

- Home
- Panel
- History Records
- Event Log
- Panel Setting
- PIN Code
- Captured Events
- Reported Events
- Device History
- Device Management
- Network Setting
  - GSM**
  - Network
  - Wireless
  - UPnP
- System Setting
  - Change Password
  - Home Automation
  - Scene
  - Report
  - SMS Report
  - Code Setting
  - SMTP
  - Media Upload
  - Polling
  - XMPP
  - Date & Time
  - Dynamic DNS
  - Test IP
  - Firmware
  - Firmware/RF
  - Firmware/IOMCU
  - Factory Reset
  - Backup & Restore
  - System Log
- Logout

### GSM

Status: Insert SIM, IMEI: 861412042028550, IMSI:

#### Check SIM

Test present of SIM card ☐ No ☒ Yes

#### Antenna

Choose GSM antenna ☒ Internal ☐ External

OK Reset

### GPRS

APN

User

Password

OK Reset

### MMS

APN

User

Password

URL

Proxy Address

Proxy Port

OK Reset

### SMS

SMS Keyword

SMS P-word

OK Reset

### Two-Way Setting

Speaker

Microphone

OK Reset

[Send SMS...](#)

GSM Reset

#### Check SIM

This is designed for the system to check if the SIM card is inserted or not. (*If users do not intend to use the GSM function, please tick "NO" to ensure the system will not check if the SIM card is inserted or not and it will not display the GSM fault by LED flashing.*)

#### Antenna

This option is for the user to choose between using the internal or external antenna.

#### GPRS

In order to allow GPRS to serve as a back-up IP Reporting method, this section will need to

be programmed before reporting.

- **APN (Access Point) Name**

It is the name of an access point for GPRS. Please inquire your service provider for an APN. When APN is set, the system becomes valid for internet connection.

- **User (GPRS)**

It is the Log-in name to input before accessing the GPRS feature. Please inquire your service provider.

- **Password (GPRS)**

It is the User Password to input before accessing the GPRS feature. Please inquire your service provider.

#### <NOTE>

- All values will be applied to all Areas.

#### **MMS**

The MMS settings are offered by your telecom service provider. Before configuring this function, contact your service provider for correct MMS setting information of the inserted SIM card.

- **APN (Access Point) Name**

Enter a MMS APN name provided by your service provider.

- **User**

Enter the Log-in name for accessing the MMS feature provided by your telecom service provider.

- **Password**

Enter the password for accessing the MMS feature provided by your telecom service provider.

- **URL**

Enter the MMS APN URL provided by your telecom service provider.

- **Proxy Address**

Enter the MMS Proxy Address provided by your telecom service provider.

- **Proxy Port**

Enter the MMS Proxy Port provided by your telecom service provider.

#### **SMS**

- **SMS Keyword**

For sending remote commands to system via SMS message, a personalized password is required for the Control Panel to recognize your authority.

- **SMS P-Word**

Program Keyword is used to recognize the identity of a valid user; and to give authority for Remote Installing (through SMS Text) or Remote Upgrading purposes (through GPRS). This keyword will need to be inserted whenever the Remote Setting or Remote Upgrading is required. A maximum of 15 characters is allowed.

#### **Two Way Setting**

The two-way setting is designed to adjust speaker volume and microphone sensitivity on DECT device for two-way communication.



Two-Way Setting

Speaker 9

Microphone 7

OK Reset

[Send SMS...](#)  
[GSM Reset](#)

## Send SMS Message

This feature is designed for you to send a SMS message on this web configuration page.

**Step 1.** Click **Send SMS**.

Two-Way Setting

Speaker 9

Microphone 7

OK Reset

[Send SMS..](#)  
[GSM Reset](#)

**Step 2.** Enter a desired phone number and text message.

Send SMS

Phone Number:

Text:

OK Reset

## Reset GSM

This feature is designed for you to reset GSM module.

**Step 1.** Click **GSM Reset**.

Two-Way Setting

Speaker 9

Microphone 7

OK Reset

[Send SMS](#)  
[GSM Reset](#)

**Step 2.** A pop-out message “Are you sure?” is displayed. Click **Yes** to confirm resetting.

## 7.2. Network

This is for you to program the Network for IP connection.

**Network**

☒ Obtain an IP address automatically (DHCP)  
☐ Use the following IP address

IP Address	192	168	0	1
Subnet Mask	255	255	255	0
Default Gateway	192	168	0	254
Default DNS 1	192	168	0	100
Default DNS 2	192	168	0	101

DNS Flush Period: Disable ▼

OK Reset

©2016 Climax Tech. Co., Ltd.

- **Obtain an IP address automatically (DHCP)**

If DHCP is selected, the Network will obtain an IP address automatically with a valid Network DHCP Server. Therefore, manual settings are not required.

This is only to be chosen if your Network environment supports DHCP. It will automatically generate all information.

- **Use following IP address**

You can also enter the Network information manually for IP Address, Subnet Mask, Default Gateway, Default DNS 1 and Default DNS 2.

Please make sure that you have obtained all required values according to your Network environment. Please contact your network administrator and/or internet service provider for more information.

- **DNS Flush Period**

You can set the system to clear current DNS resolution records for all entered URL settings (Reporting, Upload, XMPP...etc.) after a set time period. The system will then resolve the Domain Name again and acquire new IP address for the URL settings. This function is disabled by default.

## 7.3. Wireless

Use “**Wireless**” webpage to setup the panel's WiFi setting

**Wireless Setting**

SSID:

Authentication Mode: WPA pre-shared key ▼

Pre-shared Key:

Encryption Type: None ▼

Scan WiFi AP...

☒ Obtain an IP address automatically (DHCP)

☐ Use the following IP address

IP Address	192	168	2	1
Subnet Mask	255	255	255	0
Default Gateway	192	168	2	254
Default DNS 1	192	168	2	100
Default DNS 2	192	168	2	101

OK Reset

There are 3 ways you can connect to the wireless network.

1. Search for WiFi AP: Click “**Scan WiFi AP**” to search for available wireless network. Select the available Wireless APs from the list by clicking “**Set**” after AP info column and enter the required information (pre-shared key, etc.) and click the “**OK**” button.

**Wireless Setting**

SSID:

Authentication Mode: WPA pre-shared key ▼

Pre-shared Key:

Encryption Type: None ▼

Scan WiFi AP...

WiFi APs ☒

SSID	MAC	Authentication	Encryption	Signal Level	Channel	
Climax_Office_ASUS	40:16:7E:B8:86:40	WPA2PSK	AES	72/100	6	<a href="#">Set</a>
TPLINK	F8:1A:67:FD:7E:2A	OPEN	NONE	66/100	6	<a href="#">Set</a>

2. Enter the Wireless information manually and click “**OK**” to connect.

## 7.4. UPnP

UPnP is Universal Plug and Play, which opens networking architecture that leverages TCP/IP and the Web technologies to enable seamless proximity networking in addition to control and data transfer among networked devices in the home, office, and public spaces.

- **Enable UPnP Device:**

When enabled, you will be able to see this device via any UPnP discovery tool

- **Enable UPnP Port Redirect:**

The device will try to find an UPnP-supported router and set up the port to redirect to the router.

- **Port Forwarding:**

Port forwarding function allows you to configure specific communication ports to be routed to your system over the Internet for users to access their IP camera(s) remotely.

1. **Local Port:** type 80.

2. **External Port:** type 8080.

3. **Protocol:** type TCP.

After port forwarding has been set up, the router will forward incoming requests on port that your IP Camera users. To set up port forwarding on your router, please refer to your router's instruction manuals for detail.


## 8. System Settings

### 8.1. Administrator Setting

For setting new Administrator Log-in Name and Password. Please note both User Name and Password are **case sensitive**.

**Step 1.** Enter the preferred **User Name**.

**Step 2.** Enter the preferred **Password** in the “New Password” field and repeat the same Password in the **Repeat Password** field.

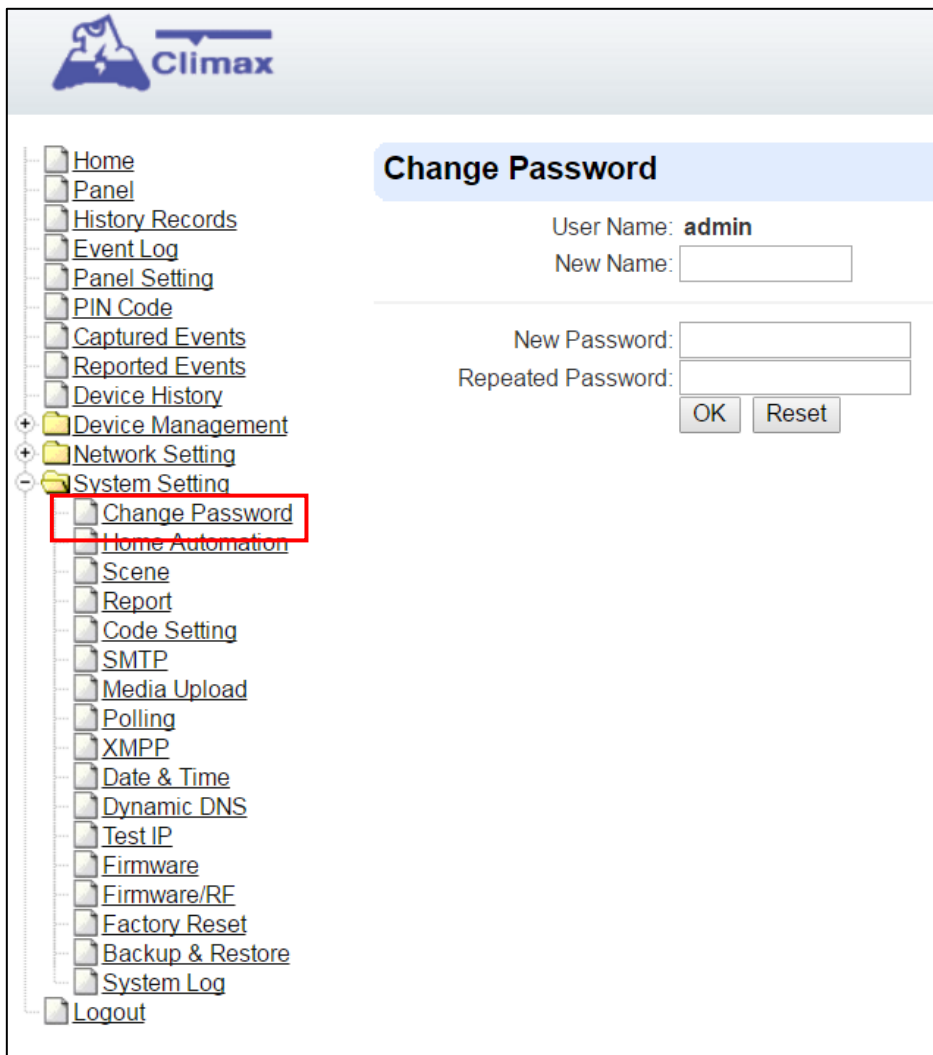


The screenshot displays the Climax web interface. On the left is a vertical navigation menu with various system settings options. The 'System Setting' folder is expanded, and the 'Change Password' option is highlighted with a red rectangular box. The main content area on the right is titled 'Change Password' and contains the following fields and controls:

- User Name:** A text field containing the value 'admin'.
- New Name:** An empty text input field.
- New Password:** An empty text input field.
- Repeated Password:** An empty text input field.
- OK** and **Reset** buttons located below the password fields.

## 8.2. Home Automation

It is used to set Home Automation rules to control sensors and home appliances. You can set up to 100 rules.

- Step 1.** Click on **Edit**.
- Step 2.** Select an operation area.
- Step 3.** Set a rule condition.
- Step 4.** Set a rule schedule.
- Step 5.** Select the corresponding action rules in the **Execution** field.

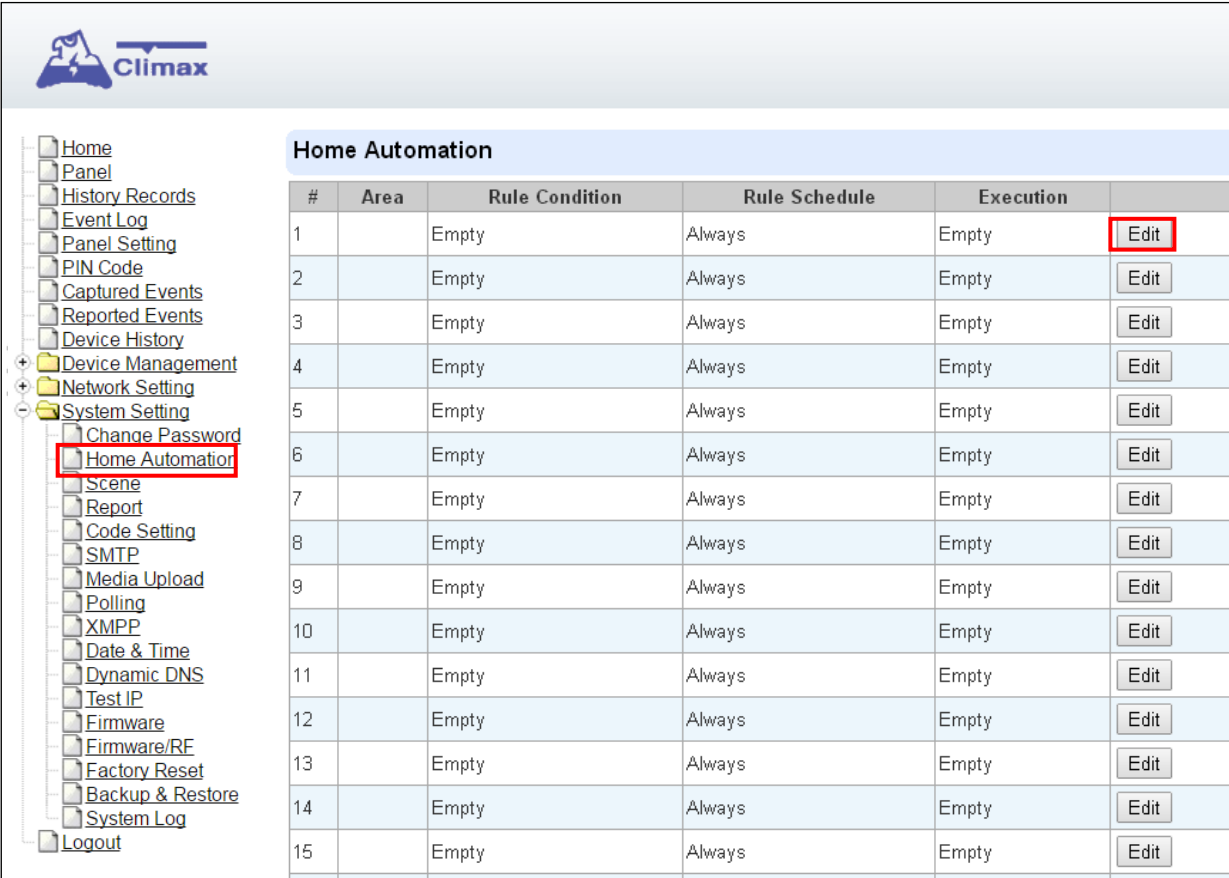

Home Automation					
#	Area	Rule Condition	Rule Schedule	Execution	
1		Empty	Always	Empty	Edit
2		Empty	Always	Empty	Edit
3		Empty	Always	Empty	Edit
4		Empty	Always	Empty	Edit
5		Empty	Always	Empty	Edit
6		Empty	Always	Empty	Edit
7		Empty	Always	Empty	Edit
8		Empty	Always	Empty	Edit
9		Empty	Always	Empty	Edit
10		Empty	Always	Empty	Edit
11		Empty	Always	Empty	Edit
12		Empty	Always	Empty	Edit
13		Empty	Always	Empty	Edit
14		Empty	Always	Empty	Edit
15		Empty	Always	Empty	Edit

- **Area**  
Select an operation area.

- **Rule Condition**

The rule condition determines under which circumstances the rule should be activated.

- ☞ **Empty** : When set as **Empty**, the system will follow the schedule time and execution rule to respond accordingly.
- ☞ **Trigger Alarm** : When set as **Trigger Alarm**, if the specified alarm event (Burglar/Smoke/Medical/Water/Silent Panic/Panic/Emergency/Fire/CO Alarm/Gas/Heat) or any alarm is triggered, the rule will be activated according to rule schedule and execution setting.

Trigger Alarm

Burglar Alarm

- ☞ **Mode Change** : When set as **Mode Change**, when the system enters specified mode, the rule will be activated according to rule schedule and execution setting.

- ☞ **Mode Change and Exit Timer Stopped** : When set as **Mode Change and Exit Timer Stopped**, when the system changes mode to and Exit Delay Timer expires, , the rule will be activated according to rule schedule and execution setting.

- ☞ **Mode Start Entry Timer** : When set as **Mode Start Entry Timer**, when the system begins to countdown Entry Delay, the rule will be activated according to rule schedule and execution setting.

- ☞ **Temperature Below** : When set as **Temperature Below**, if the temperature detected by specified temperature sensor drops below set threshold, the rule will be activated according to rule schedule and execution setting.

- ☞ **Temperature Above** : When set as **Temperature Above**, if the temperature detected by specified temperature sensor exceeds set threshold, the rule will be activated according to rule schedule and execution setting.

- ☞ **Temperature Between** : When set as **Temperature Between**, if the temperature detected by specified temperature sensor falls within the range specified, the rule will be activated according to rule schedule and execution setting.

- ☞ **High Power Consumption** : When set as **Power Consumption Above**, if the power output watt from a specific Power Switch exceeds, the rule will be activated according to rule schedule and execution setting.

- ☞ **Humidity Above** : When set as **Humidity Above**,if the humidity reading from specified room sensor rises above the level specified, the rule will be activated according to rule schedule and execution setting.

- ☞ **Humidity Below** : When set as **Humidity Below**,if the humidity reading from specified room sensor falls below the level specified, the rule will be activated according to rule schedule and execution setting.

- ☞ **LUX Between** : When set as **LUX Between**, if the lux reading from specified light sensor falls below the level specified, the rule will be activated according to rule schedule and execution setting.

- ☞ **Random** : The **Random** condition must be used along with Rule Schedule setting. Set a percentage from 1 to 10%. When the panel time reaches programmed Rule Schedule time. The Panel will activate rule according to set chance.

**Example:** If set as 10%, whenever the panel reaches programmed Rule Schedule time, there will be a 10% chance the rule is activated.

## ● Rule Schedule

- ☞ **Always** : When set as **Always**, the rule can be activated anytime.
- ☞ **Once** : When set as **Once**, the system will follow the rule condition and execute rule according to the exact date and time specified..

- ☞ **Every Month** : When set as **Every Month**, the system will follow the rule condition and execute rule according to date and time specified every month.

- ☞ **Every Week** : When set as **Every Week**, the system will follow the rule condition and execute rule according to day of the week and time specified every week.

- ☞ **Every Day** : When set as **Every Day**, the system will follow the the rule condition and execute rule according to time specified every day

 
## ● Execution

Execution is the actual action performed by Control Panel when both Rule Condition and Rule Schedule requirements are met

- ☞ **Zone Switch Off**: Turn on the Power Switch at specified zone.


- ☞ **Zone Switch On** : Turn on the Power Switch at specified zone.






A control interface for 'Zone Switch On'. It features a dropdown menu with 'Zone Switch On' selected and a second dropdown menu with 'Zone 1' selected.

 - ☞ **Zone Switch On For** : Turn on the Power Switch at specified zone for a set duration.




A control interface for 'Zone Switch On for'. It features a dropdown menu with 'Zone Switch On for' selected, a second dropdown menu with 'Zone 1' selected, and a third dropdown menu with '5 sec' selected.

 - ☞ **Zone Switch Level** : Change the power output level for Dimmer at specified zone.




A control interface for 'Zone Switch Level'. It features a dropdown menu with 'Zone Switch Level' selected, a second dropdown menu with 'Zone 1' selected, and a third dropdown menu with '0%' selected.

 - ☞ **Zone Switch Toggle** : Toggle on/off the Power Switch at specified zone.




A control interface for 'Zone Switch Toggle'. It features a dropdown menu with 'Zone Switch Toggle' selected and a second dropdown menu with 'Zone 1' selected.

 - ☞ **Group Switch Off** : Turn off all Power Switches assigned to specified group.




A control interface for 'Group Switch Off'. It features a dropdown menu with 'Group Switch Off' selected and a second dropdown menu with 'Group 1' selected.

 - ☞ **Group Switch On** : Turn on all Power Switches assigned to specified group.




A control interface for 'Group Switch On'. It features a dropdown menu with 'Group Switch On' selected and a second dropdown menu with 'Group 1' selected.

 - ☞ **Group Switch On For** : Turn on all Power Switches assigned to specified group for a set duration.




A control interface for 'Group Switch On for'. It features a dropdown menu with 'Group Switch On for' selected, a second dropdown menu with 'Group 1' selected, and a third dropdown menu with '5minutes' selected.

 - ☞ **Group Switch Level** : Change the power output level for Dimmer at specified group.




A control interface for 'Group Switch Level'. It features a dropdown menu with 'Group Switch Level' selected, a second dropdown menu with 'Group 1' selected, and a third dropdown menu with '0%' selected.

 - ☞ **Group Switch Toggle** : Toggle on/off the Power Switch at specified group.




A control interface for 'Group Switch Toggle'. It features a dropdown menu with 'Group Switch Toggle' selected and a second dropdown menu with 'Group 1' selected.

 - ☞ **Mode Change** : The system will change to the mode as you specified.




A control interface for 'Mode Change'. It features a dropdown menu with 'Mode Change' selected and a second dropdown menu with 'Full Arm' selected.

 - ☞ **Request Image** : The PIR Camera in specified zone will take a picture.




A control interface for 'Request Image'. It features a dropdown menu with 'Request Image' selected and a second dropdown menu with 'Zone 1' selected.

 - ☞ **Request Image (All)** : All PIR Cameras in the system will take a picture.




A control interface for 'Request Image (All)'. It features a dropdown menu with 'Request Image (All)' selected.

 - ☞ **Request Image (No Flash)**: The PIR Camera in specified zone will take a picture without activating its LED flash.



 - ☞ **Request Image (All, No Flash)**: All PIR Cameras in the system will take a picture without activating LED Flash.




- ☞ **Request Video**: The PIR Video Camera or IP Camera in specified zone will record a video.




- ☞ **Request Video (All)**: All PIR Video Cameras and IP Cameras in the system will record a video.



 - ☞ **Setup UPIC**: The UPIC and specified zone will transmit Off/Heat/Cool command to the air conditioner as programmed.




- ☞ **Hue Control**: Adjust the hue and saturation of the Philips Hue at specified zone as programmed.

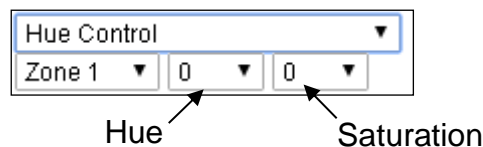

- ☞ **Trigger Alarm**: Choose to activate one of the following alarms: High Temperature Alarm, Low Temperature Alarm, High Power Consumption Alarm, High Humidity Alarm and Low Humidity Alarm




 - ☞ **Apply Scene**: the system will execute preprogrammed Scene number. Please refer to **8.3. Scene** for detail.



## 8.3. Scene

The Scene setting allows you to customize a series of actions with your devices, such as Power Switch control, image/video request, mode change and trigger alarm. The programmed scene can be set to activated when a device is triggered. (See **5.1.3. Edit Devices**), or when a Home Automation Rule is executed. (See **8.2. Home Automation**) For example, you can set a scene to control multiple lightings, then set your Remote Controller to activate the scene when the button is pressed, or set a Home Automation Rule to activate the scene.

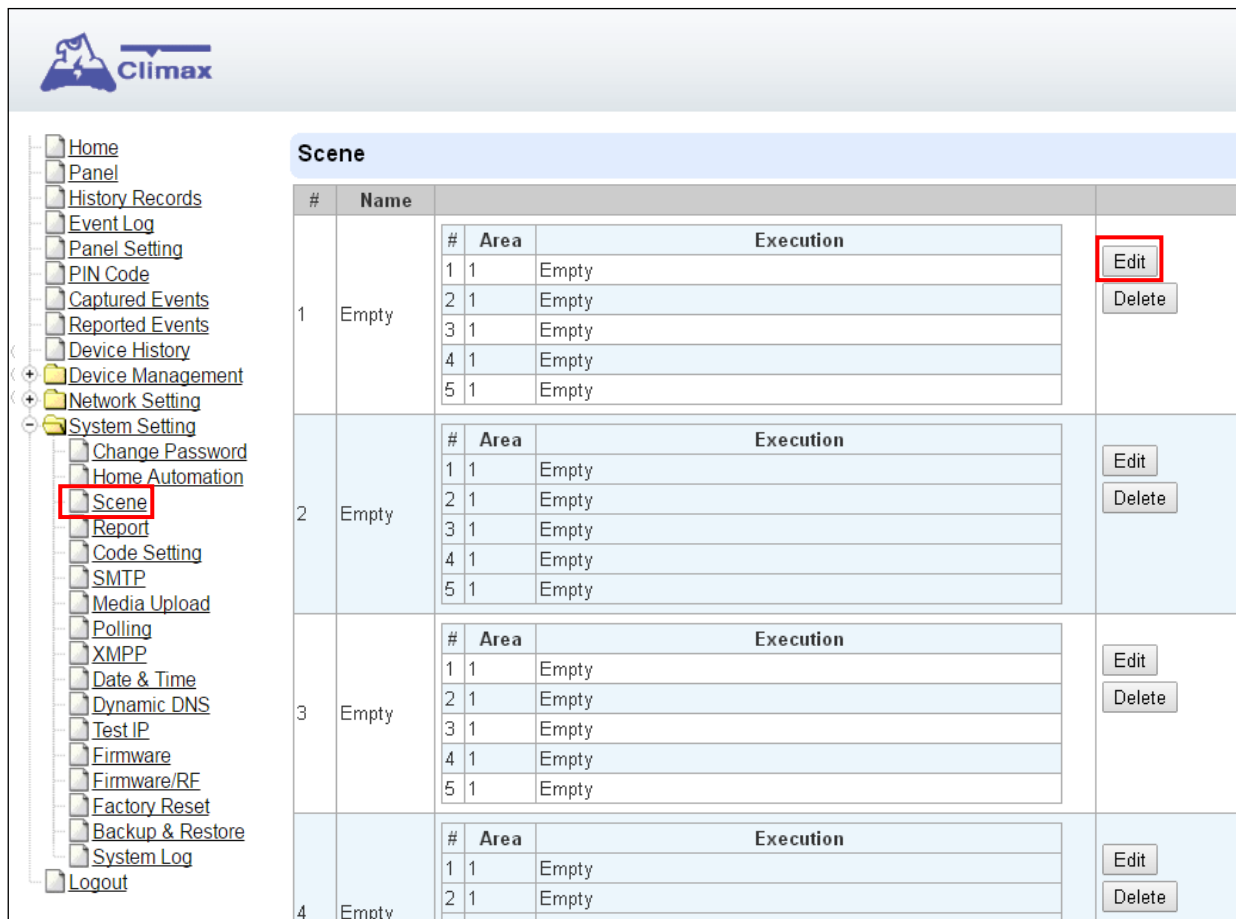

**Scene**

#	Name	#	Area	Execution	
1	Empty	1	1	Empty	<div>Edit</div> <div>Delete</div>
		2	1	Empty	
		3	1	Empty	
		4	1	Empty	
		5	1	Empty	
2	Empty	1	1	Empty	<div>Edit</div> <div>Delete</div>
		2	1	Empty	
		3	1	Empty	
		4	1	Empty	
		5	1	Empty	
3	Empty	1	1	Empty	<div>Edit</div> <div>Delete</div>
		2	1	Empty	
		3	1	Empty	
		4	1	Empty	
		5	1	Empty	
4	Empty	1	1	Empty	<div>Edit</div> <div>Delete</div>
		2	1	Empty	

**Step 1.** Click on **Edit**.

#	Name	#	Area	Execution	
1	<input type="text"/>	1	1 ▼	Empty ▼	<div>Done</div>
		2	1 ▼	Empty ▼	
		3	1 ▼	Empty ▼	
		4	1 ▼	Empty ▼	
		5	1 ▼	Empty ▼	

**Step 2.** Enter a name for the scene.

**Step 3.** Select an Area

**Step 4.** Select an action to be executed when the scene is activated. Refer to the Rule Execution section in **8.2. Home Automation** for detail.

**Step 5.** Repeat Step 2-3 to setup the execution you wanted. As many as 5 executions can be

included in one scene.

**Step 6.** Click **“Done”**.

**Step 7.** Click **“OK”** at bottom of webpage to confirm the new scene setting..

## 8.4. Reporting

This is used for installer to program/ set all requirements for reporting purposes.

Report							
#	Reporting URL	Level	Group 1	Group 2	Group 3	Group 4	Group 5
1		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
2		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
3		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
4		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
5		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
6		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
7		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
8		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
9		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
10		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
11		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
12		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
13		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
14		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
15		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
16		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
17		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
18		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
19		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
20		All events ▼	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			Essential	Essential ▼	Essential ▼	Essential ▼	Essential ▼
			5 Retry ▼	5 Retry ▼	5 Retry ▼	5 Retry ▼	5 Retry ▼

### ● Reporting URL

This is used for installer to program report destinations.

#### 1 Climax CID protocol via IP

Format: ip://(Account Number)@(server ip):(port)/CID

Example: ip://1234@54.183.182.247:8080/CID

#### 2 SIA DC-09 protocol via IP

Format: ip://(Account Number)@(server ip):(port)/SIA

Example: ip://1234@54.183.182.247:8080/SIA

#### 3 SIA DC-09 protocol via IP with AES encryption

Format: ip://(Account Number)@(server ip):(port)/SIA/KEY/(128,196 or 256 bits Key)

Example:

ip://1234@54.183.182.247:8080/SIA/KEY/ 4A46321737F890F654D632103F86B4F3

#### 4 SIA DC-09 protocol using CID event code via IP

Format: ip://(Account Number)@(server ip):(port)/CID\_SIA

Example: ip://1234@54.183.182.247:8080/CID\_SIA

#### 5 SIA DC-09 protocol using CID event code via IP, with HEX encryption.

Format: ip://(Account Number)@(server ip):(port)/CID\_SIA/KEY/(HEX)

Example:

ip://1234@54.183.182.247:8080/CID\_SIA/KEY/4A46321737F890F654D632103F86B4  
F3

## 6 CSV protocol via IP

Format: ip://{Account Number}@ (server ip):(port)/CSV

Example: ip://1234@54.183.182.247:8080/CSV

## 7 CSV protocol via IP including username and password

Format: ip://{Account Number}@ (server ip):(port)/CSV/User/Pasword

Example: ip://1234@54.183.182.247:8080/CSV/abcd/1357

## 8 Email

Format: mailto:user@example.com

Example: mailto:john@gmail.com

- **Level**

Select a reporting condition:

All events: The system will report all events to this destination.

Alarm events: The system will only report alarm event to this destination.

Status events: The system will only report status event(non-alarm events) to this destination.

- **Group**

Select a group for your report destination The system will make report according to the following principle:

- ☞ Group with higher priority will be reported first: Ex: Group 1 → Group 2 → Group 3....
- ☞ If reporting to the first destination in a group fails, the system will move on to the next report destination in the group.
- ☞ If reporting to one of the report destinations in a group is successful, the system will consider reporting to this group successful and stop reporting to rest of the destinations in the group. It will then move on to report to the next group.
- ☞ If reporting to all destinations in a group fails, the system will retry report to group according to retry times set below. If reporting is still unsuccessful after retries, the system will move on to report the the next group according to Essential/Optional setting below.
- ☞ After completing a round of reporting (From Group 1 → Group 2 ..... →Group5), If there is any group set as Essential which has not received report successfully, the system will restart the reporting cycle to retry reporting until every group set as Essential is reported successfully.

- **Essential/Optional**

Essential: the system will report to all groups set as **Essential**. The system will never give up trying to report to any group set as Essential until at least one of the destinations in every Essential group successfully receives the report. Group 1 is always set as **Essential** and cannot be changed.

Optional: The system will only report to group set as **Optional** when reporting to its previous group fails. For example: if Group 3 is set is optional, the Control Panel will only report to Group 3 if reporting to Group 2 fails.

- **1 Retry/ 3 Retry/ 5 Retry/ 10 Retry/ 99 Retry:**

If reporting to all destinations in a group fails, the system will retry reporting to the group according to the retries times set here.


<NOTE>

- When the panel is registered into Climax's Home Portal Server, URL1 will be filled in with Home Portal Server report information. Do not change the information once registration is complete or reporting to Home Portal Server may encounter error.
- After registering the panel in Home Portal Server, if you wish to set more reporting destination, the new report destination should be set to different group than URL1 otherwise it may not be able to receive report successfully.

## 8.5. Code Settings

The Duress Code, Master Code & Temporary Code adds the flexibility of different security level for operation in **Code Settings** menu.

**Step 1.** Key in your preferred 4-6 digit **Installer Code**, **Duress Code**, **Master Code**, and/or **Temporary Code**.

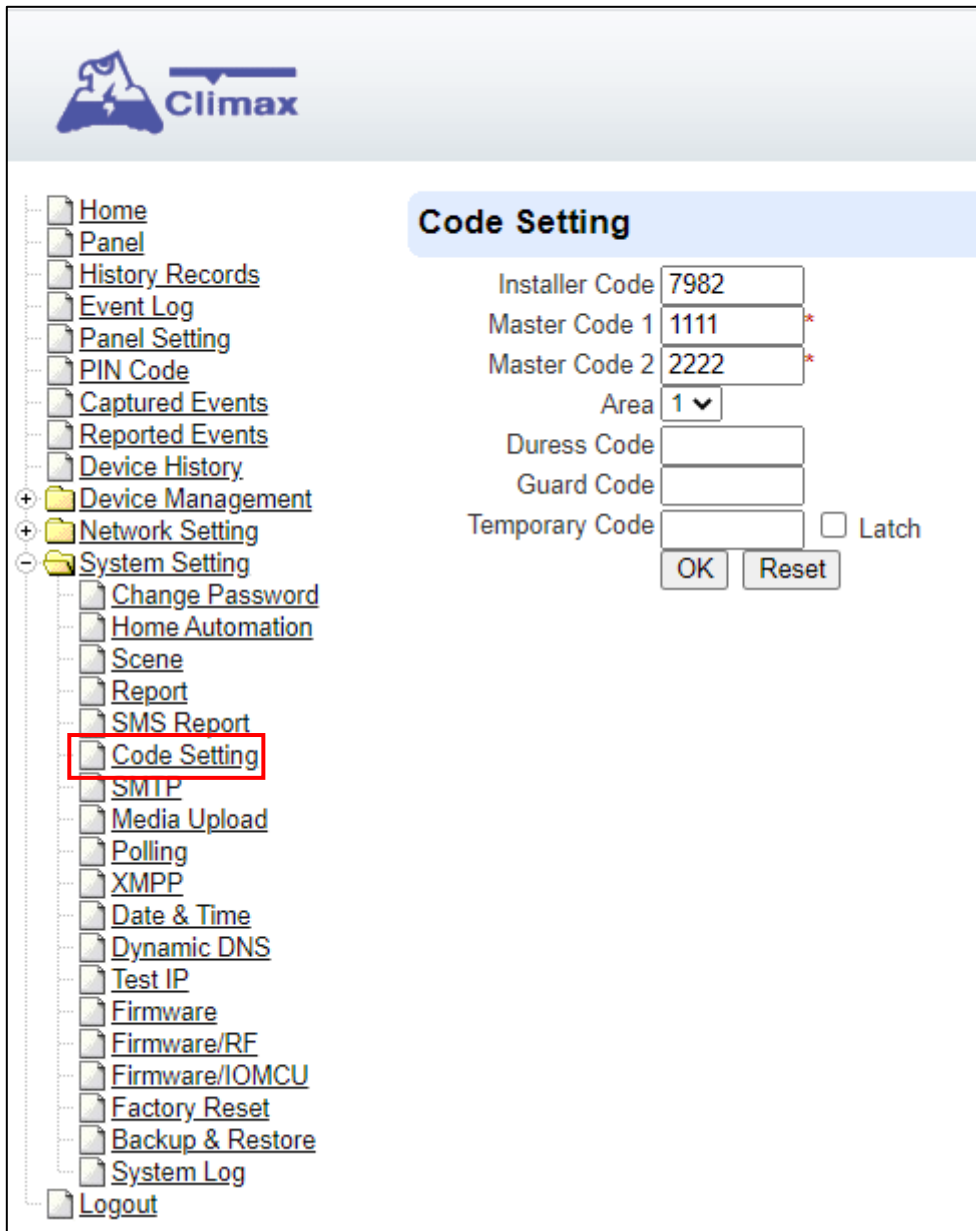

The screenshot displays the Climax web interface. On the left is a navigation tree with the following items: Home, Panel, History Records, Event Log, Panel Setting, PIN Code, Captured Events, Reported Events, Device History, Device Management (expanded), Network Setting (expanded), System Setting (expanded), Change Password, Home Automation, Scene, Report, SMS Report, Code Setting (highlighted with a red box), SMTP, Media Upload, Polling, XMPP, Date & Time, Dynamic DNS, Test IP, Firmware, Firmware/RF, Firmware/IOMCU, Factory Reset, Backup & Restore, System Log, and Logout. The main content area is titled 'Code Setting' and contains the following fields: Installer Code (7982), Master Code 1 (1111), Master Code 2 (2222), Area (1), Duress Code, Guard Code, Temporary Code, and a Latch checkbox. At the bottom of the form are OK and Reset buttons.

**Step 2.** You can also choose to have Latch Option On / Off for Temporary Code by tick the Latch Option box and press **OK** to confirm the settings.

- **Installer Code**

The Installer Code is used for SMS Remote Programming, when sending a remote programming message, the user needs to enter Installer Code in the message to be able to program the system. The default Installer code is: **7982**.

- **Master Code**

The default Master Code for Area 1 and Area 2 are: 1111 and 2222 respectively.

- **Area**

Each Area has different Duress Code, Master Code, and Temporary Code. Select the Area



to program the code setting in this area.

- **Duress Code**

The Duress Code is designed for transmitting a secret & silence alarm.

When Duress Code is used for accessing the system, the Control Panel will report a secret alarm message without sounding the siren to the Central Monitoring Station to indicate of a **Duress Situation in Progress**.

The Duress Code consists of 4-6 digits and is not activated as default by the factory.

- **Guard Code**

The Guard Code is designed for security patrol personnel to arm/disarm the system. It can be set the same as a User PIN Code.

The Guard Code consists of 4-6 digits and is not activated as default by the factory.

- **Temporary Code**

Temporary Code is also used to arm/disarm the system, but it is for a temporary user. The temporary Code is **ONLY** valid for one-access per arming and disarming. Afterwards, the Temporary Code will be automatically erased and needs to be reset for a new Temporary user.

The Temporary Code consists of 4-6 digits and is not activated as default by the factory.

- **Latch Option**

This is to program the Latch Key Reporting feature for Temporary Code. Please click the box to select the options.

☒ Latch → **Latch Report ON** = Whenever the system is armed, home/ day home/ night home armed or disarmed, the Panel will transmitt Contact ID code / SMS message / GPRS reporting (according to pre-setting) to notify the Central Monitoring Station.

☐ Latch → **Latch Reprot OFF** = Whenever the system is armed, home/ day home/ night home armed or disarmed, the Panel will NOT transmit reporting(s) to notify the Central Monitoring Station.

- **Delete**

Except Master Code which can't be disabled in any way, Temporary and Duress Code can be disabled by cleaning the code box and leaving the box as blank.

## 8.6. SMTP Setting

Program the mail server related settings. The email account you set here would be used to send report for events or picture and video clip captured by PIR Camera and PIR Video Camera.

The screenshot shows the Climax web interface. On the left is a sidebar with a tree view of navigation options: Home, Panel, History Records, Event Log, Panel Setting, PIN Code, Captured Events, Reported Events, Device History, Device Management, Network Setting, System Setting (expanded), Change Password, Home Automation, Scene, Report, Code Setting, SMTP (highlighted with a red box), Media Upload, Polling, XMPP, Date & Time, Dynamic DNS, Test IP, Firmware, Firmware/RF, Factory Reset, Backup & Restore, System Log, and Logout. The main content area has a light blue header for the 'SMTP Setting' section. Below it are input fields for Server, Port (25), User, Password, and From. There is a checkbox for 'Using TLS/SSL encrypted channels (Secure SMTP)' and 'OK' and 'Reset' buttons. Below this is another light blue header for the 'Test E-Mail' section, followed by a 'Receiver' input field and 'OK' and 'Reset' buttons.


**Step 1.** Enter the following settings:

- **Server:** set the mail server (max. 60 digits/alphabets).
- **Port:** set the port number (max. 5 digits/alphabets).
- **User:** set the mail account name (max. 30 digits/alphabets).
- **Password:** set the password corresponding to the mail account name (max. 30 digits/alphabets).
- **From:** set the email address according to your mail sever and account name. If your mail server supports other email address, you can enter the email address here. (max. 30 digits/alphabets).
- **Using TLS/SSL encrypted channels (Secure SMTP):** If your mail server uses TLS or SSL encryption method for secure transfer, please click the box to enable the setting

**Step 2.** Click **OK** to confirm the setting.

## 8.7. Media Upload

The system can deliver captured images and video clips captured by PIR Cameras and PIR Video Camera to cell phone, email or FTP.

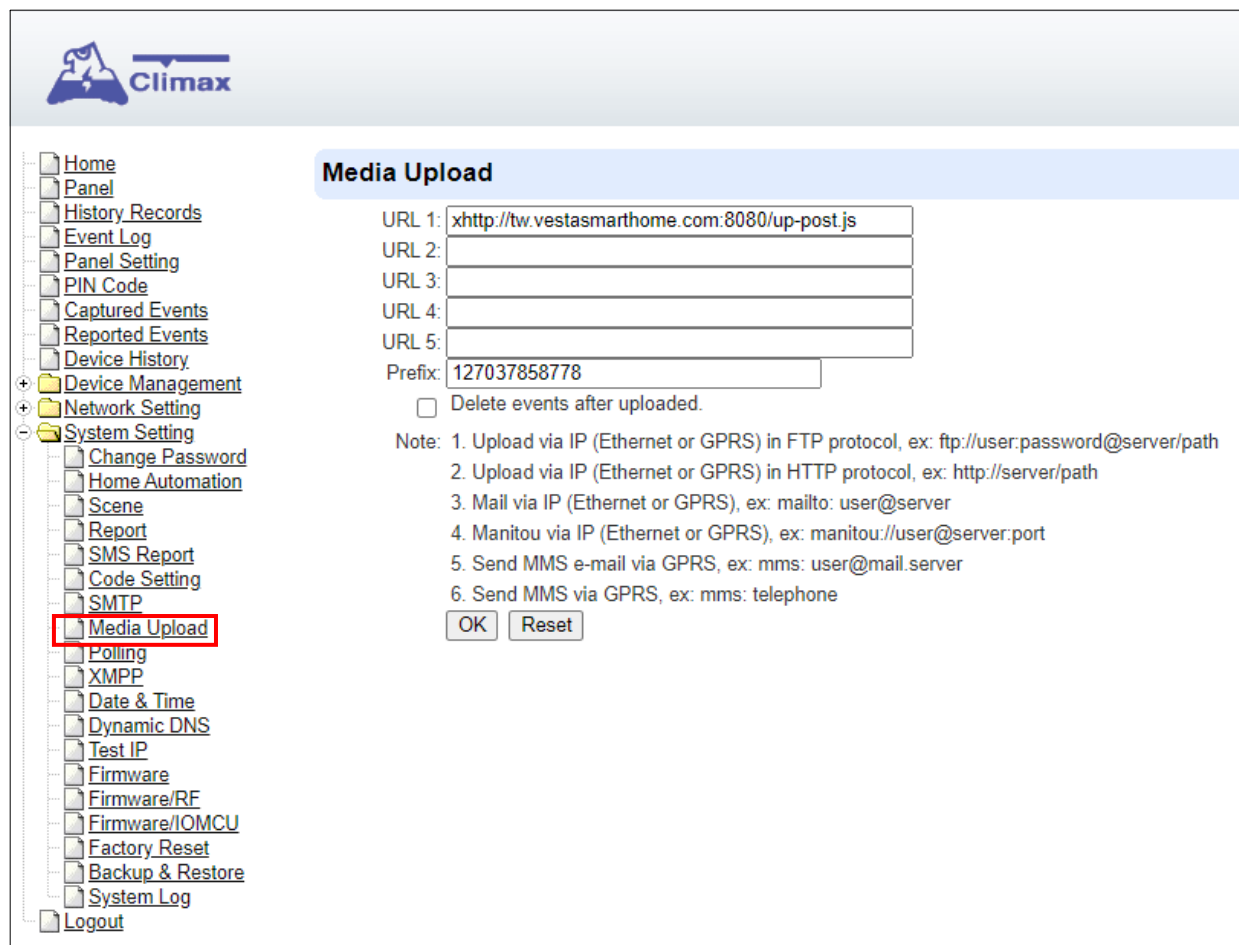

**Climax**

**Media Upload**

URL 1:

URL 2:

URL 3:

URL 4:

URL 5:

Prefix:

☐ Delete events after uploaded.

Note: 1. Upload via IP (Ethernet or GPRS) in FTP protocol, ex: ftp://user:password@server/path  
2. Upload via IP (Ethernet or GPRS) in HTTP protocol, ex: http://server/path  
3. Mail via IP (Ethernet or GPRS), ex: mailto: user@server  
4. Manitou via IP (Ethernet or GPRS), ex: manitou://user@server:port  
5. Send MMS e-mail via GPRS, ex: mms: user@mail.server  
6. Send MMS via GPRS, ex: mms: telephone


- **FTP:** <ftp://user.password@server/path>
- **HTTP:** <http://ip:port/path>
- **Email:** <mailto:user@server> (transmitting an alarm image over Ethernet)
- **Manitou:** <manitou://user@server:port>
- **MMS via Telephone:** mms: telephone number
- **MMS via GPRS:** mms: [user@mail.server](mms:user@mail.server) (transmitting an alarm image over MMS)

### <NOTE>

- If **"Deleted events after uploaded"** is checked, the system will automatically clear all captured images which are displayed in the Captured Events menu after it successfully sends out those captured images to preset reporting destinations.

## 8.8. Polling

The polling function enables the Control Panel to query the destination you set (URL1 or URL2) in turn as to whether it has any data to transmit.

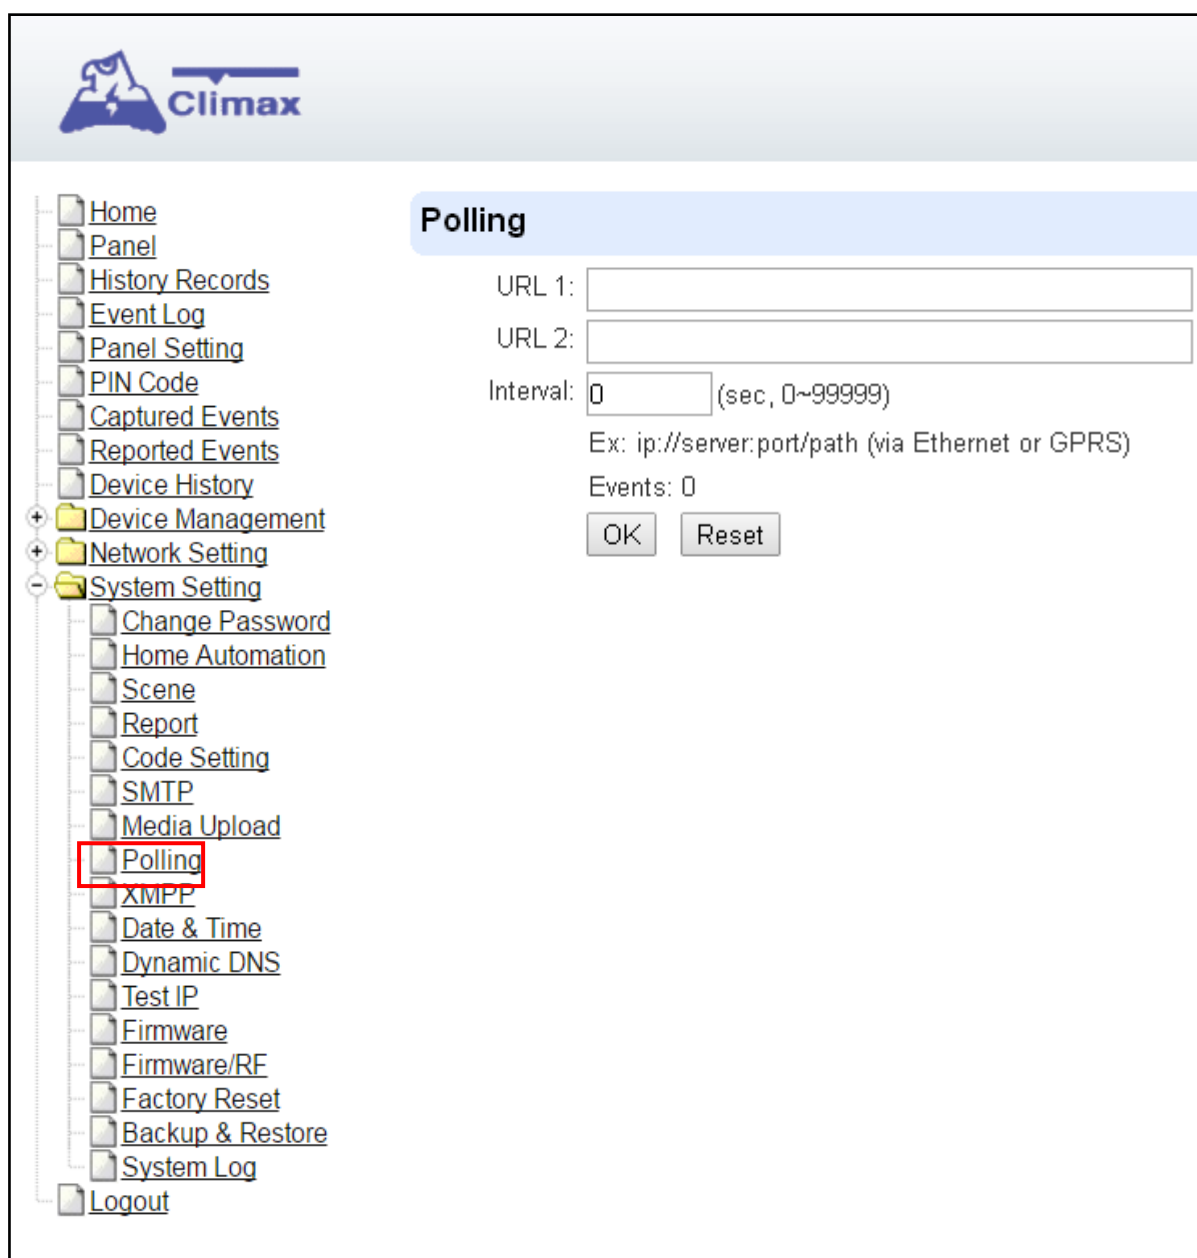


The screenshot shows the Climax Control Panel web interface. On the left is a navigation menu with a tree structure. The 'System Setting' folder is expanded, and the 'Polling' option is highlighted with a red rectangle. The main content area is titled 'Polling' and contains the following fields and controls:

- URL 1:
- URL 2:
- Interval:  (sec, 0~99999)
- Ex: ip://server:port/path (via Ethernet or GPRS)
- Events: 0
- OK
- Reset

- **URL/URL2:** ip://server:port/path
- **Interval :** interval time of polling

## 8.9. XMPP

XMPP setting enables the Control Panel to query the set destination. This setting is required for the Control Panel to connect to Climax's Home Portal Server for remote control. If the panel is disconnected from the server, it will retry connection every 3 minutes.

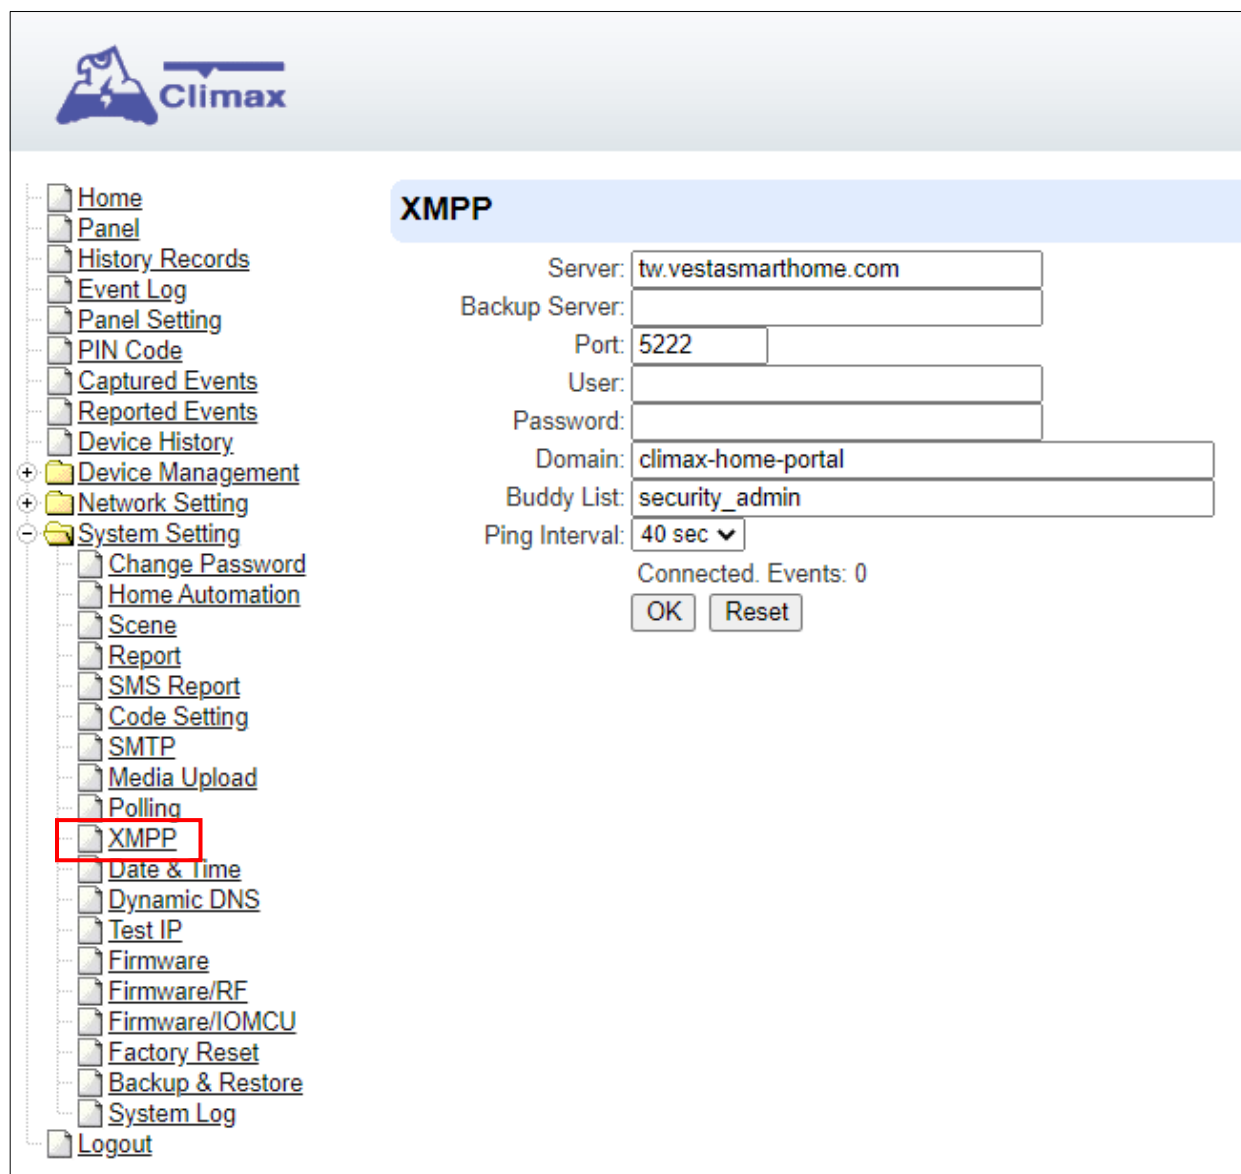

The screenshot shows the Climax Control Panel interface. On the left is a sidebar with a tree view of settings. The 'XMPP' option under 'System Setting' is highlighted with a red box. The main content area is titled 'XMPP' and contains the following fields:

- Server: tw.vestasmarthome.com
- Backup Server: (empty)
- Port: 5222
- User: (empty)
- Password: (empty)
- Domain: climax-home-portal
- Buddy List: security\_admin
- Ping Interval: 40 sec (dropdown menu)

Below these fields, it says 'Connected. Events: 0' and there are 'OK' and 'Reset' buttons.

- **Server:** server address (dependent upon default firmware)  
US server: us.vestasmarthome.com  
EU server: eu.vestasmarthome.com  
Taiwan server: tw.vestasmarthome.com
- **Port:** server's port number
- **User:** authorized user account name
- **Password:** authorized user password
- **Domain:** domain address
- **Buddy List:** contact destination
- **Ping Interval:** server connection test interval

## 8.10. Date & Time

Program the current **Date & Time** and set automatic synchronization with internet time server.

**Climax**

Home  
Panel  
History Records  
Event Log  
Panel Setting  
PIN Code  
Captured Events  
Reported Events  
Device History  
+ Device Management  
+ Network Setting  
- System Setting  
  Change Password  
  Home Automation  
  Scene  
  Report  
  Code Setting  
  SMTP  
  Media Upload  
  Polling  
  XMPP  
  **Date & Time**  
  Dynamic DNS  
  Test IP  
  Firmware  
  Firmware/RF  
  Factory Reset  
  Backup & Restore  
  System Log  
Logout

### Date & Time

Date: 2014/05/08  (yyyy/MM/dd)

Time: 11 : 43 (hh:mm)

### Time Zone

Time Zone: (GMT+00:00) Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London ▼

### Internet Time

☐ Automatically synchronize with an Internet time server.


Server: pool.ntp.org ▼

©2014 Climax Tech. Co., Ltd.

- **Date & Time:** set current month, date and time.
- **Time Zone:** choose your time zone, and then the system will calculate the daylight saving time automatically (if necessary).
- **Internet Time:** the system will automatically synchronize with an internet time server. Tick the check box to enable this function. Available options: [time1.google.com](http://time1.google.com), [pool.ntp.org](http://pool.ntp.org), [time.nist.gov](http://time.nist.gov) and [tick.usno.navy.mil](http://tick.usno.navy.mil).

## 8.11. Dynamic DNS

This page is used to provide you the Control Panel's current public IP address.

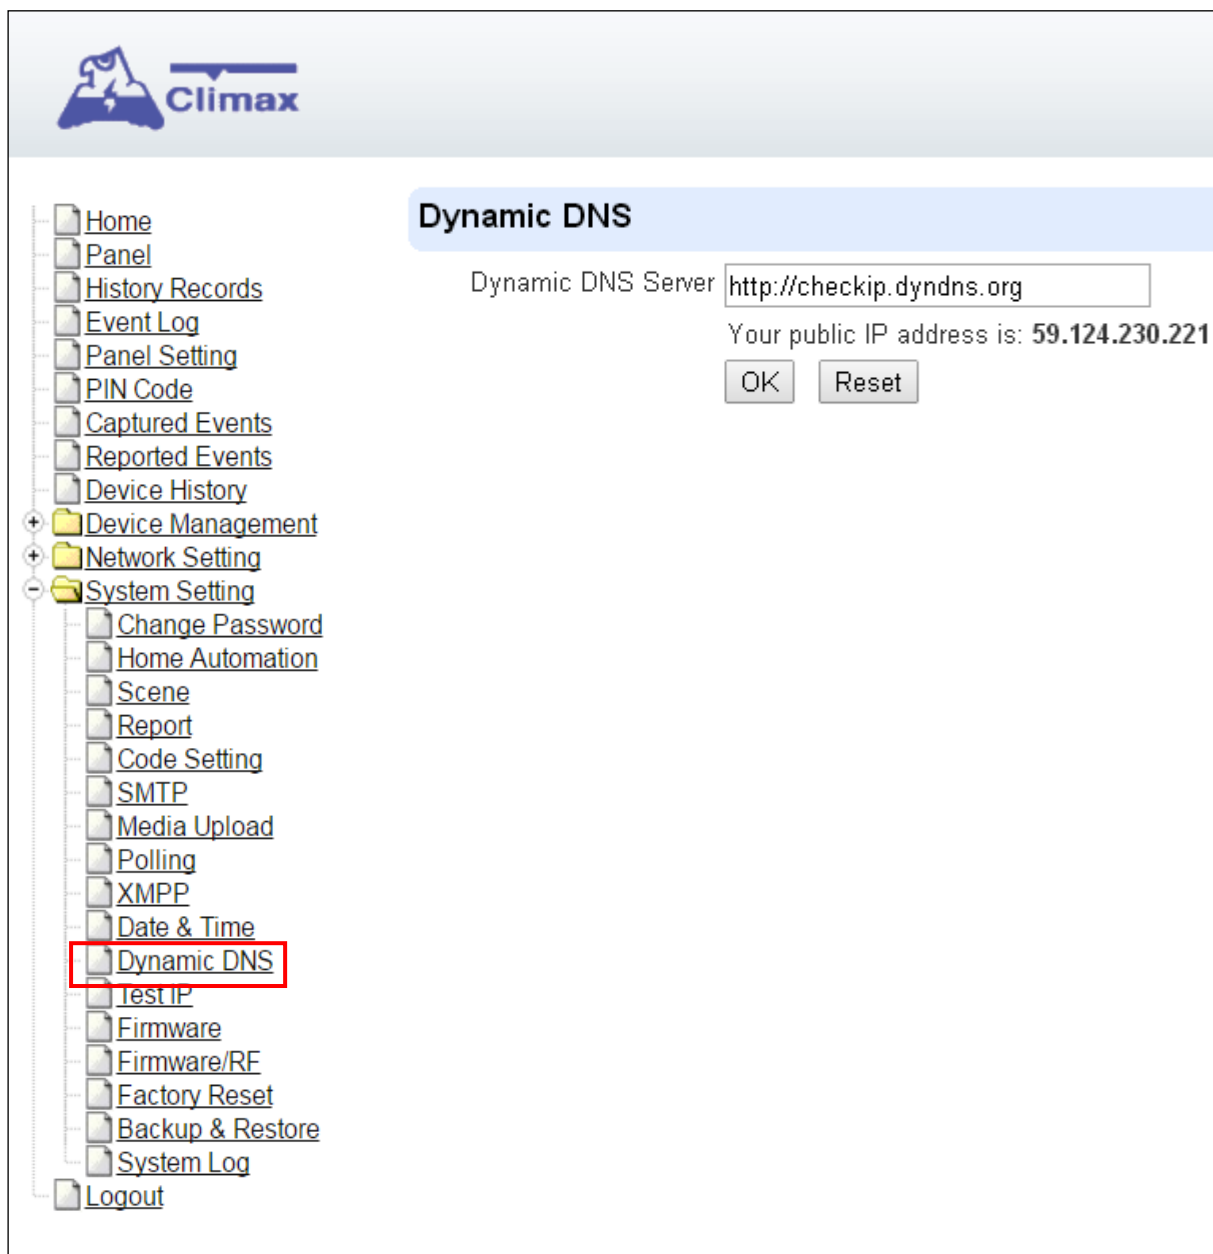

The screenshot shows the Climax Control Panel interface. On the left is a sidebar menu with various system settings. The 'Dynamic DNS' option is highlighted with a red rectangle. The main content area is titled 'Dynamic DNS' and contains a text input field for the 'Dynamic DNS Server' set to 'http://checkip.dyndns.org'. Below this, it displays 'Your public IP address is: 59.124.230.221' and includes 'OK' and 'Reset' buttons.

**Climax**

**Dynamic DNS**

Dynamic DNS Server

Your public IP address is: **59.124.230.221**


**Left Sidebar Menu:**

- Home
- Panel
- History Records
- Event Log
- Panel Setting
- PIN Code
- Captured Events
- Reported Events
- Device History
- + Device Management
- + Network Setting
- System Setting
  - Change Password
  - Home Automation
  - Scene
  - Report
  - Code Setting
  - SMTP
  - Media Upload
  - Polling
  - XMPP
  - Date & Time
  - Dynamic DNS**
  - Test IP
  - Firmware
  - Firmware/RE
  - Factory Reset
  - Backup & Restore
  - System Log
- Logout

- **Dynamic DNS Server:** <http://checkip.dyndns.org>

## 8.12. Test IP

This is for you to test the Control Panel internet connection.

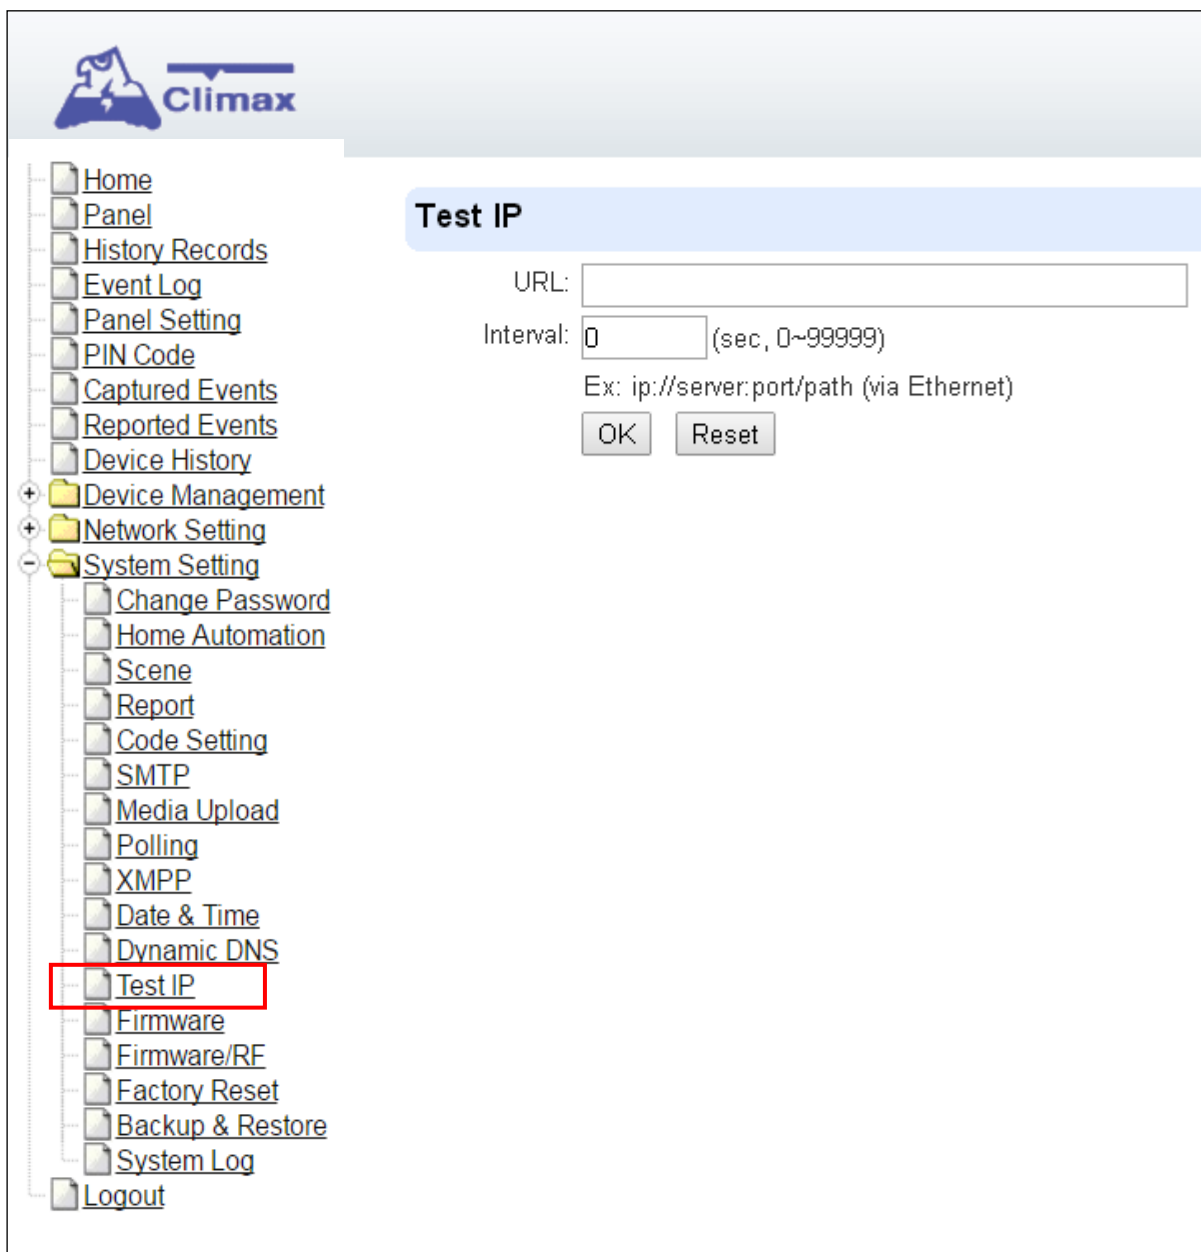

The screenshot shows the Climax Control Panel interface. On the left is a navigation tree with the following items: Home, Panel, History Records, Event Log, Panel Setting, PIN Code, Captured Events, Reported Events, Device History, Device Management, Network Setting, System Setting, Change Password, Home Automation, Scene, Report, Code Setting, SMTP, Media Upload, Polling, XMPP, Date & Time, Dynamic DNS, Test IP (highlighted with a red box), Firmware, Firmware/RF, Factory Reset, Backup & Restore, System Log, and Logout. The main area is titled "Test IP" and contains the following fields and buttons:

- URL:
- Interval:  (sec, 0~99999)
- Ex: ip://server:port/path (via Ethernet)
- OK
- Reset

**Step 1.** Enter the URL destination you want to test connection to.

**Step 2.** Enter the test interval.

**Step 3.** Click "OK"

You can check the test connect result in **System Log**.



## 8.13 Firmware Upgrade

You can update the firmware via this web page.

**Step 1.** Click on “**Choose File**” and locate the latest firmware file in your PC.



The screenshot displays the Climax web interface for a firmware upgrade. On the left, a sidebar menu lists various system settings, with 'Firmware' highlighted in red. The main content area is titled 'Firmware Upgrade' and contains the following text:

This page applies a firmware update to your alarm panel. You should only apply updates with the correct firmware.

Your current firmware version is: GL 0.0.2.23

Firmware File:  未選擇任何檔案

To locate the correct file, click on the browse file button and find the directory you downloaded it to. Click on the file and then OK. When the filename appears in the box, click the apply button. DO NOT interrupt the update process.

An 'Apply' button is located below the instructions.

© 2011-2020 Climax Tech. Co., Ltd.

**Step 2.** Press “**Apply**” to upload the latest firmware to Control Panel


**Step 3.** Wait for 1 min and do NOT power off during this time.

**Step 4.** Once Firmware upgrading is complete, the Control Panel will reboot automatically

## 8.14. RF Firmware Upgrade

You can update the Control Panel's RF firmware via this web page.

**Step 1.** Click on **“Choose File”** and locate the latest firmware file (**“unzipped image.bin”** file) in your PC.

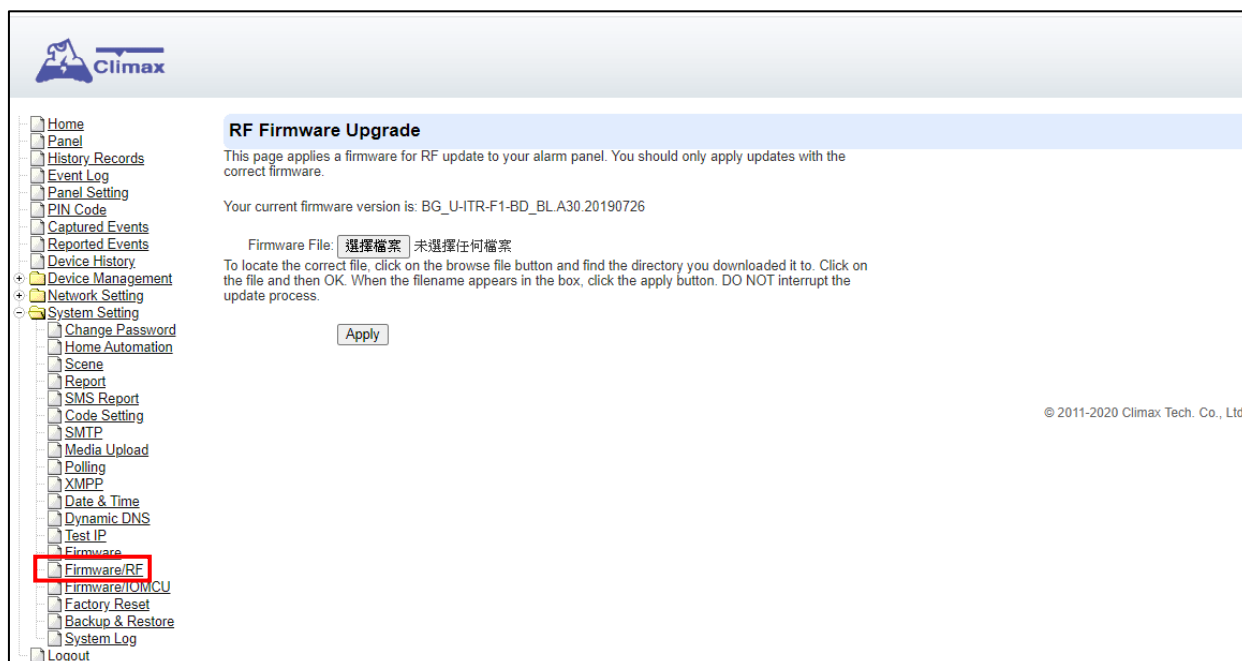

**Step 2.** Press **“Apply”** to upload the latest firmware to Control Panel

**Step 3.** Wait for 1 min and do NOT power off during this time.

**Step 4.** Once Firmware upgrading is complete, the Control Panel will reboot automatically

## 8.15. IO MCU Firmware Upgrade

**Step 1.** Click “Firmware/IOMCU” to enter this page.

**Step 2.** Click on “Choose File” and locate the latest firmware file in your PC.

**IO MCU Firmware Upgrade**

This page applies a firmware for IO MCU update to your alarm panel. You should only apply updates with the correct firmware.

Your current firmware version is: U-IO\_BL.A01.2020.04.10

Firmware File:  未選擇任何檔案

To locate the correct file, click on the browse file button and find the directory you downloaded it to. Click on the file and then OK. When the filename appears in the box, click the apply button. DO NOT interrupt the update process.

© 2011-2020 Climax Tech. Co., Ltd.

**Menu:** Home, Panel, History Records, Event Log, Panel Setting, PIN Code, Captured Events, Reported Events, Device History, Device Management, Network Setting, System Setting, Change Password, Home Automation, Scene, Report, SMS Report, Code Setting, SMTP, Media Upload, Polling, XMPP, Date & Time, Dynamic DNS, Test IP, Firmware, Firmware/F, **Firmware/IOMCU**, Factory Reset, Backup & Restore, System Log, Logout

**Step 3.** Press “Apply” to upload the latest firmware to Control Panel

**Step 4.** Wait for 1 min and DO NOT power off during this time.

**Step 5.** Once Firmware upgrading is complete, the Panel will reboot automatically.


## 8.16. Factory Reset

You can clear all programmed parameters in the Control Panel and reset it to Factory Default.

Once the **Factory Reset** is executed, all the programmed settings will be returned to its default value, and all the learnt-in devices will be removed. You will need to restart the programming and learning process again.

### 8.16.1 Remote Reset

- Step 1.** Tick the **Kept current network setting** to keep the current Network settings. Otherwise, the system will reset its value back to factory default. Tick the **Kept current device list** box to keep the current learnt-in devices. Otherwise, the system will reset its value back to factory default.
- Step 2.** Press **Yes** to continue the Reset procedure.
- Step 3.** Wait for 1 min and do NOT power off during this time.
- Step 4.** Once reset is complete, it will automatically reboot the main unit.

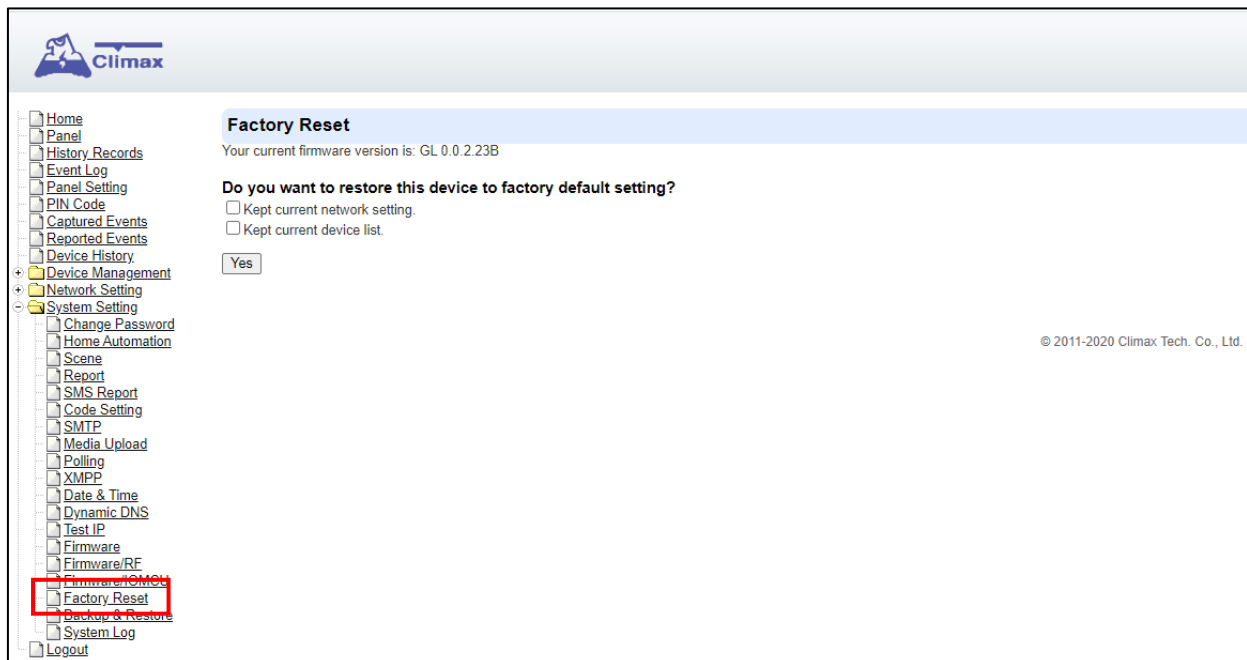

### 8.16.2 Local Reset


- Step 1.** Slide battery switch to OFF.
- Step 2.** Press and hold the learn button.
- Step 3.** Keep holding the reset button until you hear continuous beeps. The 3 LEDs will flash 3 times.
- Step 4.** Release the button and wait for the Control Panel to reboot.

## 8.17. Backup & Restore

You can back up all programmed parameters and save these programmed values into a file. Besides, you also can restore pre-programmed settings.

### 8.17.1 Backup Data

Click **Download**, and you can back up all programmed data and save these programmed values into a file.

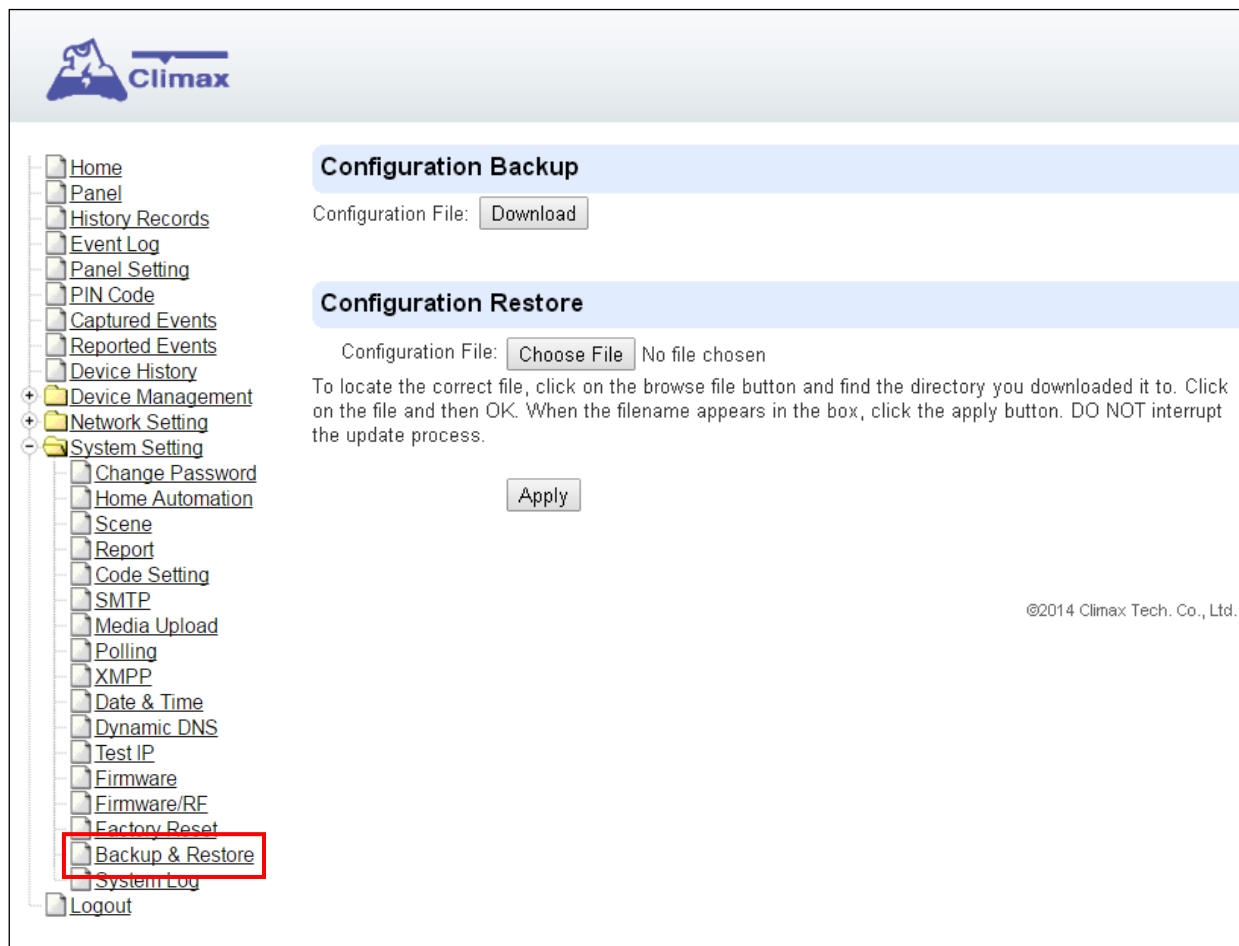

### 8.17.2 Restore Settings

**Step 1.** Click **Choose File**, select a saved file.

**Step 2.** Click **Apply** to apply the pre-programmed values to the main unit.




## 9. Event & History

This section introduces event history of the system.

### 9.1. Captured Events

This page stores all captured pictures and videos by PIR Camera and PIR Video Camera. When a PIR Camera is triggered, it will take 3 pictures in quick succession, when a PIR Video Camera is triggered, it will take a 10-second video clip. You can also request the PIR Camera to take a picture and PIR Video Camera to take a 10-second video clip manually.

Captured events will be displayed in this page with their information for you to view. Simply click on the picture or video to view them. You can also click **Delete** to delete the event.

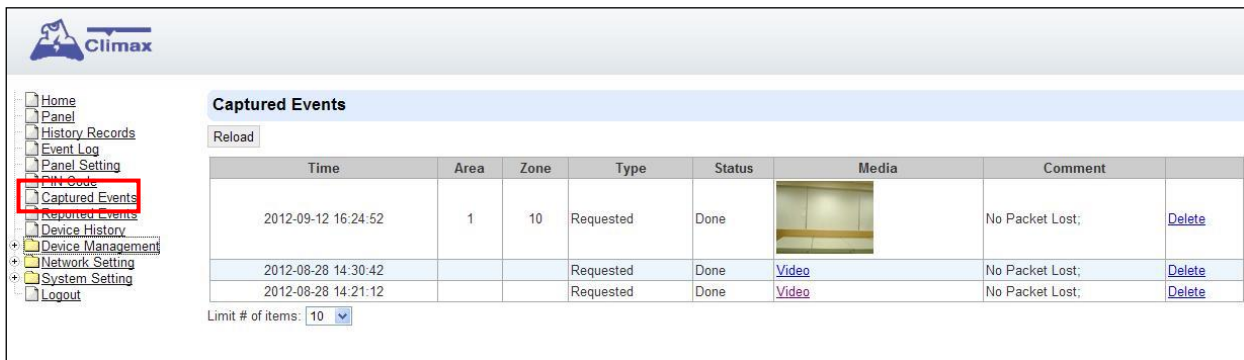


**Climax**

Home  
Panel  
History Records  
Event Log  
Panel Setting  
PIN Code  
**Captured Events**  
Reported Events  
Device History  
Network Setting  
System Setting  
Logout

**Captured Events**

Reload


Time	Area	Zone	Type	Status	Media	Comment	
2012-09-12 16:24:52	1	10	Requested	Done		No Packet Lost;	<a href="#">Delete</a>
2012-08-28 14:30:42			Requested	Done	<a href="#">Video</a>	No Packet Lost;	<a href="#">Delete</a>
2012-08-28 14:21:12			Requested	Done	<a href="#">Video</a>	No Packet Lost;	<a href="#">Delete</a>

Limit # of items: 10

- **Reload** : Click to refresh the page content
- **Limit # of Items**: Click the drop down menu on the page to select the numbers of captured events you want to display.

## 9.2. Reported Events

This page stores all triggered events by the control panel by recording the events' CID event code and report status.

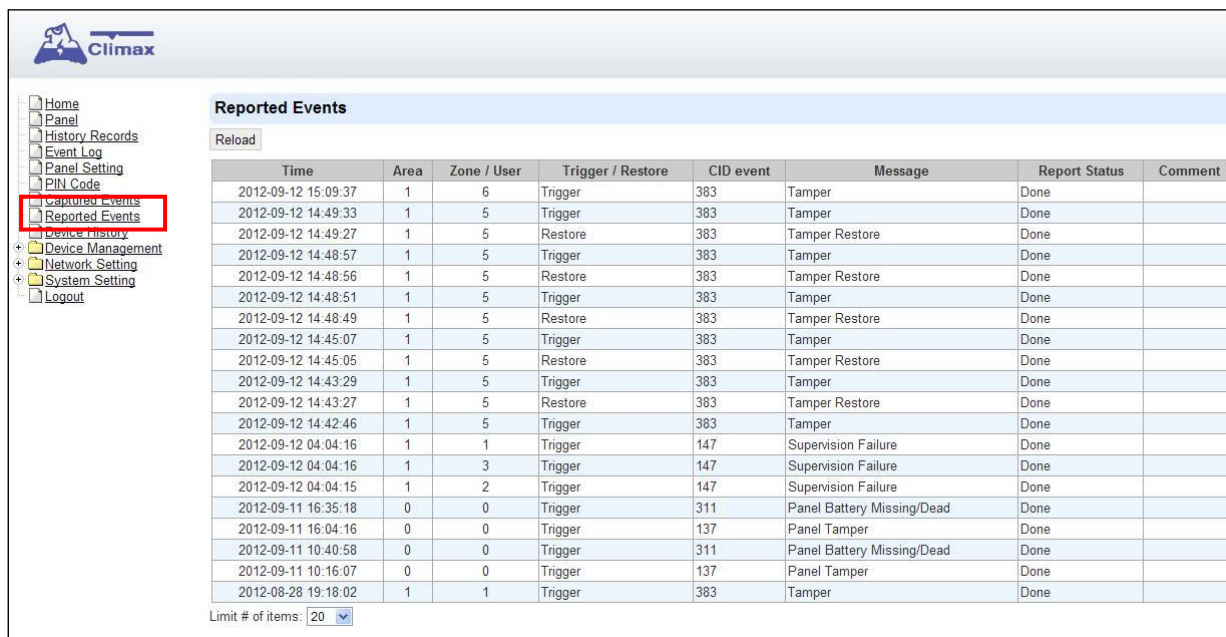

**Reported Events**

Reload

Time	Area	Zone / User	Trigger / Restore	CID event	Message	Report Status	Comment
2012-09-12 15:09:37	1	6	Trigger	383	Tamper	Done	
2012-09-12 14:49:33	1	5	Trigger	383	Tamper	Done	
2012-09-12 14:49:27	1	5	Restore	383	Tamper Restore	Done	
2012-09-12 14:48:57	1	5	Trigger	383	Tamper	Done	
2012-09-12 14:48:56	1	5	Restore	383	Tamper Restore	Done	
2012-09-12 14:48:51	1	5	Trigger	383	Tamper	Done	
2012-09-12 14:48:49	1	5	Restore	383	Tamper Restore	Done	
2012-09-12 14:45:07	1	5	Trigger	383	Tamper	Done	
2012-09-12 14:45:05	1	5	Restore	383	Tamper Restore	Done	
2012-09-12 14:43:29	1	5	Trigger	383	Tamper	Done	
2012-09-12 14:43:27	1	5	Restore	383	Tamper Restore	Done	
2012-09-12 14:42:46	1	5	Trigger	383	Tamper	Done	
2012-09-12 04:04:16	1	1	Trigger	147	Supervision Failure	Done	
2012-09-12 04:04:16	1	3	Trigger	147	Supervision Failure	Done	
2012-09-12 04:04:15	1	2	Trigger	147	Supervision Failure	Done	
2012-09-11 16:35:18	0	0	Trigger	311	Panel Battery Missing/Dead	Done	
2012-09-11 16:04:16	0	0	Trigger	137	Panel Tamper	Done	
2012-09-11 10:40:58	0	0	Trigger	311	Panel Battery Missing/Dead	Done	
2012-09-11 10:16:07	0	0	Trigger	137	Panel Tamper	Done	
2012-08-28 19:18:02	1	1	Trigger	383	Tamper	Done	

Limit # of items: 20

- **Reload** : Click to refresh the page content
- **Limit # of Items**: Click the drop down menu on the page to select the numbers of captured events you want to display.



## 9.3. Event Log

The Event Log page records specific actions performed by the Control Panel and accessory devices.



Home  
Panel  
History Records  
**Event Log**  
Panel Setting  
PIN Code  
Captured Events  
Reported Events  
Device History  
+ Device Management  
+ Network Setting  
+ System Setting  
Logout

Reload

Time	Area	Mode	Action	User	Source	Device Type	Message
2015/01/12 05:26:09			Switch To Standard Mode		Panel		Web
2015/01/12 05:25:35	1		Device Added		Zone4	IP Camera	Web
2015/01/12 05:25:04			Switch To Learn Mode		Panel		Web
2015/01/12 05:25:03			Switch To Standard Mode		Panel		Web
2015/01/12 05:23:49			Switch To Learn Mode		Panel		Web
2015/01/12 04:09:49			Switch To Standard Mode		Panel		Web
2015/01/12 04:08:20			System Fault		Panel		Area1Zone1 Tamper; Area1Zone3 Tamper
2015/01/12 04:08:20	1	Disarm	Device Tamper		Zone3	IR Camera	Trigger
2015/01/12 04:04:48			Switch To Learn Mode		Panel		Web
2015/01/12 04:04:45			Switch To Standard Mode		Panel		Web
2015/01/12 04:03:31	1		Device Added		Zone3	IR Camera	Web
2015/01/12 04:02:32	1		Device Added		Zone2	Dimmer	Web
2015/01/12 04:01:38			Switch To Learn Mode		Panel		Web
2015/01/12 03:41:13			System Fault		Panel		Area1Zone1 Tamper
2015/01/12 03:41:12	1	Disarm	Ignored		Zone1	Door Contact	Tamper Ignored
2015/01/12 03:41:12	1	Disarm	Device Tamper		Zone1	Door Contact	Trigger
			System Fault		Panel		Restore
			System Fault		Panel		Network Cable Unplugged; ZigBee Not Ready
			Initialize		Panel		Ready
2015/01/12 03:16:07			System Fault		Panel		Area1Zone1 Tamper

Limit # of items: 20 ▼

- **Reload** : Click to refresh the page content
- **Limit # of Items**: Click the drop down menu on the page to select the numbers of captured events you want to display.

## 9.4. Device History

You can track your ZigBee accessory device status history under **Device History**. For Power Switch Meter or Temperature Sensor, the update history power consumption or temperature iring reading will be displayed under this page (the current info is also displayed under **Panel** and **PSS Control**).

**Device History**

Reload

Date Time	Area	Zone	Name	Information	Value
2015-01-12 05:42:29	1	2		Energy	2.5kWh
2015-01-12 05:42:29	1	2		Active Power	0.0W
2015-01-12 05:32:29	1	2		Energy	2.5kWh
2015-01-12 05:32:29	1	2		Active Power	0.0W
2015-01-12 05:22:29	1	2		Energy	2.5kWh
2015-01-12 05:22:29	1	2		Active Power	0.0W
2015-01-12 05:12:29	1	2		Energy	2.5kWh
2015-01-12 05:12:29	1	2		Active Power	0.0W
2015-01-12 05:02:29	1	2		Energy	2.5kWh
2015-01-12 05:02:29	1	2		Active Power	0.0W
2015-01-12 04:52:29	1	2		Energy	2.5kWh
2015-01-12 04:52:29	1	2		Active Power	0.0W
2015-01-12 04:42:29	1	2		Energy	2.5kWh
2015-01-12 04:42:29	1	2		Active Power	0.0W
2015-01-12 04:32:29	1	2		Energy	2.5kWh
2015-01-12 04:32:29	1	2		Active Power	0.0W
2015-01-12 04:22:29	1	2		Energy	2.5kWh
2015-01-12 04:22:29	1	2		Active Power	0.0W
2015-01-12 04:12:29	1	2		Energy	2.5kWh
2015-01-12 04:12:28	1	2		Active Power	0.0W

Limit # of items: 20

- **Reload** : Click to refresh the page content
- **Limit # of Items**: Click the drop down menu on the page to select the numbers of captured events you want to display.

## 10. Appendix

### 10.1. Fault Event Description

During operation, when the panel detects faulty events, the panel will log the event and make reports. When fault events exist in the system, the panel Fault LED will light up and the panel will emit a beep every 30 seconds.

- **Fault Event Table**

<b>Fault Event</b>	<b>Descriptions</b>
<b>Panel AC Failure</b>	The Control Panel's AC power is disconnected When AC failure is detected, the panel will turn off both Ethernet and mobile network functions when idle to conserve power. Ethernet and mobile network will be activated temporarily when an event is detected by the panel (i.e. alarm trigger) to send report, and will turn off again after finishing report. Accessing the panel via remote server XMPP connection is disabled during AC failure.
<b>Panel Low Battery</b>	The panel's backup battery is only used when AC failure is detected. When the backup battery voltage is low, the panel low battery event is generated
<b>Panel Tamper</b>	The tamper switch on back of the panel is not compressed against the back cover. This means the panel's cover is opened and not properly sealed.
<b>Battery Dead/Missing</b>	The panel cannot detect backup battery, this means the battery is either dysfunctional, or the battery switch is not slid to ON position.
<b>Interference/Jamming</b>	The panel detects radio frequency jamming, which will affect its ability to receive signal from RF devices (Does not include ZigBee/Shutter Control/Wi-fi signal)
<b>Device Low Battery</b>	The accessory device at indicated zone number is low on battery
<b>Device AC Failure</b>	The accessory device at indicated zone number does not have AC power connection.
<b>Device Tamper</b>	The tamper switch of the device at indicated zone number is open
<b>Device Supervision Failure</b>	The panel was unable to receive supervision signal sent from accessory device at indicated zone number for the duration of Supervision Timer programmed. (i.e. If Supervision Timer is set to 12 hours, the panel will generate supervision failure event after failing to receive supervision signal for 12 hours)

## 10.2. Control Panel Mode and Response Table

For Alarm Activation by Events and Control Panel Responses, please refer to the following table:

Attribute	System Mode / Status					
	Disarm	Full Arm	Home Arm	Under Exit Timer	Under Exit Timer (No Response)	Under Entry Timer
No Response	No Response	No Response	No Response	Instant Burglar Alarm	No Response	No Response
Start Entry Delay 1	Instant Burglar Alarm (Interior)	Start Entry 1 → Burglar Alarm (Perimeter)	Start Entry 1 → Burglar Alarm (Interior)	Instant Burglar Alarm	No Response	Delayed Burglar Alarm
Start Entry Delay 2	Instant Burglar Alarm (Interior)	Start Entry 2 → Burglar Alarm (Perimeter)	Start Entry 2 → Burglar Alarm (Interior)	Instant Burglar Alarm	No Response	Delayed Burglar Alarm
Chime	Door Chime	Door Chime	Door Chime	Instant Burglar Alarm	No Response	Door Chime
Burglar Follow	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	No Response	Delayed Burglar Alarm
Burglar Instant	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	No Response	Instant Burglar Alarm
Burglar Outdoor	Instant Burglar Outdoor Alarm	Instant Burglar Outdoor Alarm	Instant Burglar Outdoor Alarm	Instant Burglar Alarm	No Response	Instant Burglar Outdoor Alarm
Cross Zone	See 10.3. Appendix – Cross Zone Verification			Instant Burglar Alarm	No Response	Delayed Burglar Alarm
Set/Unset (Opening)	Full Arm	No Response	Full Arm	Full Arm	No Response	No Response
Set/Unset (Closing)	No Response	Disarm	Disarm	Disarm	Disarm	Disarm
24H – Burglar	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm	Instant Burglar Alarm
24H – Smoke	Instant Smoke	Instant Smoke	Instant Smoke	Instant Smoke	Instant Smoke	Instant Smoke Alarm

	Alarm	Alarm	Alarm	Alarm	Alarm	
24H – Medical	Instant Medical Alarm	Instant Medical Alarm	Instant Medical Alarm	Instant Medical Alarm	Instant Medical Alarm	Instant Medical Alarm
24H – Fire	Instant Fire Alarm	Instant Fire Alarm	Instant Fire Alarm	Instant Fire Alarm	Instant Fire Alarm	Instant Fire Alarm
24H – Water	Instant Water Alarm	Instant Water Alarm	Instant Water Alarm	Instant Water Alarm	Instant Water Alarm	Instant Water Alarm
24H – CO	Instant CO Alarm	Instant CO Alarm	Instant CO Alarm	Instant CO Alarm	Instant CO Alarm	Instant CO Alarm
24H – Gas	Instant Gas Alarm	Instant Gas Alarm	Instant Gas Alarm	Instant Gas Alarm	Instant Gas Alarm	Instant Gas Alarm
24H – Heat	Instant Heat Alarm	Instant Heat Alarm	Instant Heat Alarm	Instant Heat Alarm	Instant Heat Alarm	Instant Heat Alarm
24H – Silent Panic	Instant Silent Panic Alarm	Instant Silent Panic Alarm	Instant Silent Panic Alarm	Instant Silent Panic Alarm	Instant Silent Panic Alarm	Instant Silent Panic Alarm
24H – Panic	Instant Panic Alarm	Instant Panic Alarm	Instant Panic Alarm	Instant Panic Alarm	Instant Panic Alarm	Instant Panic Alarm
24H – Emergency	Instant Emergency Alarm	Instant Emergency Alarm	Instant Emergency Alarm	Instant Emergency Alarm	Instant Emergency Alarm	Instant Emergency Alarm
24H – Emergency (Quiet)	Instant Silent Emergency Alarm	Instant Silent Emergency Alarm	Instant Silent Emergency Alarm	Instant Silent Emergency Alarm	Instant Silent Emergency Alarm	Instant Silent Emergency Alarm
24H – Fire with Verification	See 10.4. Appendix – Fire Verification					
Trigger Scene	Trigger Scene Number	Trigger Scene Number	Trigger Scene Number	Trigger Scene Number	Trigger Scene Number	Trigger Scene Number

#### <NOTE>

- ☞ **“Delayed Burglar Alarm”** reponse means the Control Panel will wait for the Entry Time to expire. If the Entry Time expires without disarming the system, the Control Panel will activate a Burglar Alarm after Entry Time expiry.
- ☞ **“Silent Panic Alarm”, “Silent Emergency Alarm”** and **“Burglar Outdoor Alarm”** does not activate any audible alarm. The Control Panel will report the alarm event silently without any warning sound.

## 10.3. Cross Zone Verification

Cross Zone Verification is use to setup cross verification for intrusion sensors.

To use Cross Zone Verification, the following sensor and panel setting must be adjusted:

- 1 At least **1** intrusion sensor must be set to **Cross Zone** attribute.
- 2 The **Cross Zone Timer** option under Panel Setting webpage must be enabled.

### Cross Zone Verification Rule

- Cross Zone function does not activate under Exit and Entry Time.
- When a sensor set to Cross Zone attribute is triggered, the panel begins to sound alarm, counts down Cross Zone Timer and reports a Cross Zone First Trip event (CID 693).
  - If the Cross Zone Timer expires without any other sensor trigger, the panel reports Cross Zone Trouble event (CID 378) when the timer expires.
  - If the same sensor is triggered again during Cross Zone Timers, the Cross Zone Timer is reset and extended.
  - If another sensor is triggered during the timer:
    - ☞ The Panel report Burglar (CID 130) for both sensors.
    - ☞ If the newly triggered sensor is set to Cross Zone attribute, the Panel also report Burglar Verified (CID 139) for this sensor.
    - ☞ The Cross Zone Timer is reset and extended.
    - ☞ When the Cross Zone Timer expires, the panel reports Cross Zone Timeout (CID 694).

## 10.4. Fire Verification

Fire Verification is use to setup verification for Smoke Detector.

To use Fire Verification, the following sensor and panel setting must be adjusted:

- 1 At least **1** Smoke Detector must be set to **24 HR – Fire with Verification** attribute.
- 2 The **Fire Verification Timer** option under Panel Setting webpage must be enabled.

### Fire Verification Rule

- When a Smoke Detector set to Fire Verification attribute is triggered, the panel begins to sound alarm, counts down Fire Verification Timer and reports a Near Alarm event (CID 118).
  - Triggering any Smoke Detector with Fire Verification attribute (including the original Some Detector) during Fire Verification Timer will prompt panel to report Smoke Alarm event (CID 111), the timer will be reset and extended.
  - Triggering a regular Smoke Detector with Smoke attribute during the Fire Verification Timer will prompt panel to report Smoke Alarm event (CID 111), the timer will not be reset..
  - When the Fire Verification Timer expires, the panel reports Fire Verification Timeout event (CID 695).

## 10.5. Contact-ID Protocol & Format

Where	<b>ACCT MT QXYZ GG C<sub>1</sub>C<sub>2</sub>C<sub>3</sub></b>
ACCT	= 4 Digit Account number (0-9, B-F)
MT	= Message Type, 18H.
Q	= Event qualifier, which gives specific event information:
XYZ	= Event code (3 Hex digits 0-9, B-F)
GG	= Group, Partition number (00H), or Area Number - 00 = panel - 01= area 1.....xx= area xx
C <sub>1</sub> C <sub>2</sub> C <sub>3</sub>	= 1. For devices: zone
	<b>C<sub>1</sub>C<sub>2</sub>C<sub>3</sub> = Zone number</b>
	001, Zone 1
	002, Zone 2
	.....
	XXX Zone XXX
	2. For Panel: code
	<b>C<sub>1</sub>C<sub>2</sub>C<sub>3</sub> =</b>
	User PIN Code 1      001
	User PIN Code 2      002
	User PIN Code 3      003
	User PIN Code 4      004
	User PIN Code 5      005
	User PIN Code 6      006
	Temporary Code      997
	Duress Code          998
	000= Control Panel



## 10.6. Event Code

- **100 – Medical**
  - ◆ When a device set to Medical attribute is triggered.
- **101 – Personal emergency**
  - ◆ When a device set to Personal Emergency attribute is triggered.
- **110 – Fire**
  - ◆ When a device set to Fire attribute is triggered.
- **111 – Smoke**
  - ◆ When the Smoke Detector (SD) set to Smoke Alarm is triggered.
  - ◆ When the Smoke Detector (SD) set to Fire Verification verifies an alarm during Fire Verification Time.
- **118 – Near Alarm**
  - ◆ When the Smoke Detector (SD) set to Fire Verification is triggered.
- **120 – Panic**
  - ◆ When a device set to Panic attribute is pressed.
- **121 – Duress**
  - ◆ When the Duress Code is entered to disarm or arm the system.
- **122 – Silent Panic**
  - ◆ When a device set to Silent Panic is pressed.
- **130 – Burglar**
  - ◆ Whenever a device set as Burglar Instant is triggered.
  - ◆ Whenever a device set as Burglar Instant is triggered under **Disarm**, **Full Arm** or **Home Arm** mode.
- **131 – Burglar Perimeter**
  - ◆ When a device set as **Entry** is triggered in Full Arm mode.
  - ◆ When a device set as **Burglar Follow** is triggered during Full Arm Entry Time and the system is not disarmed before entry time expiry.
- **132 – Burglar Interior**
  - ◆ When a device set at **Entry** is triggered in Home Arm mode.
  - ◆ When a device set as **Burglar Follow** is triggered during Home Arm Entry Time and the system is not disarmed before entry time expiry.
- **136 – Burglar Outdoor**
  - ◆ Whenever a device set at **Burglar Outdoor** is triggered.
- **137 – Panel Tamper/ Panel Tamper Restore**
  - ◆ When the panel's tamper protection is triggered.
  - ◆ When the panel's tamper function is restored.
- **139 – Burglar Verified.**
  - ◆ When a sensor set to Cross Zone attribute verifies an alarm.
- **147 – Sensor Supervision Failure/ Sensor Supervision Restore**
  - ◆ When the panel fails to receive supervision signal from a device within preset supervision timer.

- ◆ When the panel receives signal again from sensor that previously failed supervision.
- **154 – Water leakage**
  - ◆ When the Water Sensor connected to Door Contact set at **Water (@W)** is triggered.
- **158 – High Temperature Alarm**
  - ◆ When high temperature alarm is triggered.
- **159 – Low Temperature Alarm**
  - ◆ When low temperature alarm is triggered.
- **162 – CO Alarm**
- **170 – High Power Consumption**
  - ◆ When high power consumption alarm is triggered.
- **171 – High Humidity Alarm**
  - ◆ When high humidity alarm is triggered.
- **172 – Low Humidity Alarm**
  - ◆ When low humidity alarm is triggered.
- **301 – AC Failure/ AC Power Restore**
  - ◆ When the AC power fails for more than 10 sec.
  - ◆ Restore from AC power failure.
- **302 – Low battery/ Battery Normal**
  - ◆ When the battery voltage of the Panel is low.
  - ◆ When the panel battery restores voltage.
- **311 – Battery Disconnection/ Battery Reconnected**
- **344 – Interference/ Interference problem solved**
- **358 – Network Cable Unplugged**
  - ◆ When the Ethernet cable is disconnected.
- **374 – Force Arm**
  - ◆ When the system is armed with existing fault events
- **693 – Cross Zone Trouble**
  - ◆ When Cross Zone Timer expires without alarm verification.
- **380 – Device AC Failure**
  - ◆ When an AC power device loses AC power connection.
- **383 – Sensor Tamper/ Sensor Tamper Restore**
  - ◆ When any sensor's tamper protection is triggered.
  - ◆ When the sensor's tamper function is restored.
- **384 – Sensor Low battery/ Sensor Battery Normal**
  - ◆ When a device detects low battery voltage.
  - ◆ When a device's low battery condition is restored.
- **400 – Arm/Disarm (by Remote Controller)**
  - ◆ When the system is armed or disarmed by using the Remote Controller.
- **401 – Remote Arm/Disarm**
  - ◆ When the system is armed or disarmed by SMS message or web access

- **407 – Disarm/Away Arm/Home Arm by Remote Keypad**
- **408 – Set/Unset Arm/Disarm**
  - ◆ When the DC set at Set\Unset is triggered.
- **456 - Partial Arm**
  - ◆ When partially arm the system from Disarm to Home arm
- **570 – Device out of order/ Door Contact Not Closed**
  - ◆ When arm fault type is set as Direct Arm, any device is out of order after the preset exit delay time is reached
  - ◆ When arm fault type is set as Direct Arm, Door Contact is not closed after the preset exit delay time is reached.
- **602 – Periodic test report**
  - ◆ When the control panel makes periodic Check-in reporting.
- **616 – Call Request**
  - ◆ When the service call is activated by VST-809.
- **693 – Cross Zone First Trip**
  - ◆ When a sensor set to Cross Zone is triggered to start Cross Zone Timers.
- **694 – Cross Zone Timeout**
  - ◆ When Cross Zone Timer expires after the alarm has been verified.
- **695 – Fire Verification Timeout**
  - ◆ When Fire Verification Timer expires.