


# NAVAIO Access series - Controller diagram

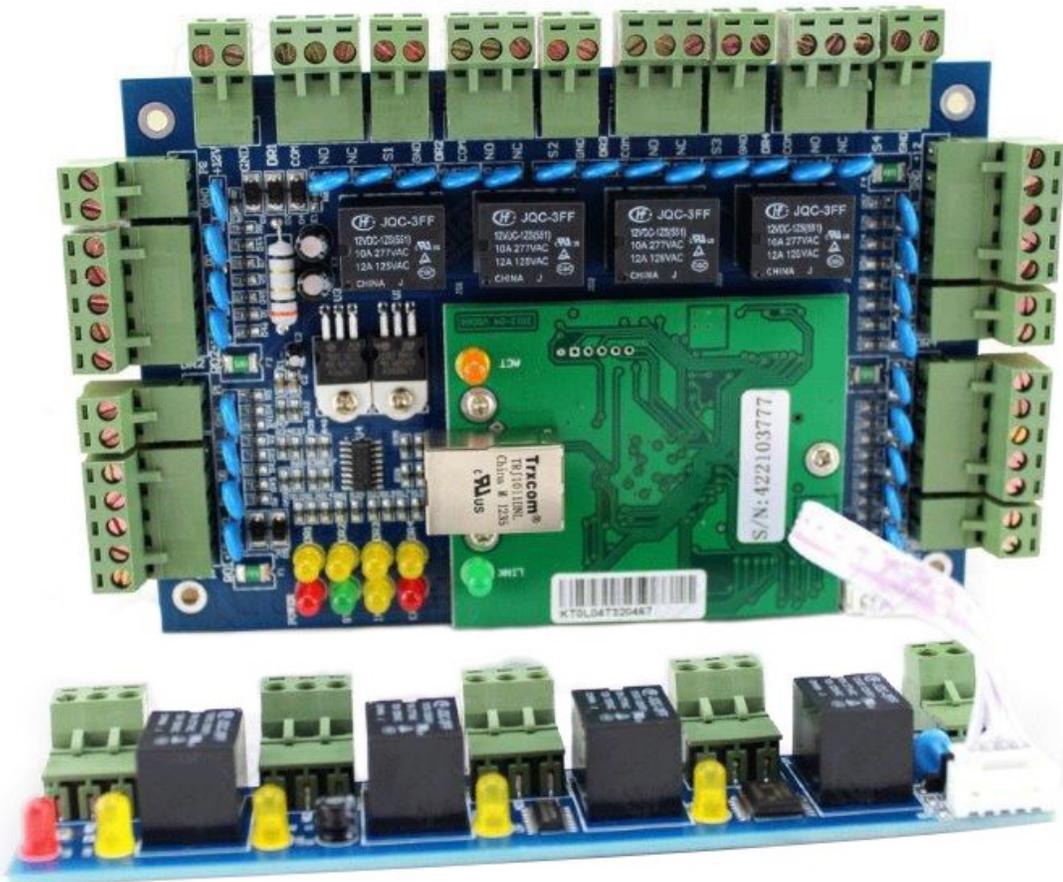

# SUMMARY

## First chapter – Diagram for access control board


1. **SUMMARY**.....Page 1
2. **NAV-ACCESS 1** Single door access controller wiring diagram.....Page 2
3. **NAV-ACCESS 2** Double door access controller wiring diagram.....Page 3
4. **NAV-ACCESS 4** Four door access controller wiring diagram.....Page 4


## Second chapter – Diagram for access control board connection


5. Access controller wiring diagram for TCP/IP communication.....Page 5


## APPENDIX

6. Fire alarm output and the expansion of joint board.....Page 6

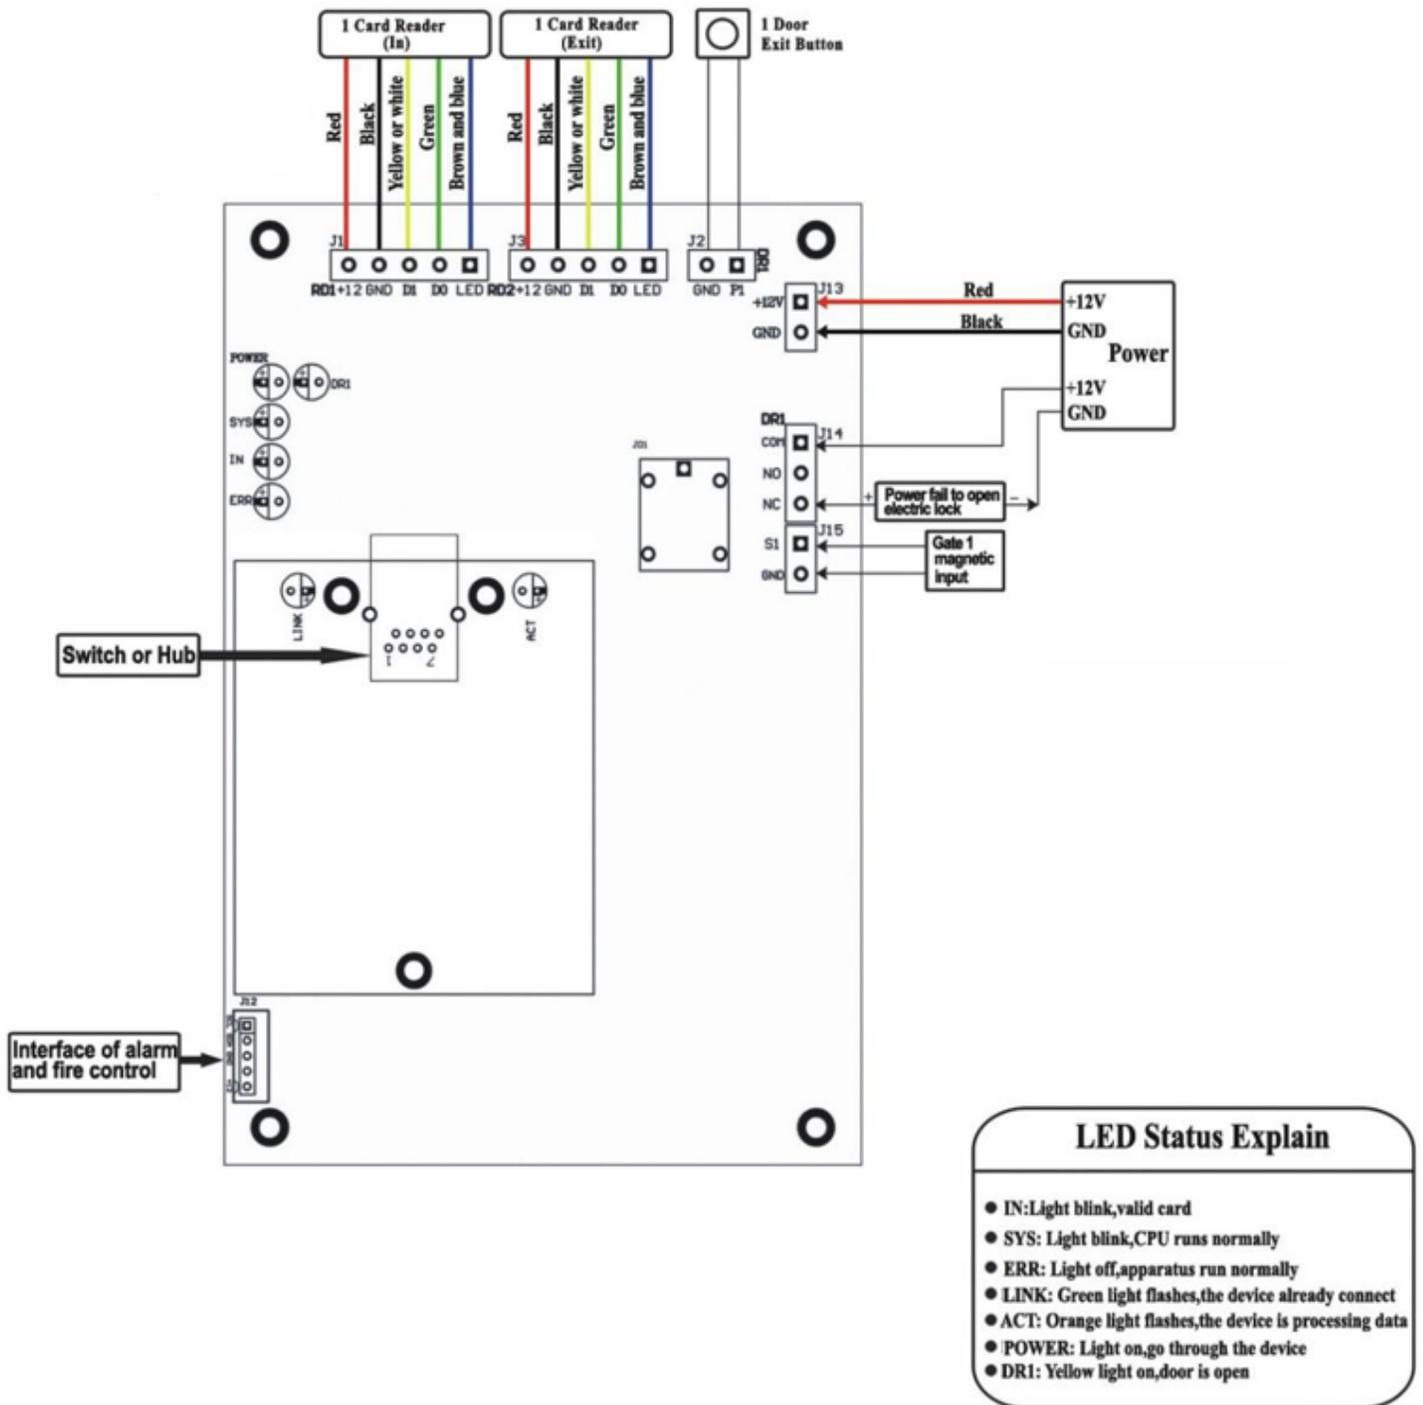

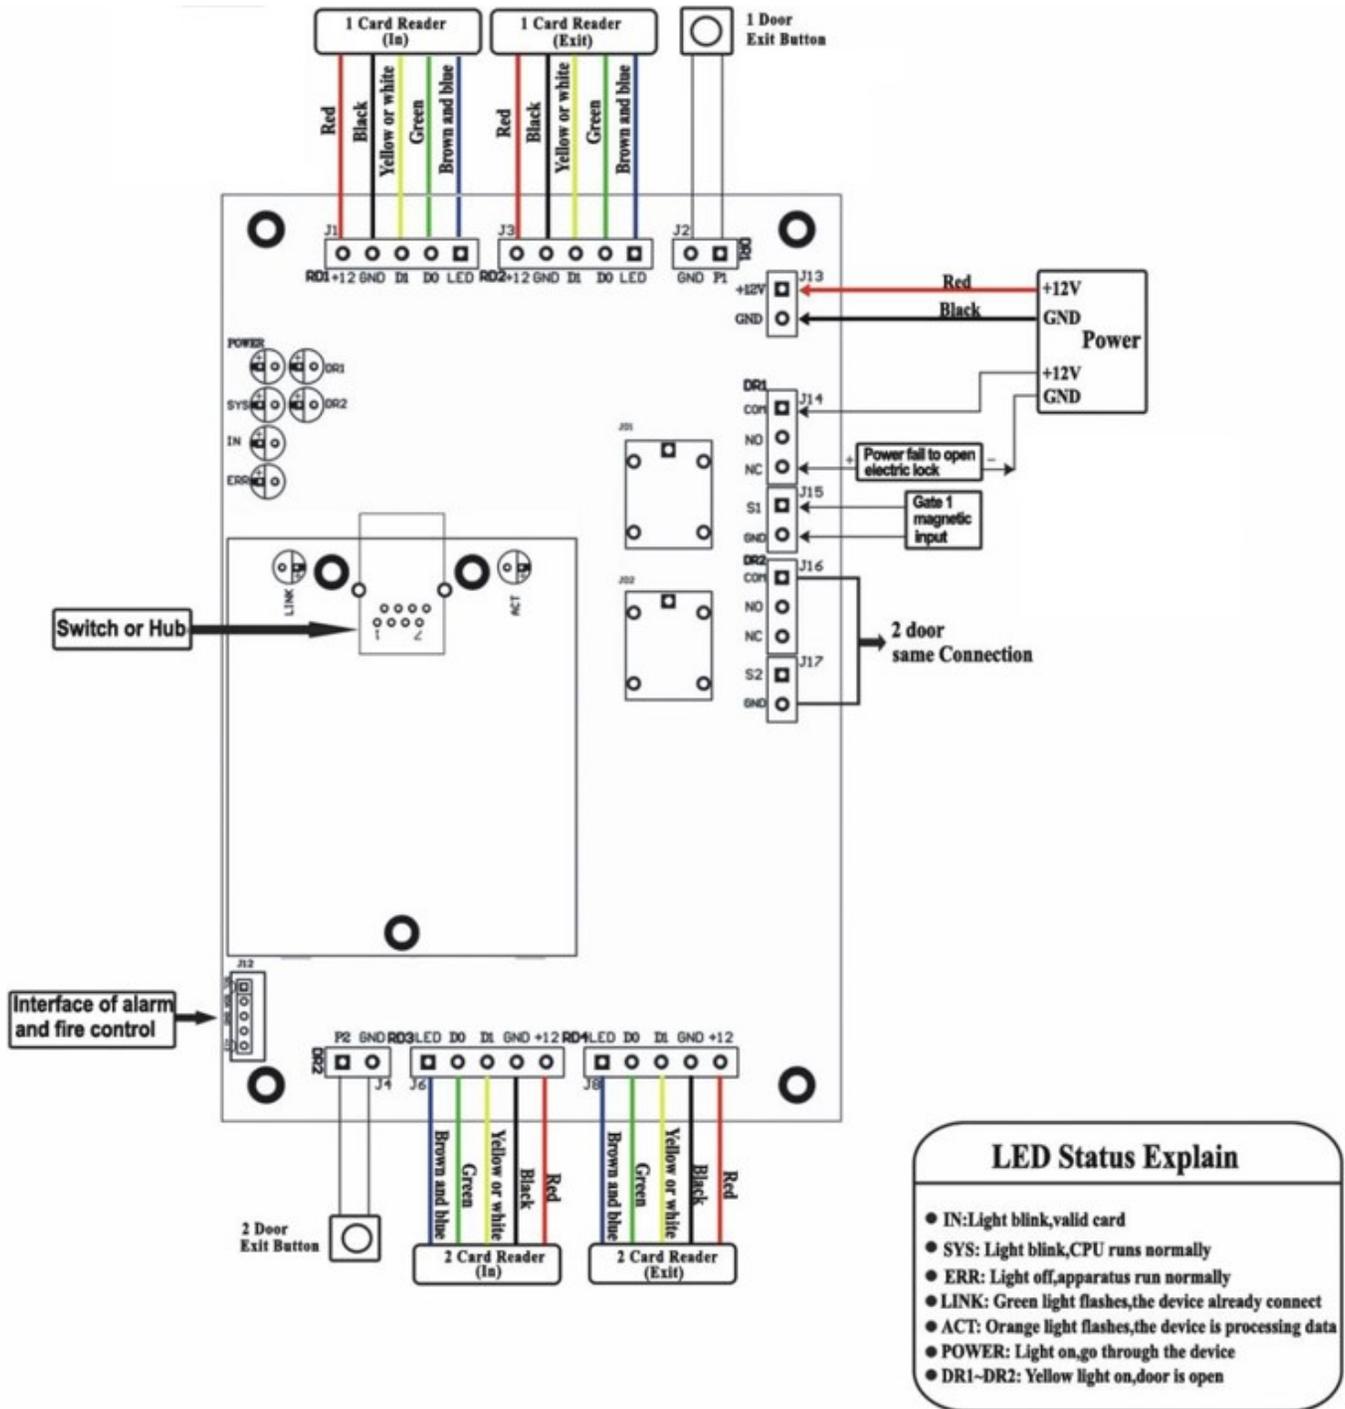

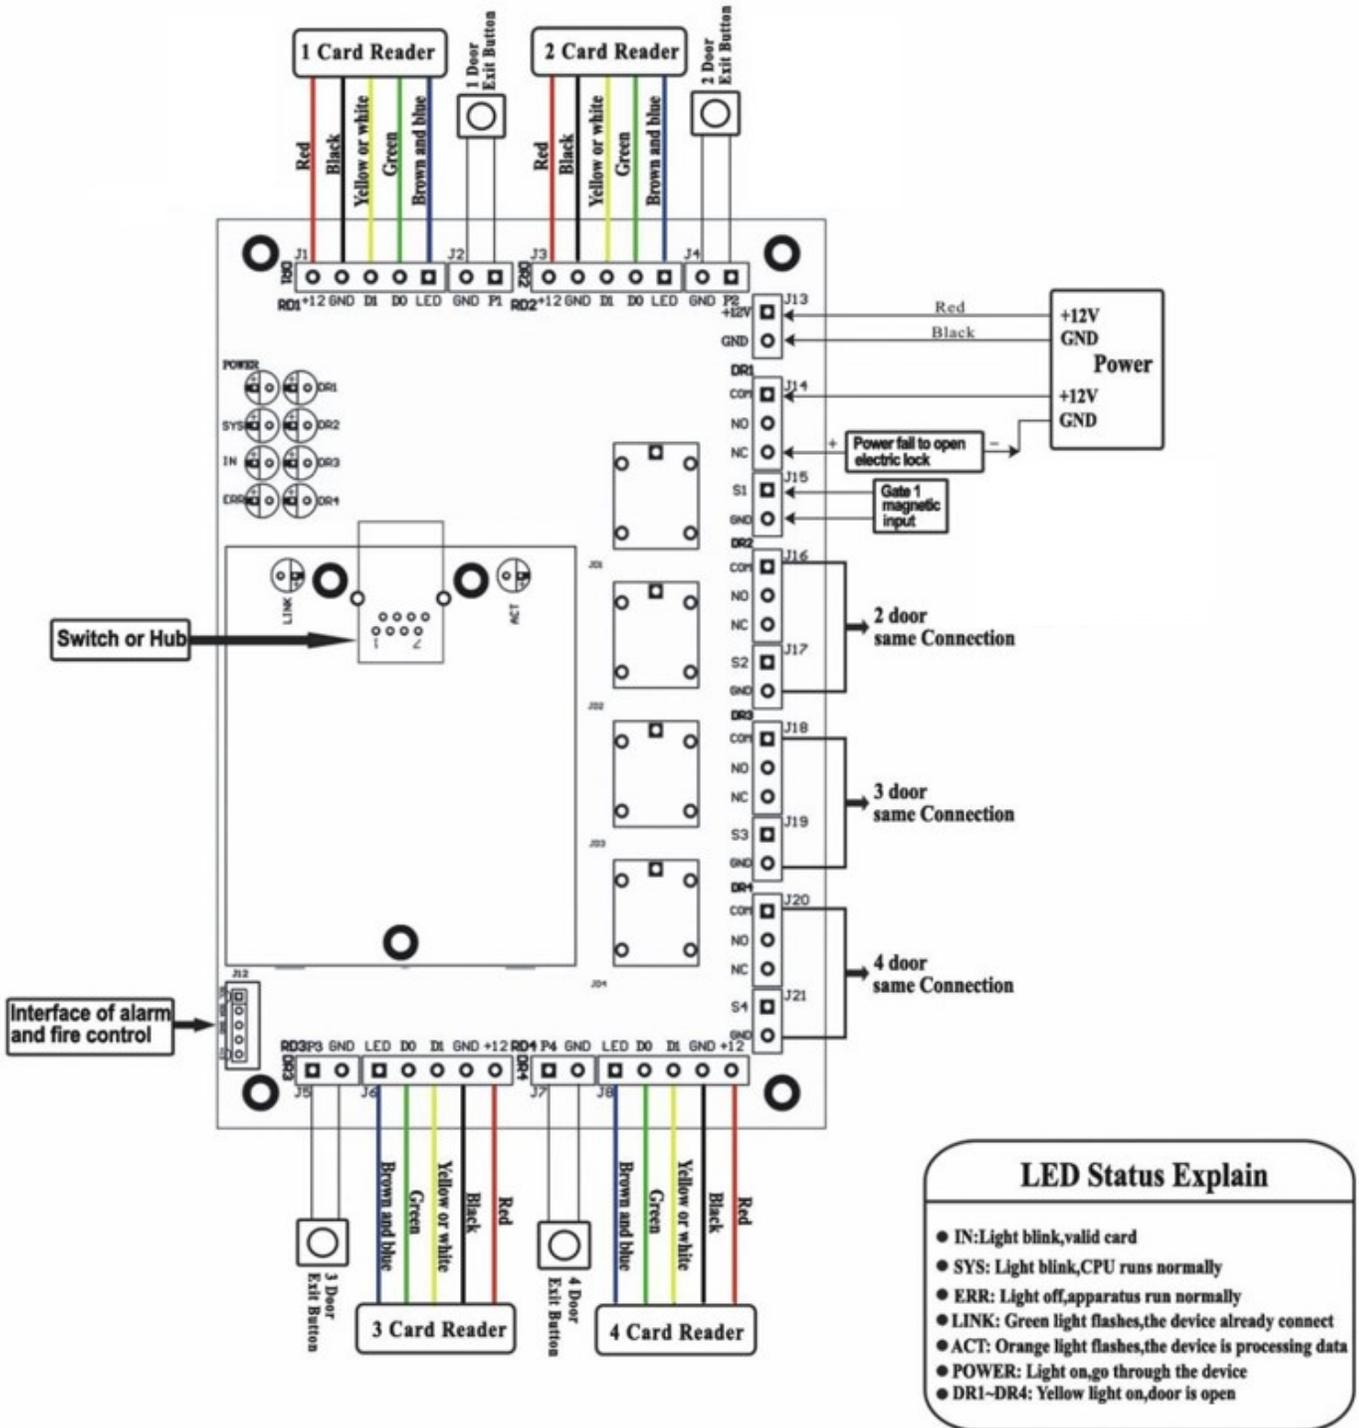

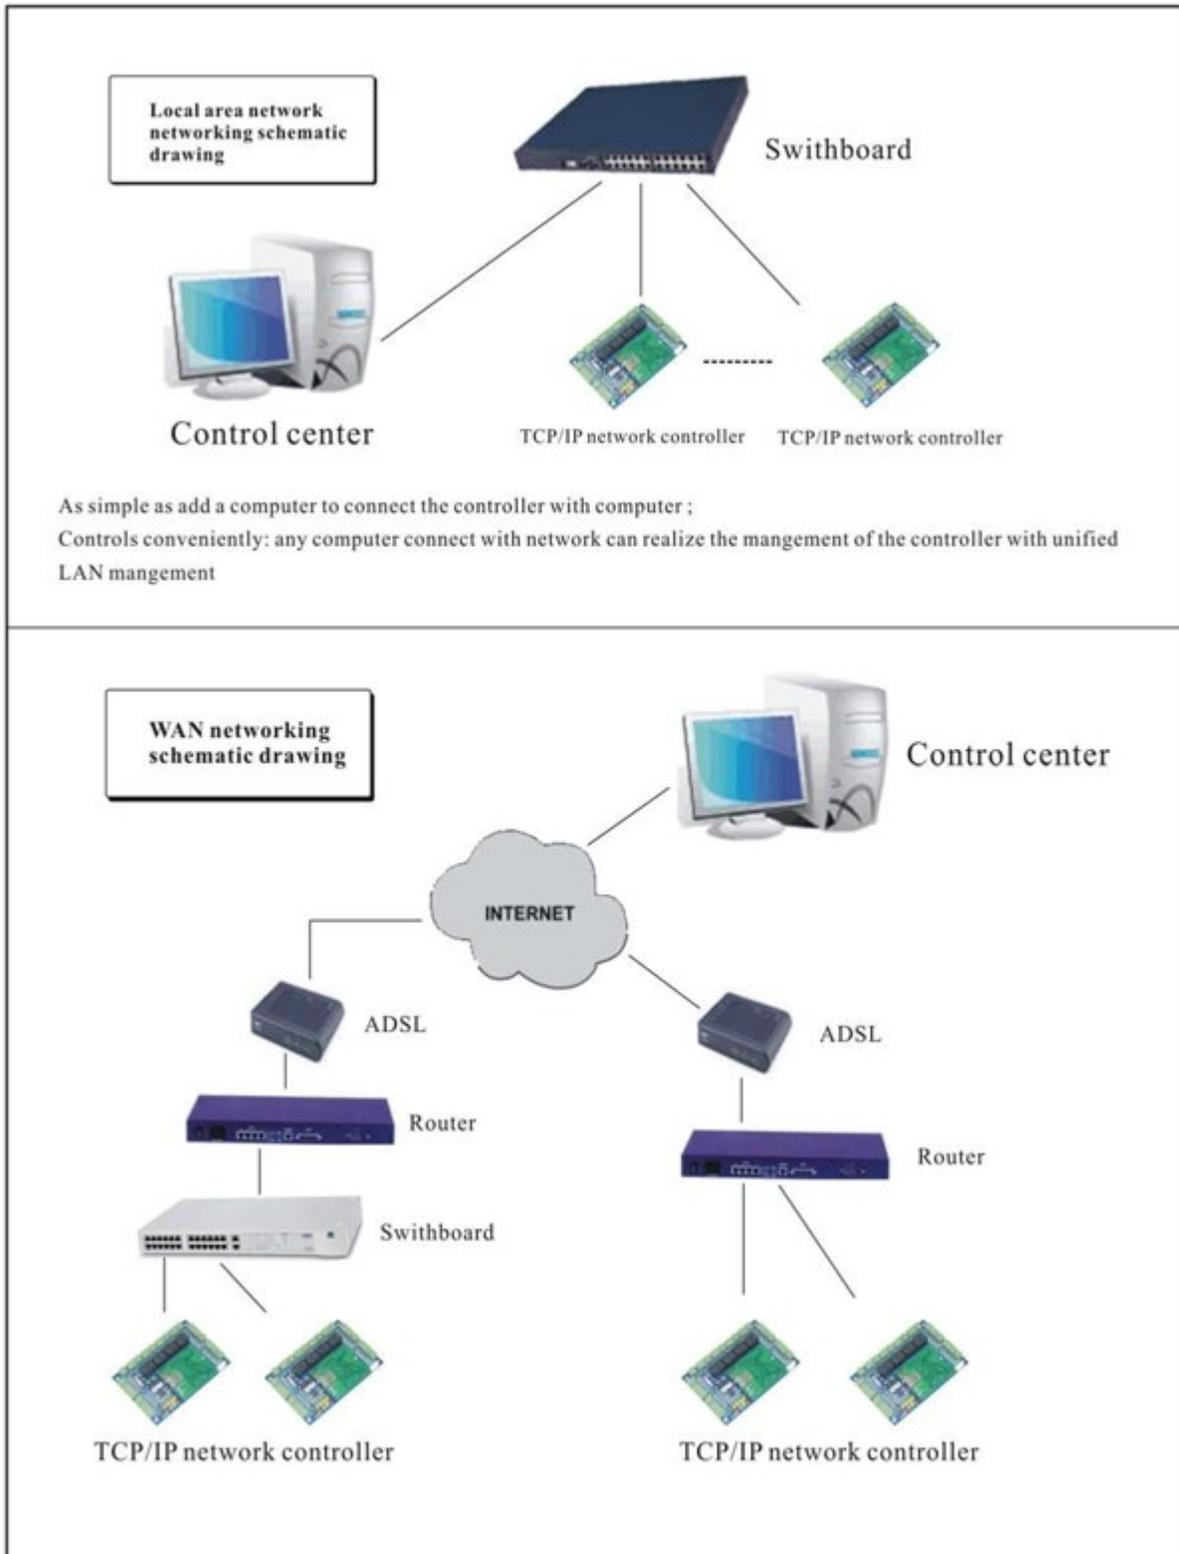

**Overview**

NAV-ACCESS EA - Fire alarm output and the expansion of joint board, it is one of the access controller add-on modules, with the software settings, mainly used to provide fire and alarm signal output of the joint. The module has a practical, simple interface, the design performance characteristics of stability. With its power and relay instructions, may direct communicate failures, is a good cost performance of the joint extension.

**The characteristics of the module**

- Four alarm outputs, free to the host controller to the definition of a door and the door to a number of features.
- Can connect the output signal fire; when the signal is received, the controller automatically open their doors to all and have a fire alarm record available for consultation.
- Support for the “illegal intrusion” and “the door is not closed for a long time” and “coercion to enter” and “linkage to open the door” and “invalid card” and “fire” alarm linkage output, and so on.
- The delay time for each output can be set between 0 and 6000 seconds.

**Diagram**

