

VPR/VPT500

Installation Instructions

English



VPR/VPT500 PSTN Module

The VPT/VPR500 is a PSTN module of the **VISION** wireless alarm system, which allows it to connect to PSTN network. The two models are identical, except that the VPT500 has a terminal block connection, and the VPR model has RJ11 connection.

A green LED supplies off-hook indication.

For the PSTN programming information, refer to the **VISION's** Installation guide (P/N: 4410517).

Technical specifications

- Dimensions: 70 X 50 X 12 mm
- Weight: ~22gr
- Operating temperature: -10 to +50 °C
- Humidity (max.): 93% R.H., non-condensing.

Content of the product package

- VPR500/VPT500
- This guide

How to install the VPR/VPT500



Disconnect from AC and battery power before installation.

Follow the next steps to install the module.

1. Open the **VISION's** enclosure: release the two screws at the bottom, and remove the lid.
2. Mount the module on its designated connector (marked in red in the image on the right); Make sure to connect the module's plastic standoff.
3. Connect the phone line cords between the Line IN terminals (VPT), or RJ11 connector (VPR), and the phone socket.
4. Connect other phone sets to the Line OUT terminals (VPT), or RJ11 connector (VPR).
5. Close the lid and fasten the screws.
6. Connect to power.
7. Connect a hardwired keypad and set the module in the control panel; see how in the **VISION's** Installation guide.
8. Test the module using the *Test and Diagnostics* menu (using a hardwired keypad).



LED indicator

A green LED on the module (marked with a red arrow in the image) indicates when the module is off-hook (communication in progress).

