

Overview

The Protec 6000PLUS/OPHT is a loop powered fire sensor which reports smoke and thermal levels in its installed location to the fire alarm control panel.

Technical Specification

Loop protocol	Protec Algo-tec™ 6000PLUS	
Loop isolator fitted	No	
Loop voltage range	18 to 27V Algo-tec™ protocol	
Loop average quiescent current (24V loop)	0.2 mA	
Loop average alarm current (24V loop)	2mA	
Analogue values	Smoke	Thermal
	Normal 40 to 60 bits Fault Low <35 bits Fault low High>90 bits	Normal 80 to 180 bits Fault Low <25 bits Fault High>250 bits
Indications	On-board red indicating LED	
Environmental operational limits	-10 to 50 degrees C (95% RH no condensation or icing)	

Installation

- | | |
|------------------------------------|---|
| 1. Base options: 6000PLUS/BASE | LPCB Approved as part of product approval |
| 6000PLUS/FFBASE | LPCB Approved as part of product approval |
| 28-075-01 (Plug and Play Fast Fix) | LPCB Approved as part of product approval |
| 28-075-02 (Plug and Play Surface) | LPCB Approved as part of product approval |

Note: See individual information sheets for base wiring details

- Install the detector in the base, turn firmly clockwise.

Commissioning

- Each 6000PLUS detector has a unique serial number which will be used as part of the commissioning of the fire alarm system. It is necessary to remove one of the 'peelable' bar code labels present on the product and place it in the commissioning booklet supplied with each Protec addressable control panel. The bar code sticker should be placed at the relevant loop and address position intended. It is important that serial numbers are not mixed otherwise the addressing of the 6000PLUS/OPHT will be incorrect when commissioned.
- Commission the device onto the system as detailed in the installation and commissioning manual for the fire alarm panel being used.

6000PLUS/OPHT Certification Details

EN/ Standards Compliance/ Approvals table	
CE	
0 8 3 2	
Protec Fire Detection plc, Nelson, Lancs 10 0832-CPD-1167	
EN 54 - 5 Point type heat detector Class A2 6000PLUS/OPHT	EN 54 - 7 Point type smoke detector 6000PLUS/OPHT
Technical Data included in this datasheet DEL2095 Issue 4	

High Sensitivity	Medium Sensitivity	Low Sensitivity
No approval	Approved to: EN 54 - 5: 2000 + A1: 2002, Class A2 EN 54 - 7: 2000 + A1: 2002 + A2: 2006 CEA 4021:2003-07	Approved to: EN 54 - 5: 2000 + A1: 2002, Class A2 EN 54 - 7: 2000 + A1: 2002 + A2: 2006 CEA 4021:2003-07

6000PLUS Locking Mechanism

The 6000PLUS detector range has a break off bridging piece shown in diagram one. Removing the small plastic bridging piece will enable the locking mechanism, and when the detector is fitted on a base, it will lock the detector. See diagram 1.

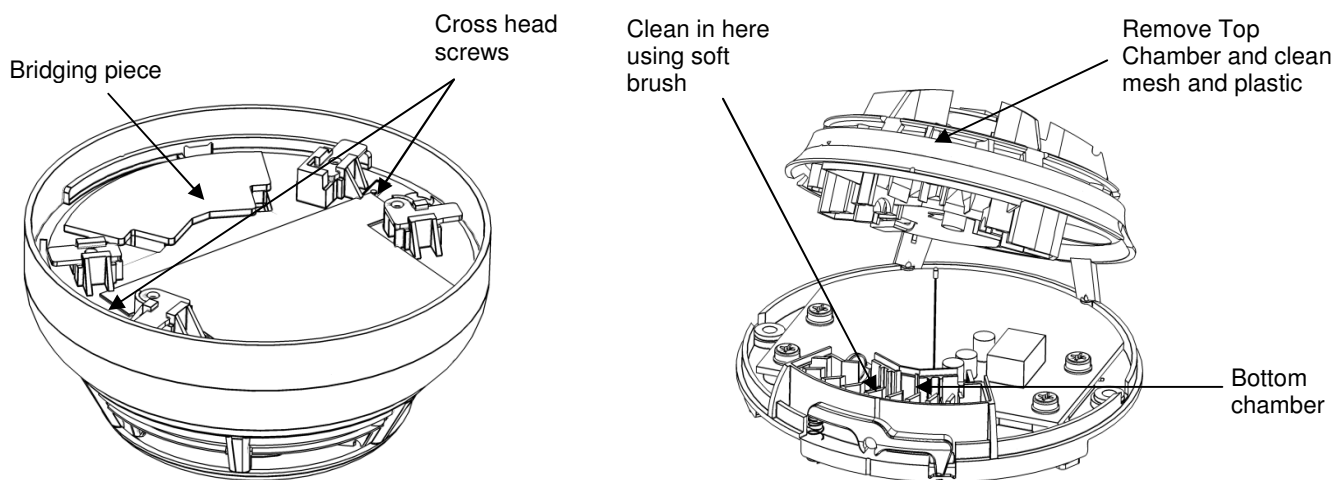


Diagram1 - Locking bridging piece and cross head screw position

Diagram 2 - Outer case removed exposing optical chamber

6000PLUS/OPHT Service and Maintenance details

- Remove Detector from its base, check panel for Zone fault.
- Remove two cross head screws shown in diagram 1.
- Remove detector outer case. Note the position of thermistor, and remove mouldings with care so as not to damage thermistor.
- Remove Deflector and top chamber moulding, keeping mesh in place on top chamber. Ensure light pipe does not get lost.
- Clean all mouldings and mesh with a soft brush, clean inside the bottom chamber with soft brush (see Diagram 2).
- Clean thermistor and deflector with soft brush
- Clean detector outer case with a cloth.
- To rebuild, first fit deflector to top chamber noting arrow position to centre of optical chamber. Ensure mesh is flat to top chamber moulding. Ensure Light pipe is in place.
- Ensure both lenses are in place on bottom chamber moulding.
- Fit top chamber/deflector assembly to bottom chamber. Note: Be aware, small bead thermistor should be carefully inserted through central hole.
- Once top chamber/deflector is in place ensure thermistor is vertical and straight. The thermistor bead should be vertical, see diagram 3.
- Fit detector outer case, using light pipe as orientation guide.
- Fit the two cross head fixing screws, tighten sufficiently to compress mouldings, but be aware over tightening may strip the thread on the outer case. Visually inspect to ensure thermistor is visible in correct position.
- Fit back onto base.
- Once detector logged back onto panel, wait for confirmation LED flash, then apply smoke to the detector in turn ensuring activation of control panel. Confirm A/D value of thermal channel is correct. Apply heat if setting on control panel allows activation.
- Remove old service label and fit new label to detector.

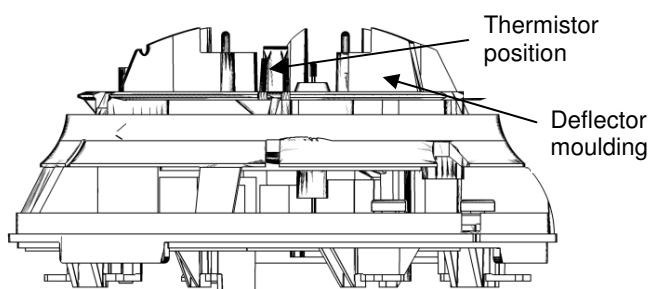


Diagram 3 - Re Assembly showing correct thermistor position