

SAMSUNG



Ultra High Resolution Camera SCB-2000 User Guide

Before installing and operating this product,
please read this manual thoroughly.

ENGLISH

Thank you for purchasing a **SAMSUNG CCD CAMERA**.

Before operating the camera, confirm the camera model and correct input power voltage. In order to that you can understand this manual thoroughly, we will explain the model pert numbers.

■ SCB-2000 SERIES

- NTSC MODEL
 - PAL MODEL
- | | |
|------------|------------|
| SCB-2000N | SCB-2000P |
| SCB-2000ND | SCB-2000PD |
| | SCB-2000PH |


■ MODEL DESCRIPTION

- SCB-2000XX



- SIGNAL SYSTEM
- N → NTSC MODEL
P → PAL MODEL

- POWER SOURCE
- AC 24V / DC 12V
D → DC 12V
H → AC 230V

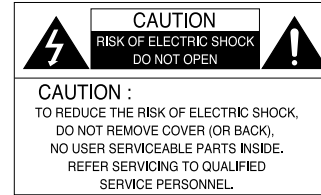

The lightning flash with an arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

INFORMATION-This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

WARNING : Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

WARNING : To prevent electric shock and risk of fire hazards:

- ◆ Do NOT use power sources other than that specified.
- ◆ Do NOT expose this appliance to rain or moisture.

This installation should be made by a qualified service person and should conform to all local codes.

- Features 5
- Warnings & Cautions 6
- Precautions 7
- Components and Accessories 8
- Overview 9
- Installation 10
 - LENS 10
 - Connecting to the Monitor 12
 - Using Coaxial Communications 13
 - Connecting to the Power 14
- Operating your Camera 15
 - Menu Configuration 15
 - Menu Setup 15
 - LENS 16
 - EXPOSURE 17
 - WHITE BALANCE 19
 - SSDR 20
 - BACKLIGHT 20
 - SSNR3 22
 - DAY/NIGHT 23
 - SPECIAL 24
 - EXIT 28
- Troubleshooting 29
- Specifications 30



High Resolution

By adopting a diagonal 6mm(1/3") 410,000 (NTSC) pixel, 470,000(PAL) pixel SONY CCD, the camera produces clear picture quality with a horizontal resolution of 600 TV lines for color.



Excellent Sensitivity

The built-in high sensitivity COLOR CCD produces a clear image even in 0.05Lux(COLOR), 0.0001Lux(SENS-UP) or lower illumination.



SSNR3 (Samsung Super Noise Reduction) Function

The high-performance W-V DSP chip effectively removes low-light gain noise and afterimage to provide clear images even in dark environments.



Electrical Day&Night

The camera automatically identifies when it is either day or night time and switched accordingly. During daylight the camera will switch to color to obtain excellent image clarity, while at night the camera will switch to monochrome to obtain improved picture definition.



Motion Detection

Since the camera detects motion without any additional external sensor, you can monitor activity more efficient.



SSDR (Samsung Super Dynamic Range)

For images with high contrast between bright and dark areas from difficult lighting conditions such as backlighting, this camera selectively illuminates darker areas while retaining the same light level for brighter areas to even out the overall brightness.



DIS (Digital Image Stabilizer)

The DIS function compensates for any camera movement, to produce more stable pictures.



Video/DC Drive Lens Support

You can select Video or DC Drive Lens from the menu.



Communication

Coaxial communication methods are supported.
- Protocol : Pelco Coaxitron



Miscellaneous Functions

HLC(High Light Compensation), SENS-UP, FLIP (H/V-REV), D-ZOOM, SHARPNESS, MOTION DETECTION and PRIVACY functions are provided.



OSD

The camera's OSD is complimented by 18 languages.

- NTSC : Korean, English, French, Spanish, Japanese, Portuguese, Taiwanese
- PAL : English, French, German, Spanish, Italian, Chinese, Russian, Czech, Polish, Romanian, Serbian, Swedish, Danish, Turkish, Portuguese



Samsung Techwin cares for the environment at all product manufacturing stages to preserve the environment, and is taking a number of steps to provide customers with more environment-friendly products. The Eco mark represents Samsung Techwin's will to create environment-friendly products, and indicates that the product satisfies the EU RoHS Directive.

Warnings & Cautions

This information is provided to ensure your safety and to prevent any losses, financial or otherwise. Please read it carefully and use the product accordingly.

- * For product inquiries, please contact the retail shop where you bought the camera. The use of equipment such as an aerial ladder while providing after-sales service shall be at your expense.
- * Separate the power plug during a thunder storm.
- * This product is only part of a surveillance system. Therefore, we can't compensate for material loss and personal injuries by robbery, fire, natural disaster or something like this type.

Warning/Attention/Special Mark Messages

	Ignoring this information may result in material loss and serious personal injuries including death.		Ignoring this information may result in material loss and a slight injuries.
	Indicates "Never Allowed."		Indicates "No Disassembling."



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Precautions

Do not install under extreme temperature conditions.



Use only under temperature conditions between -10°C and +50°C. Provide good ventilation when using in high temperature conditions.

Do not install in high humidity environment.



May lower image quality.

Do not install under unstable lighting conditions.



Severe lighting changes or flickering may hinder normal camera operation.

Avoid touching the camera lens.




The lens is the most important component of the camera. Be careful not to smear it with fingerprints.

Do not drop the camera or subject it to physical shock.



May cause a product malfunction.

Never keep the camera face to strong light directly.

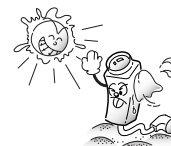

May damage the CCD.

Precautions

Do not expose the camera to rain or other types of liquids.



May cause a product malfunction. Wipe dry any liquids. Liquids may contain minerals that are corrosive to electronic components.

Do not expose the camera to radioactivity.




Radioactivity exposure may damage the CCD.

Notes

- Exposure to the spotlights or objects reflecting bright light, smearing or blooming may occur.
- Ensure that the power source complies with normal specifications before connecting it to the camera.


Components and Accessories



- 1 Ultra High Resolution Camera SCB-2000
- 2 Auto iris lens connection plug
- 3 C-Mount adaptor
- 4 Instruction manual


Overview

Front View

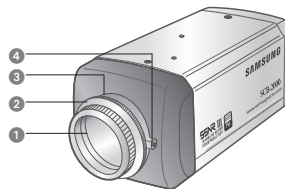



- 1 **CCD protection cap** : Please cover the CCD SENSOR when not using it.
- 2 **C-Mount lens adaptor** : Please install this adapter when using a C-Mount Lens.
- 3 **CS-Mount lens adaptor** : Please remove the C-MOUNT lens adaptor and then attach it.
- 4 **Back Focus clamp screw** : Please loosen the clamp screw with a screwdriver before adjusting the Back Focal length.
- 5 **Auto Iris Lens Connector**

Side View

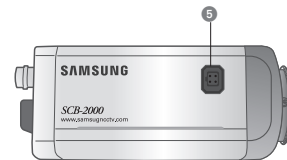


Bottom View

- 6 **Tripod Mounting Bracket Screw Hole**
Used to fix the camera on a bracket or tripod.
The screw sizes for this hole are as follows:

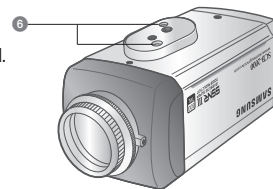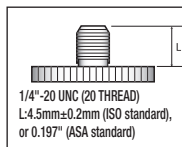


You can separate the Tripod Mounting Bracket and install it on the top or bottom of the camera. Make sure to use the Tripod Mounting Bracket when fixing the camera to a bracket or tripod. Otherwise the camera may not be secure, or the internal circuitry of the camera may be damaged.

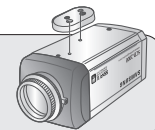

Overview

Rear View

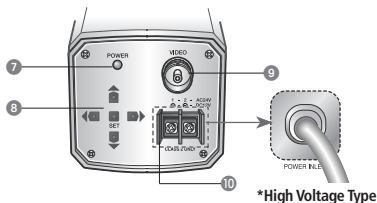

- 7 **Power lamp** : Lights up when the correct power is supplied to the camera.
- 8 **Function Setup Button**
 - SETUP button : Displays the menu on the screen and uses enter sub menu.
 - Up&Down button : Used to move the cursor up or down in the menu screen.
 - Left&Right button : Used to move the cursor left or right in the menu screen.
- 9 **Video output terminal** : Sends video signal and connects to the video input terminal of the monitor.
- 10 **Power input terminal** : Connects to the power appropriate to each model.

Installation

LENS

The lens is not supplied with this camera. Purchase a lens suitable for your environment. This camera accepts the auto iris lens and both C- and CS-mount lens.





Notes

- To use the functions of this camera effectively it is recommended that a DC type Auto Iris lens is used.
- Keep the lens surface clean, if it becomes contaminated with dirt or fingerprints the picture quality suffers.

Installation


When Using Auto Iris Lens

1. Strip the insulation of the auto iris lens cable 8mm from the end.
2. Strip the insulation of the core of the auto iris lens cable to expose a 2mm length.




3. Remove the cover of the auto iris lens connector plug and solder the lens cable to the connector pin of the plug.

LENS		
Pin No.	DC	VIDEO
No.1 Pin	Damping -	Red (power)
No.2 Pin	Damping +	NC
No.3 Pin	Drive +	White (video signal)
No.4 Pin	Drive -	Black (GND)

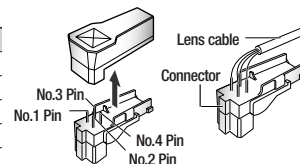


4. Please replace the auto iris lens connection plug cover and take off the CCD protection cap, and then attach the auto iris lens to the camera by screwing it in clockwise.
5. Please insert the connection plug that is connected to the auto iris lens cable into the auto lens connector, which is located on the side of the camera.

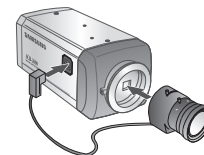

When using a C-Mount lens


Please take off the CCD protection cap and attach the C-Mount lens to the camera by screwing it in clockwise.



Installation


When using a CS-Mount lens

1. Please take off the CCD protection cap and C-mount adaptor.
2. Please attach the CS-Mount lens to the camera by screwing it in clockwise.

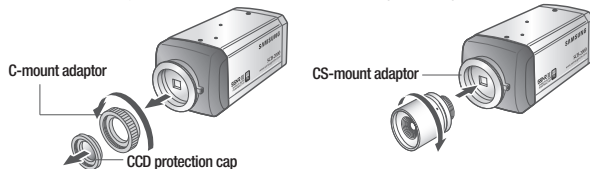


Notes

- Please use the specified lens connection parts as shown in the picture below. The use of the wrong sized parts may cause damage to the inside of the camera or result in poor fitting.
- Use of a lens which is too heavy affects the balance of the camera and may cause a malfunction. Please use a lens that weighs less than 450g.
- Please select Av mode if possible when adjusting the automatic light control (ALC) of an auto lens. Use of PK mode may cause hunting.

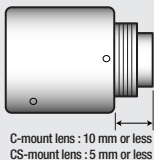

Connecting to the Monitor

Please connect the video output terminal located on the back of the camera to the monitor.

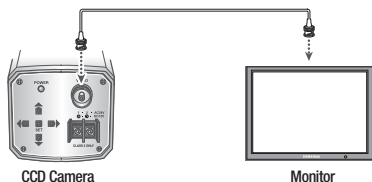


- The connection method varies depending on the type of monitor and accessories. Please refer to the user's manual for each instrument.
- Please turn off the power when connecting.

Using Coaxial Communications


- Coaxial Communications System
- OSD Control method

CAMERA	DVR	CONTROLLER
SET	MENU/ENTER	OSD KEY
UP	UP KEY	JOYSTICK UP
DOWN	DOWN KEY	JOYSTICK DOWN
LEFT	LEFT KEY	JOYSTICK LEFT
RIGHT	RIGHT KEY	JOYSTICK RIGHT

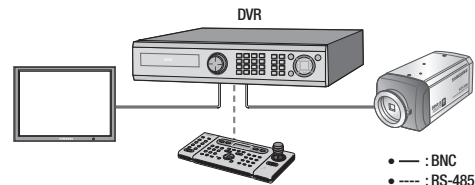

- Video Cable

The camera's video output port is connected to the monitor with a BNC coaxial cable, shown below : If the distance between the camera and the monitor exceeds the recommended maximum, please use an auxiliary video amp.



Distance	Recommended Cable Specification
300m	3C2V(RG-59U)
450m	5C2V(RG-6U)
600m	7C2V(RG-11U)

Notes

- It is recommended that pure copper coax cable is used and not copper coated steel, as this will cause issues with the communication over the coaxial cable.


Installation

Connecting to the Power

Each model has a different power input specification. Please check the model type and standard power requirement before connecting to power.


AC/DC Power Type

- Use AC24V, 300mA adaptor or DC12V, 500mA for SCB-2000N/P

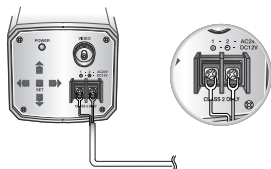

DC Power Type

- Use DC12V, 500mA for SCB-2000ND/PH

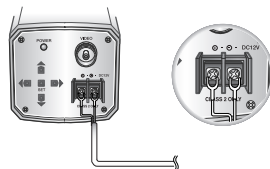

High Voltage Type (AC230V, 50Hz)

- Use AC230V, 50Hz power source for SCB-2000PH.



When the resistance value of copper wire is at [20°C(68°F)]

Copper wire size (AWG)	#24(0.22mm ²)	#22(0.33mm ²)	#20(0.52mm ²)	#18(0.83mm ²)
Resistance (Ω / m)	0.078	0.050	0.030	0.018
Voltage Drop (V/m)	0.028	0.018	0.011	0.006

- As shown in the table above, voltage decreases as the wire gets longer. Therefore use of an excessively long adaptor output line for connection to the camera may affect the performance of the camera.

* Standard voltage for camera operation : DC 12V±10%, AC 24V±10%, AC 230V ±10% (SCB-2000PH)

* There may be some deviation in voltage drop depending on the type of wire and the manufacturer.


Operating Your Camera

Menu Configuration

MAIN MENU			
LENS	● DC	● VIDEO	● MANUAL
EXPOSURE	● BRIGHTNESS	● SHUTTER	● AGC
	● SENS-UP	● RETURN	
WHITE BALANCE	● ATW	● OUTDOOR	● INDOOR
	● MANUAL	● AWC—SET	
SSDR	● OFF	● ON	
BACKLIGHT	● OFF	● BLC	● HLC
SSNR3	● OFF	● ON	
DAY/NIGHT	● COLOR	● B/W	● AUTO
	● IMAGE ADJ.	● MONITOR	● CAM TITLE
SPECIAL	● SYNC	● MOTION DET	● PRIVACY
	● DIS	● LANGUAGE	● RETURN
EXIT	● SAVE	● NOT SAVE	● RESET

Menu Setup


You can set up functions using the 5 buttons on the rear of the camera.

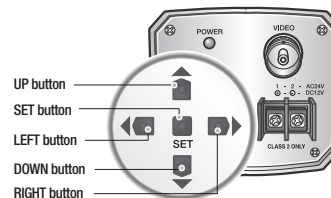

1. Press the SET button.

- Main setup menu is displayed on the monitor screen.

Operating Your Camera

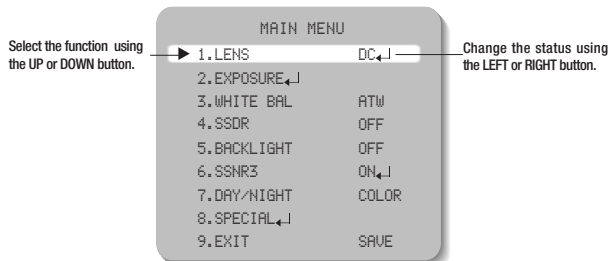

2. Select a desired function using the Up and Down buttons.
 - Place the cursor over a desired item.
3. Set up a selected item by using the Left and Right buttons.
4. To finish the setting, select 'EXIT' and press the SET button.


Notes

- An item with the ↵ icon also has sub menus. To select a sub menu, select an item with the icon and press the SET button.
- An item with the --- icon is unavailable due to function settings.

LENS

Using this function, you can control the screen brightness.

1. When the SETUP menu screen is displayed, select 'LENS' by using the Up and Down buttons so that the arrow indicates 'LENS'.
2. Select the connected lens type by using the Left and Right buttons.



☞ DC/Video : Select Auto Iris Lens

You can adjust the minimum shutter and maximum value of ESC shutter mode when DC Lens mode is selected.

☞ Manual : Select Manual Lens


3. Each Lens mode has sub menu items as listed below.
 - Brightness (DC, Manual) : Adjusts the video brightness.

- Level (VIDEO) : Adjusts the level of video iris signals; the higher the level is, the brighter the video looks.
- FOCUS ADJ. (DC, VIDEO) : To adjust the DC and VIDEO lens focus correctly, you must activate the Focus Settings mode under each lens menu. Activate the Focus Settings mode, adjust the lens focus, and then deactivate the settings mode. (The VIDEO lens requires an extra step: go to the sub menu of the Focus Settings mode and change the shutter speed to adjust the lens brightness.)
- IRIS SPEED (DC) : Adjusts the Iris control speed of the DC lens. If the control speed is too slow or fast, please use this menu to adjust the speed.


Notes

- When using VIDEO lens, adjust the lens VR explained below first and set the focus using 'FOCUS ADJ.' menu.
- If color rolling occurs when using a DC lens, set Shutter to A.FLK.
- Some lenses may not work properly, depending on the setting of the BRIGHTNESS LEVEL.
- When Using a Video-Type Auto Iris Lens
 - 1 Adjust the ALC adjustment terminal on the lens appropriately. In general, set it to AV (Average).
 - 2 It may not work properly depending on the installed lens. Set the Level VR of the lens to the optimal value.
 - 3 Set AGC to OFF and adjust the Lens VR to an appropriate brightness.
 - 4 Adjust the Lens VR, adjust the BRIGHTNESS, and then check if the screen brightness changes properly. Otherwise, adjust the Lens VR again.

EXPOSURE



1. When the SETUP menu screen is displayed, select 'EXPOSURE' by using the Up and Down buttons so that the arrow indicates 'EXPOSURE'.
2. Select a desired mode using the Up and Down buttons.

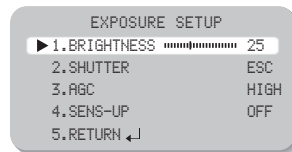

Operating Your Camera

- SHUTTER : You can select either auto or manual shutter.
 - : Shutter speed is fixed at 1/60sec(1/50sec).
 - A.FLK : Select this when you experience picture flicker, which can happen when there is a clash with the frequency of the installed lighting.
 - ESC : Select this to control the shutter speed automatically. If ESC is selected, the shutter speed is automatically controlled depending on the ambient illumination of the subject.
 - MANUAL : You can control shutter speed manually. (1/60 ~ 1/120,000)

Notes

- When you use a DC lens, set the shutter mode to A.FLK if color rolling occurs.
- When the SHUTTER is set to ESC after selecting the Internal Synchronization Type, the picture may become unstable if the camera faces a bright fluorescent light. Therefore, take care when choosing the installation position.
- When the SHUTTER is set to MANUAL or A.FLK mode, SENS-UP will be disabled.

- AGC(AUTO GAIN CONTROL) : The higher the gain level, the brighter the screen - but the higher the noise.
 - OFF : Deactivates the AGC function.
 - LOW : Allows automatic gain control from 5.3dB to 32dB.
 - HIGH : Allows automatic gain control from 5.3dB to 37dB.
- SENS-UP : When it is night or dark, the camera automatically detects the light level and maintains a clear picture if this mode is activated.
 - OFF : Deactivates the SENS-UP function.
 - AUTO : Activates the SENS-UP function.
- RETURN : Select this to save the changes in the EXPOSURE menu and return to the SETUP menu.


Notes

- If you press the SET button in 'AUTO' mode, You can adjust brightness by increasing or decreasing the shutter speed. (x2 ~ x512)
- Note that the higher the zoom level, the brighter the screen, but the more likely it is that an after-image will appear.
- Although Noise, Spots, and Whittish symptoms may occur in SENS-UP operation when the zoom level is increased, this is normal.

White Balance (White Bal.)

Use the White Balance function to adjust the screen color.

- When the SETUP menu screen is displayed, select 'White Bal.' by using the Up and Down buttons so that the arrow indicates 'White Bal.'.
- Select a desired mode using the Up and Down buttons.

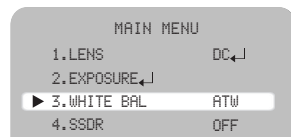

- Select one of the following 5 modes, as appropriate for your purpose.
 - ATW : Select this when the color temperature is between 1,700°K and 11,000°K.
 - OUTDOOR : Select this when the color temperature is between 1,700°K and 11,000°K. (sodium light inclusion)
 - INDOOR : Select this when the color temperature is between 4,500°K and 8,500°K.
 - MANUAL : Select this to fine-tune White Balance manually. Set White Balance first by using the ATW or AWC mode. After that switch to MANUAL mode, fine-tune the White Balance and then press the SET button.
 - AWC→SET : To find the optimal luminance level for the current environment, point the camera towards a sheet of white paper and press the Function Setup switch. If the environment changes, readjust it.


Notes

- White Balance may not work properly under the following conditions. In this case select the AWC mode.
 - When the color temperature of the environment surrounding the subject is out of the control range (e.g. clear sky or sunset).
 - When the ambient illumination of the subject is dim.
 - If the camera is directed towards a fluorescent light or is installed in a place where illumination changes dramatically, the White Balance operation may become unstable.


Operating Your Camera

SSDR (Samsung Super Dynamic Range)


SSDR illuminates darker areas of an image while retaining the same light level for brighter areas to even out the overall brightness of images with high contrast between bright and dark areas.

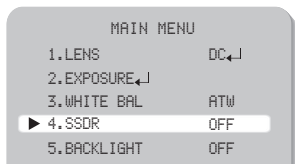

1. When the SETUP menu screen is displayed, select 'SSDR' by using the Up and Down buttons so that the arrow indicates 'SSDR'.
2. Use the Left/Right buttons to change the SSDR level in the sub menu according to the contrast between bright and dark areas.

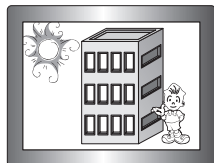

SSDR ON

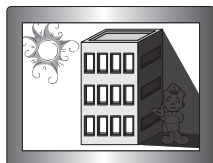


SSDR OFF

BACKLIGHT

Unlike conventional cameras, the SCB-2000 is designed so that it delivers a distinctive subject and background at the same time, even when the subject is in backlight, by adopting a proprietary W-V DSP chip.

1. When the SETUP menu screen is displayed, select 'BACKLIGHT' by using the Up and Down buttons so that the arrow indicates 'BACKLIGHT'.

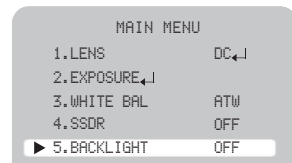

2. Select a desired mode using the Left and Right buttons depending on the camera purpose.

➤ BLC : Enables a user to select a desired area on a picture and view that area more clearly.

➤ HLC (High Light Compensation) :

If the scene contains extremely bright light areas such as; from car headlight, the light can mask out much of the on-screen detail.



- LEVEL : Adjust level of the HLC function.
- LIMIT : Enable to change the operating condition.
- MASK COLOR/TONE : Change the color / brightness of the masking area.
(Black, Red, Blue, Cyan, Magenta)
- TOP/BOTTOM/LEFT/RIGHT : Adjust the area to be enhanced.

➤ OFF : Not being used

3. Select a desired mode using the Left and Right buttons and press the SET button.

➤ Select 'BLC' to adjust the area to be enhanced then adjust the level.

➤ HLC : Enable the user to change the level, limit, mask color/tone and area.

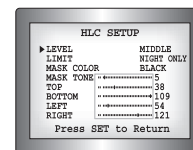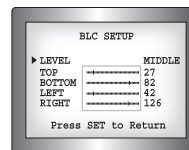

Operating Your Camera


Notes

- Because there can be a difference in the effectiveness of HLC according to the amount of light area in the screen, optimize the installation angle for the best HLC performance.
- When dark, the HLC is only activated when a bright light exceeding a specific size in NIGHT ONLY mode.
- The HLC is not activated in day light or when bright light is not present at night in NIGHT ONLY mode.

SSNR3

This function reduces the background noise in a low luminance environment.

1. When the SETUP menu screen is displayed, select 'SSNR' by using the Up and Down buttons so that the arrow indicates 'SSNR'.

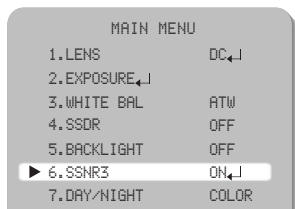

2. Select a desired mode using the Left and Right buttons.

- ➡ OFF : Deactivates SSNR. Noise is not reduced.
- ➡ ON : Activates SSNR so that noise is reduced.

3. Set the SSNR mode to 'ON' and press the SET button. Then you can adjust the noise reduction level.

Notes

- You cannot set the SSNR to 'ON' or 'OFF' when the AGC mode of the EXPOSURE menu is 'OFF'.
- When adjusting the noise reduction level in the SSNR mode, remember that the higher the level set, the more the noise level will be reduced, as will the brightness of the image.

DAY/NIGHT

You can display pictures in color or black and white.


1. When the SETUP menu screen is displayed, select 'DAY/NIGHT' by using the Up and Down buttons so that the arrow indicates 'DAY/NIGHT'.



2. Select a desired mode using the Left and Right buttons according to the picture display you want.

- ➡ COLOR : The picture is always displayed in color.
- ➡ B/W : The picture is always displayed in black and white.
You can turn on or off the burst signal on B/W mode.
- ➡ AUTO : The mode is switched to 'Color' in a normal environment, but switches to 'B/W' mode when ambient illumination is low. To set up the switching time for AUTO mode, press the SET button.
You can turn on or off the burst signal on B/W mode.

- DWELL TIME : You can select the duration time about changing the day/night mode.
→ 5s, 7s, 10s, 15s, 20s, 30s, 40, 60s

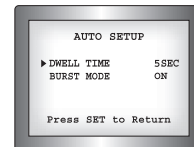


Notes

- When using a Video Auto Iris Lens, if you set the lens level to low, automatic switching between Color and Black & White may not occur.
- When AGC in the EXPOSURE menu is 'OFF', '---' mode operates as like selecting 'COLOR' mode and 'AUTO' mode can not be selected.


Operating Your Camera

SPECIAL

1. When the SETUP menu screen is displayed, select 'SPECIAL' by using the Up and Down buttons so that the arrow indicates 'SPECIAL'.

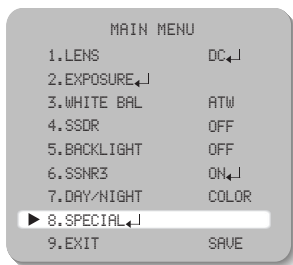


2. Select a desired mode using the Up and Down buttons.

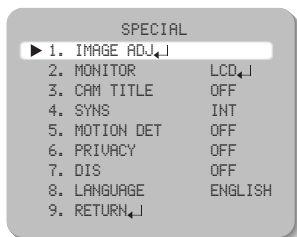

☞ IMAGE ADJ. :

1) When the SETUP menu screen is displayed, select 'IMAGE ADJ.' by using the Up and Down buttons so that the arrow indicates 'IMAGE ADJ.'.

2) Select a desired mode using the Up and Down buttons.

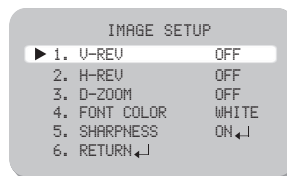

- V-REV : You can flip the picture vertically on the screen.
- H-REV : You can flip the picture horizontally on the screen.
- D-ZOOM : You can use a digital zoom of x1 ~ x16.
- FONT COLOR : You can change the OSD font color. (White, Yellow, Green, Red, Blue)
- SHARPNESS : As you increase this value, the picture outline becomes stronger and clearer. Adjust this value appropriately depending on the sharpness of the picture.
- RETURN : Select this to save the settings for the IMAGE ADJ. menu and to return to the SETUP menu.




Notes

- When the V-REV or H-REV mode is enabled, the text on the screen does not flip.
- If you increase the SHARPNESS level too high, the picture may become distorted or noise may appear.

☞ Monitor : Please change the settings value of video appropriate to your monitor.


- LCD : Please select this menu item when using an LCD monitor.
- CRT : Please select this menu item when using a CRT monitor.
- USER : Please use this menu item when using a monitor other than standard ones. You can change the gamma, PED level, and color gain in the sub menus.

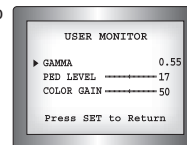

Operating Your Camera

➤ **CAM TITLE** : If you enter a title, the title will appear on the monitor.

- 1) If the SPECIAL menu screen is displayed, use the Up and Down buttons so that the arrow indicates 'CAM TITLE'.
- 2) Set it to 'ON' by using the Left and Right buttons.
- 3) Press the SET button.
- 4) Use the 4 direction buttons to move to a desired letter and select the letter by pressing the SET button. Repeat this to enter multiple letters. You can enter up to 15 letters.
- 5) Enter a title, move the cursor to 'POS' and press the SET button. The entered title appears on the screen. Select the position to display the title on the screen by using the 4 direction buttons and press the SET button. When the position is determined, select 'END' and press the SET button to return to the SPECIAL menu.

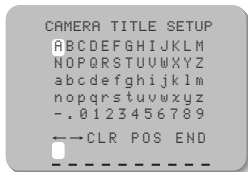

Notes

- When the CAM TITLE menu is 'OFF', no title will be displayed on the monitor screen even if you enter one.
- Only English is available in this mode.
- If you move the cursor to CLR and press the SET button, all the letters are deleted. To edit a letter, change the cursor to the bottom left arrow and press the SET button. Move the cursor over the letter to be edited, move the cursor to the letter to be inserted and then press the SET button.

➤ **SYNC** : In areas where the supply is at 60Hz, you can synchronize the output phase of multiple cameras using the power synchronization function (Line-Lock) without using a synchronization signal generator.

- INT : Internal Synchronization Type
- L/L : Power Synchronization Type, Line-lock

- Press the Function Setup switch.
- You can select a desired phase from 0 to 359 when select 'phase'.




Notes

- When using AC power at 60Hz frequency, you can use the L/L type synchronization.
- When the power is DC 12V, the SYNC menu is fixed to the 'INT' mode.

➤ **MOTION DET** :

This product has a feature that allows you to observe movement of objects in 8 different areas on the screen, and the words 'MOTION DETECTED' appear on the screen when movement is detected. you can monitor activity more efficient.

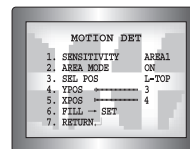

- 1) When the SPECIAL menu screen is displayed, press the Up and Down buttons so that the arrow indicates 'MOTION DET'.
- 2) Set up the mode using the 4 direction buttons.

- SENSITIVITY : You can select up to 8 MD areas. When SENSITIVITY number is high, motion detection sensitivity is increased to recognize even small movement.
- AREA MODE : Determines whether to use the MD area selected in SENSITIVITY.
- SEL POS : Determines which of the 4 vertices of each MD area is to be used.
- YPOS : Determines the coordinate of the vertical axis for SEL POS.
- XPOS : Determines the coordinate of the horizontal axis for SEL POS.
- FILL—SET : Fills in a selected MD area. The color of filling is sequentially selected as brown, orange, blue, cyan, green, yellow, magenta and red.
- RETURN : Select this to save the MOTION DET menu settings and return to the SPECIAL menu.

➤ **PRIVACY** : Mask an area you want to hide on the screen.

PRIVACY AREA SETUP

1. AREA AREA1
2. MODE OFF
3. MASK COLOR GREEN
4. MASK TONE 1
5. TOP 39
6. BOTTOM 79
7. LEFT 12
8. RIGHT 51
9. RETURN

- 1) When the SPECIAL menu screen is displayed, press the Up and Down buttons so that the arrow indicates 'PRIVACY'.
- 2) Set up the mode using the 4 direction buttons.
 - AREA SEL : You can select up to 12 PRIVACY areas.
 - MODE : Determines whether to use the area selected in the AREA SEL.
 - MASK COLOR : Determine area color. You can select Green, Red, Blue, Black, White, Gray.
 - MASK TONE : Adjust the brightness of MASK COLOR.
 - TOP/BOTTOM/LEFT/RIGHT : Adjust the size and position of the selected area.
 - RETURN : Select this to save the PRIVACY menu settings and return to the SPECIAL menu.

DIS (Digital Image Stabilizer) :

This function mitigates any picture movement due to external factors such as wind.



Notes

- As the DIS function uses the digital zoom the camera's resolution will decrease.
- DIS doesn't operate when background illumination is too low.
- DIS doesn't operate when object pattern is monotonic as like sky or white wall.

LANGUAGE : You can select the menu language according to your requirements.

RETURN : Select this to save the SPECIAL menu settings and return to the MAIN SETUP menu.

EXIT

Select a desired EXIT mode using the Left and Right buttons depending on the camera purpose.

- SAVE : Save the current settings and exit the MAIN SETUP menu.
- NOT SAVE : Do not save the current settings and exit the MAIN SETUP menu.
- RESET : Resets the camera settings to the factory defaults. Language and Monitor settings are not initialized.

If you have trouble operating your camera, refer to the following table. If the guidelines do not enable you to solve the problem, contact an authorized technician.

- **Nothing appears on the screen.**
 - ▶ Check that the power cord and line connection between the camera and monitor are fixed properly.
 - ▶ Check the type of lens.
 - ▶ Check that the lens type is VIDEO lens or DC lens.
- **The image on the screen is dim.**
 - ▶ Is lens stained with dirt? Clean your lens with soft, clean cloth.
 - ▶ Set the monitor to proper condition.
 - ▶ If the camera is exposed to too strong light, change the camera position.
- **The image on the screen is dark.**
 - ▶ Adjust the contrast feature of the monitor.
 - ▶ If you have an intermediate device, set the 75Ω / Hi-z properly.
- **The camera is not working properly, and the surface of the camera is hot.**
 - ▶ Check that you have properly connected the camera to an appropriate power source.
- **The SENS-UP function does not work.**
 - ▶ Check that AGC of EXPOSURE SETUP menu is 'OFF'.
 - ▶ Check that SHUTTER of EXPOSURE SETUP menu is 'A.FLK' or 'MANUAL'.
- **The Motion Detection function does not work.**
 - ▶ Check that MOTION DET of SPECIAL SETUP menu is 'OFF'.
- **Color is not correct.**
 - ▶ Check the setting of WHITE BAL SETUP menu .
- **The screen flickers continually.**
 - ▶ Check that direction of camera turns toward the Sun.
- **When coaxial communication is not available:**
 - ▶ Make sure that the camera and monitor are installed within the recommended distance.
 - ▶ Use the video amplifier equivalent to coaxitron if the recommended installation distance is exceeded.

Specifications

	SCB-2000ND	SCB-2000N	SCB-2000PD	SCB-2000P	SCB-2000PH
ELECTRICAL					
Input Voltage	DC 12V	AC 24V / DC 12V	DC 12V	AC 24V / DC 12V	AC 230V, 50Hz
Power Consumption	Max 2.5W	Max 3.5W	Max 2.5W	Max 3.5W	Max 4.0W
VIDEO					
Imaging Device	1/3 inch, Diagonal 6mm Super HAD CCD				
Total Pixels	811(H) x 508(V)		795(H) x 596(V)		
Effective Pixels	768(H) x 494(V)		752(H) x 582(V)		
Scanning System	2:1 Interlace				
Synchronization	Internal Only / Internal / LineLock		Internal Only	Internal / Line-Lock	
Frequency	H : 15.734KHz V:59.54Hz		H: 15.625KHz V: 50.00Hz		
Horizontal Resolution	600TVL				
Min. Illumination	0.05 Lux(50IRE, No SENS-UP) / 0.0001Lux (SENS-UP x512) @F1.2				
S/N (Y Signal)	52dB (Weight Off, AGC Off)				
Video Output	CVBS : 1.0Vp-p, 75Ω composite				
OPERATIONAL					
IRIS Adjustment	DC / VIDEO				
Electronic Shutter Speed	1/60 ~ 1/120K sec		1/50 ~ 1/120K sec		
On Screen Display	NTSC : 7 Languages, PAL : 15 Languages				
SSDR	On / Off (Level adjustable)				
Backlight Compensation	BLC / HLC / OFF				
Day & Night	COLOR / BW / AUTO (Electric)				
Gain Control	Low / High / Off				
White Balance	ATW / OUTDOOR / INDOOR / MANUAL / AWC (1,700°K ~ 11,000°K)				
SENS-UP (frame Integration)	Auto / Off (Selectable x2 ~ x512)				
Motion Detection	On / Off (8 Programmable zones)				
Privacy Masking	On / Off (12 Programmable zones)				
3D Noise Filter (SSNRll)	On / Off (Level adjustable)				
Digital Zoom	On / Off (x1 ~ x16)				
Digital Image Stabilization(DIS)	On / Off				
Camera Title	Off / On (Displayed 15 Characters)				
Sharpness	On / Off (Level adjustable)				
Flip / Mirror	On / Off				
Communication	Coaxial (Protocol : Pelco Coaxitron)				
ENVIRONMENTAL					
Operating Temp/Humid	-10°C ~ +50°C / 30% ~ 80% RH				
Storage Temp/Humid	-20°C ~ +60°C / 20% ~ 90% RH				
MECHANICAL					
Lens Mount	C / CS Mount				
Back Focus Adjustment	Manual				
Dimension	58(W) x 52(H) x 121(D)mm				
Weight	290g	310g	290g	310g	510g

※ The specification for this product may change without prior notice for product improvement.

DECLARATION OF CONFORMITY

Application of Council Directive(s)	2004 / 108 / EC
Manufacturer's Name	SAMSUNG TECHWIN CO., LTD
Manufacturer's Address	SAMSUNG TECHWIN CO., LTD 42, SUNGJU-DONG CHANGWON-CITY, KYUNGNAM, KOREA, 641-716
European Representative Name	
European Representative Address	
Equipment Type/Environment	CCTV Camera
Model Name	SCB-2000P, SCB-2000PH, SCB-2000PD
Beginning Serial NO.	C59W6V3Z200001X
Year of Manufacture	2010.02.01
Conformance to	EN 55022 : 2006 EN 50130-4 : 2003

We, the undersigned, hereby declare that the equipment specified above conforms to the above Directive(s).

Manufacturer	SAMSUNG TECHWIN CO., LTD	Legal Representative in Europe
Signature	<i>Bongju Gu</i>	Signature
Full Name	BONJENG GU	Full Name
Position	QUALITY CONTROL MANAGER	Position
Place	CHANGWON, KOREA	Place
Date	2010.02.01	Date

SAMSUNG TECHWIN

The Samsung logo, consisting of the word "SAMSUNG" in white, uppercase letters inside a black, horizontally-oriented oval.

SALES NETWORK

• **SAMSUNG TECHWIN CO., LTD.**

145-3, Sangdaewon 1-dong, Jungwon-gu, Seongnam-si Gyeonggi-do, Korea, 462-703
TEL : +82-31-740-8151-8 FAX : +82-31-740-8145

• **SAMSUNG TECHWIN AMERICA Inc.**

1480 Charles Willard St, Carson, CA 90746, UNITED STATES
Tol Free : +1-877-213-1222 FAX : +1-310-632-2195
www.samsungcctvusa.com

• **SAMSUNG TECHWIN EUROPE LTD.**

Samsung House, 1000 Hillswood Drive, Hillswood Business
Park Chertsey, Surrey, UNITED KINGDOM KT16 0PS
TEL : +44-1932-45-5300 FAX : +44-1932-45-5325

www.samsungtechwin.com
www.samsungsecurity.com

P/No. : Z6806-1135-01A
VAN 10. 02